


ASSEMBLY INSTRUCTION FOR

GARRISON MEDIA CONSOLE

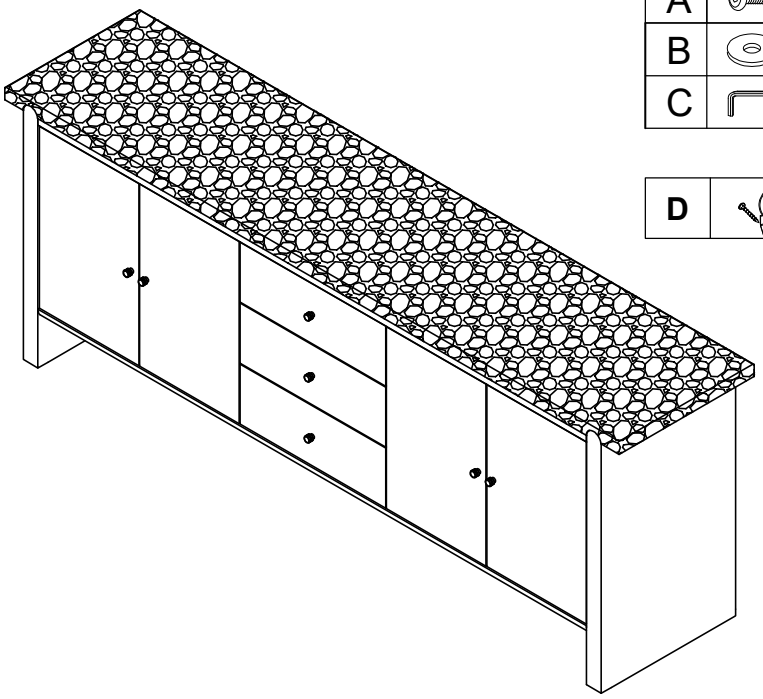

Hardware List				
A		Bolt	M6x30mm	3
B		Flat Washer	6x19mm	3
C		Allen Key	4mm	1

D		Tipping Hardware	1 set

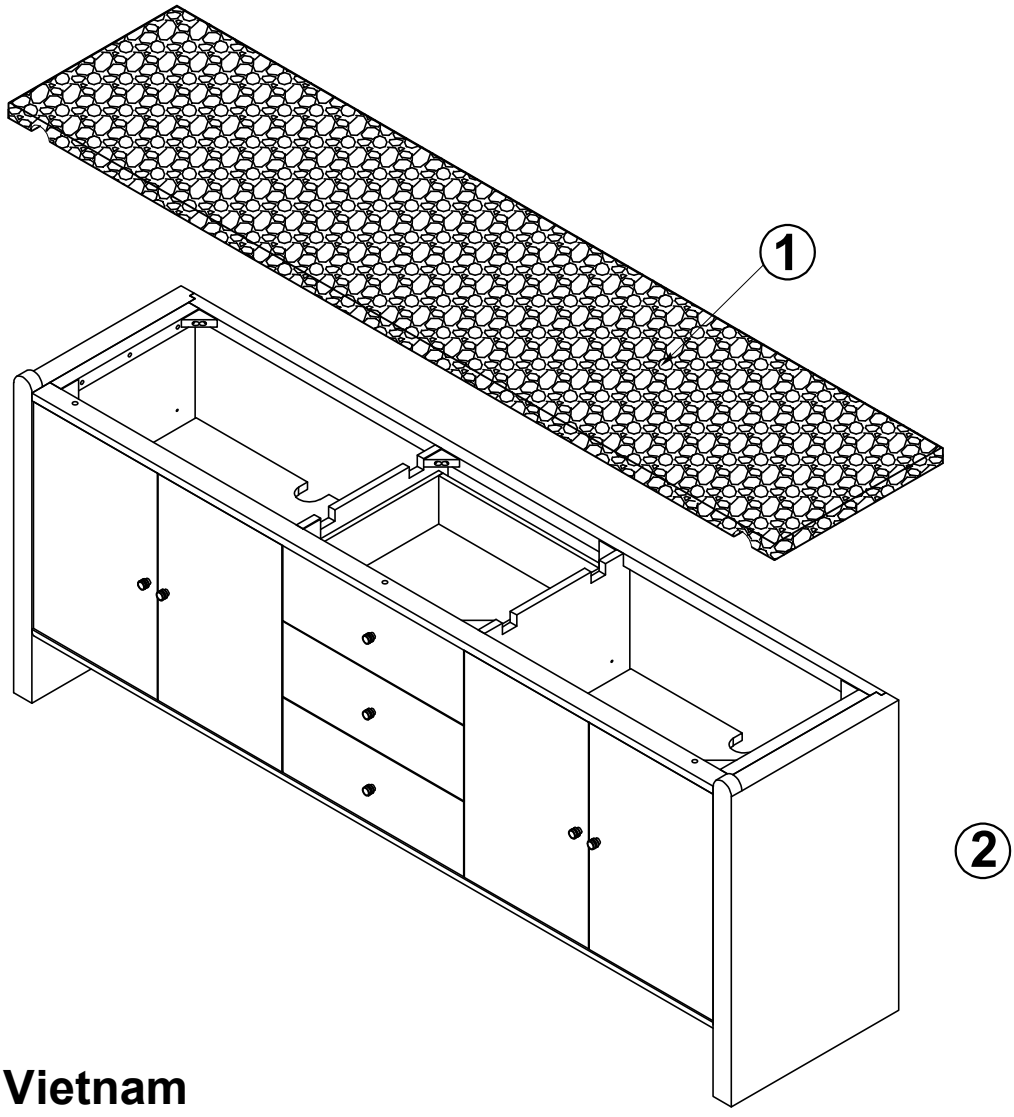

Made in Vietnam

WARNING – HEAVY STONE TOP

CRUSH / TIP-OVER / BREAKAGE HAZARD

The stone top is very heavy. If it slips, tips, falls, or is dropped during moving or installation, it can cause serious injury or product damage. Do not attempt to lift or install the stone top using people alone.

• Professional installation is required.
The stone top must be moved and installed by experienced personnel using suitable lifting equipment.

• Use lifting equipment suitable for the stone top.
Before lifting, make sure the equipment is rated for the actual weight of the stone top and is suitable for its size and surface. Ordinary suction handles must not be used as the only means of lifting.

• Keep the stone top properly supported and secured.
During transport, keep the stone top upright in a suitable support frame and secure it to prevent slipping or tipping. Do not carry the stone top flat while supporting it only at the ends. Do not leave it standing on an edge without proper restraint.

• Keep a safe distance during lifting and installation.
Keep children and bystanders away from the work area. Never stand underneath the stone top or in an area where it could fall or tip. Keep hands and feet away from areas where they could be trapped between the stone top and the base while lowering or installing the top. Wear suitable protective gloves and safety footwear.


STOP IF SAFE INSTALLATION CANNOT BE CONFIRMED

If suitable lifting equipment is not available, the work area is too limited, or a safe lifting and installation method has not been confirmed, do not proceed. Contact the supplier or a professional stone installer for assistance.

Step 1

Adjusting floor levelers and door hinges

Your furniture has been expertly crafted and re-adjusted by professionals. However, slight shifts can occur during transportation. If you notice that the doors are not perfectly aligned or the furniture wobbles, a quick adjustment can help ensure stability and a seamless look.

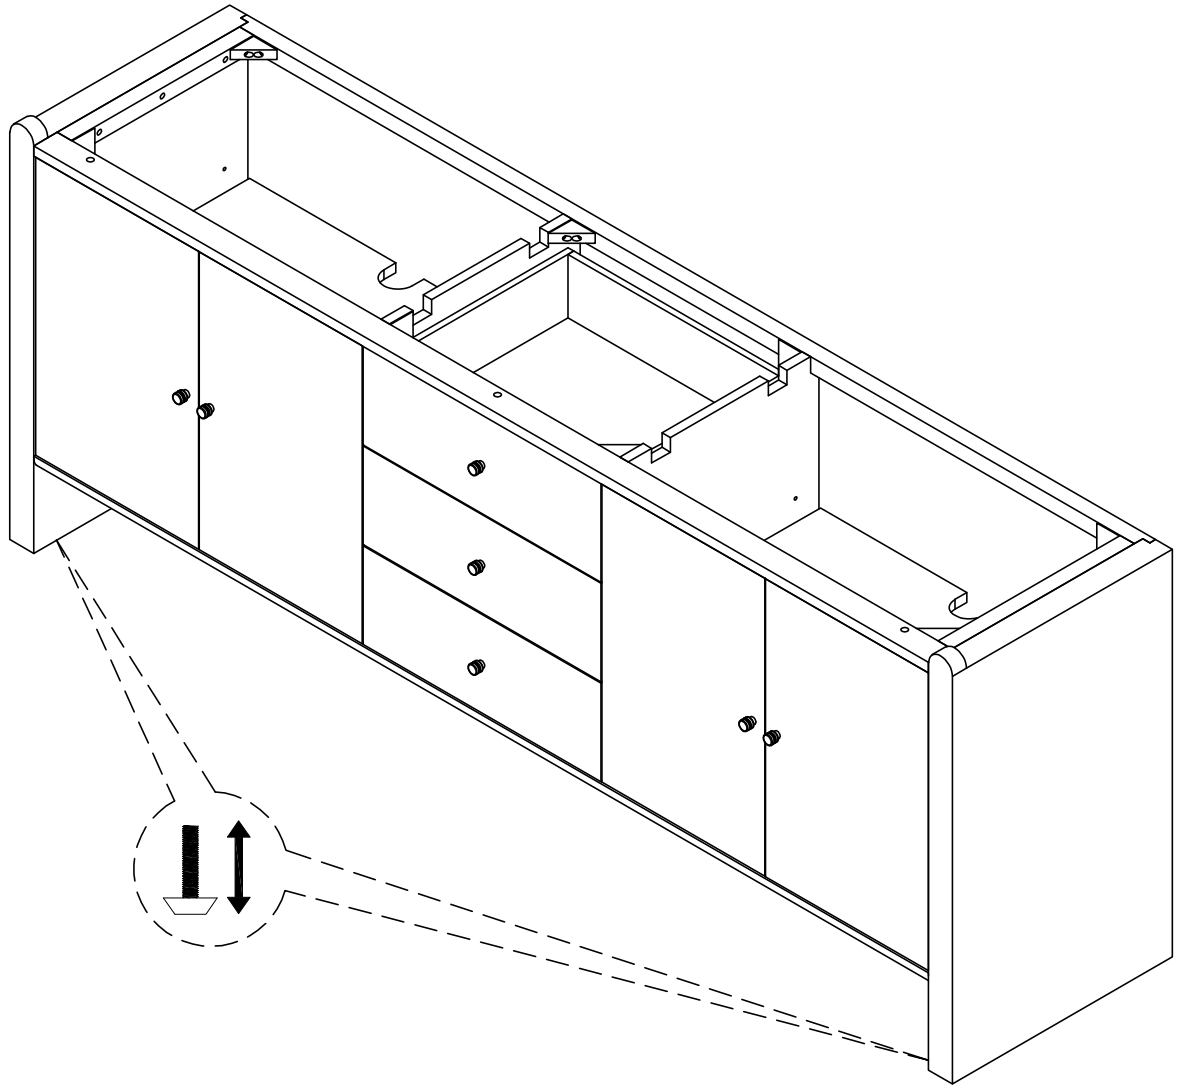

Adjusting Floor Levelers

Check for stability - Place the furniture in its final position on a level surface. If it wobbles or doesn't sit evenly, the floor levelers need adjusting.

Locate the levelers - These are small adjustable feet found at the bottom corners of your furniture.

Adjust as needed - Using your hand or a wrench, turn the levelers clockwise to raise or counterclockwise to lower the furniture. Make small adjustments and check stability after each turn.

If you need further adjustments, repeat the process in small increments.

Made in Vietnam

Step 2

Keep the stone top fully supported and keep hands and feet clear of the closing gap.

Positioning view only. Lifting equipment is omitted for clarity. This illustration does not show or approve lifting points.

A. Rotate under control.


Use suitable lifting/tilting equipment to bring the stone top into its installation position. Do not pivot, rotate, or rest the stone edge directly on the desk base.

B. Align, then lower slowly.

Align the stone top and mounting holes before contact. Lower the top slowly and evenly onto the intended support rails. Do not drop, twist, drag, or force the stone top into position.

C. Confirm stable support.


Release the lifting equipment only after the stone top is fully seated, evenly supported, and stable. Do not use the bolts to pull the stone top down onto uneven supports. Do not overtighten the bolts; tighten them only enough to securely hold the stone top in position.

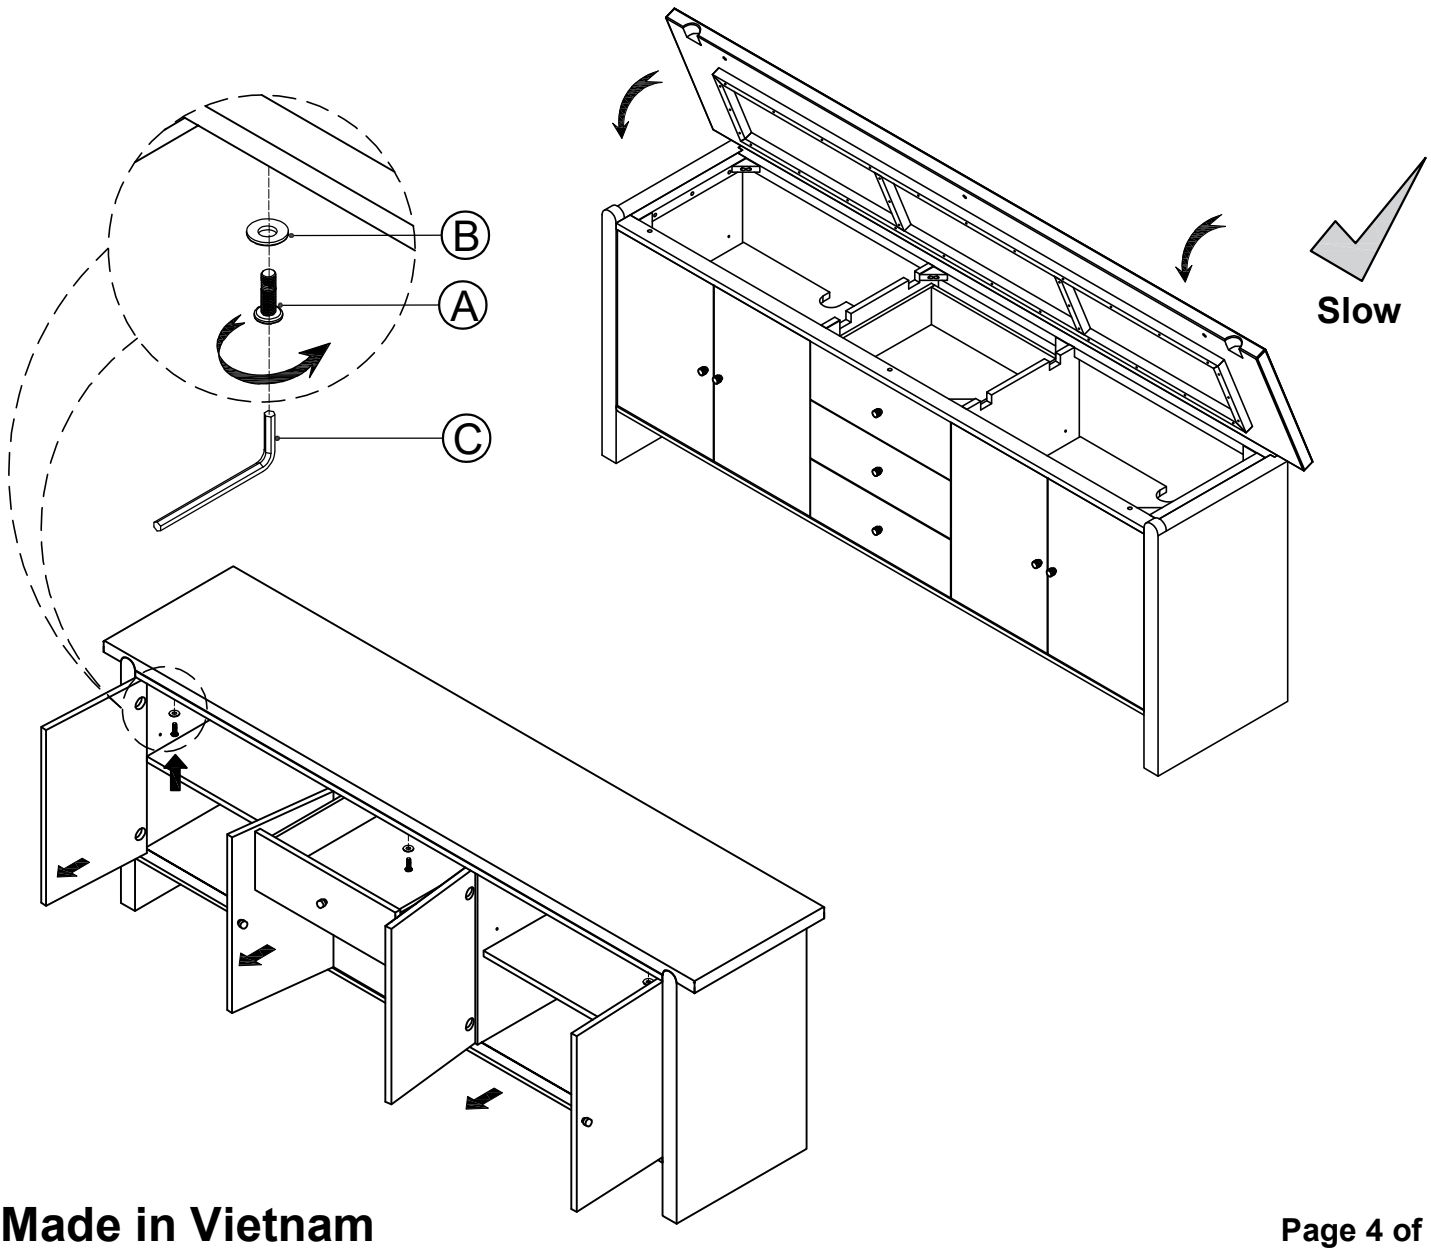

Step 3

REMARK:There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

Tipping Hardware

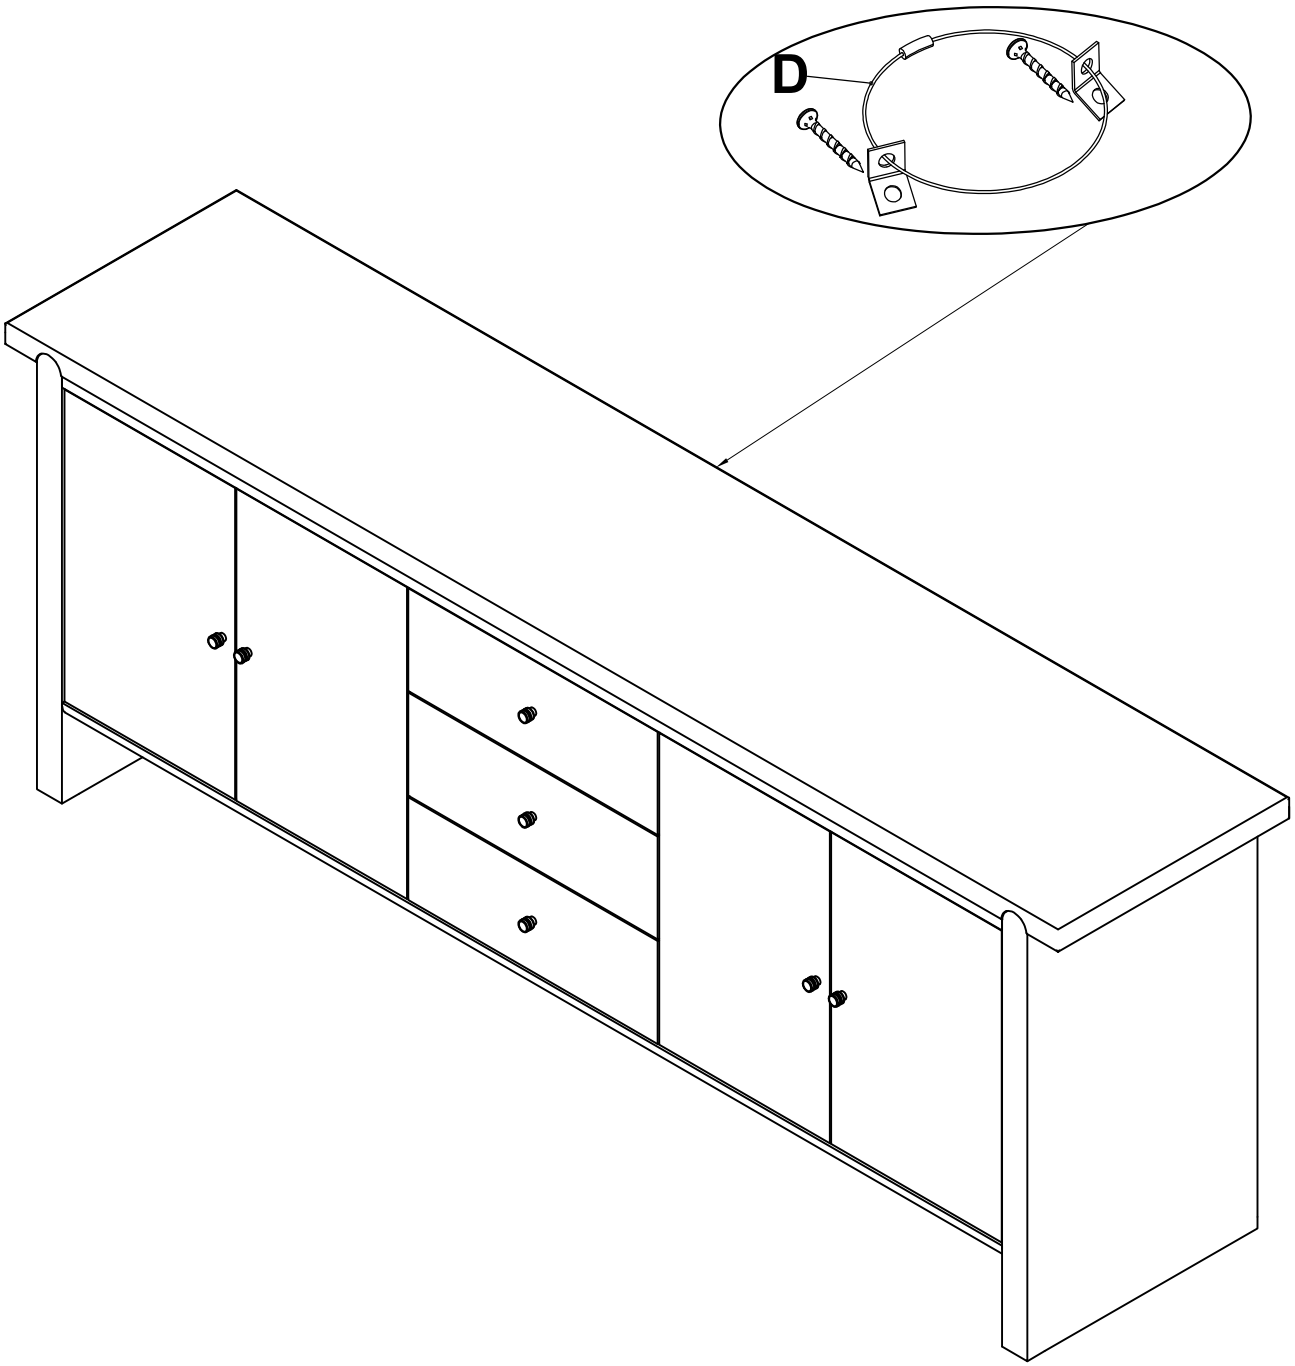

Made in Vietnam


Step 4

Adjust the Hinges (If Necessary)

Once the furniture is level, check the doors. If they appear misaligned or don't close properly: Make sure that the furniture is level left to right and front to back before attempting to adjust the hinges

Identify the hinges - The hinges have adjustment screws that control movement in different directions.

1. Back and Forth Adjustment: To move the cabinet door closer to or farther from the cabinet frame
2. Left and Right Adjustment: To shift the cabinet door sideways for alignment.

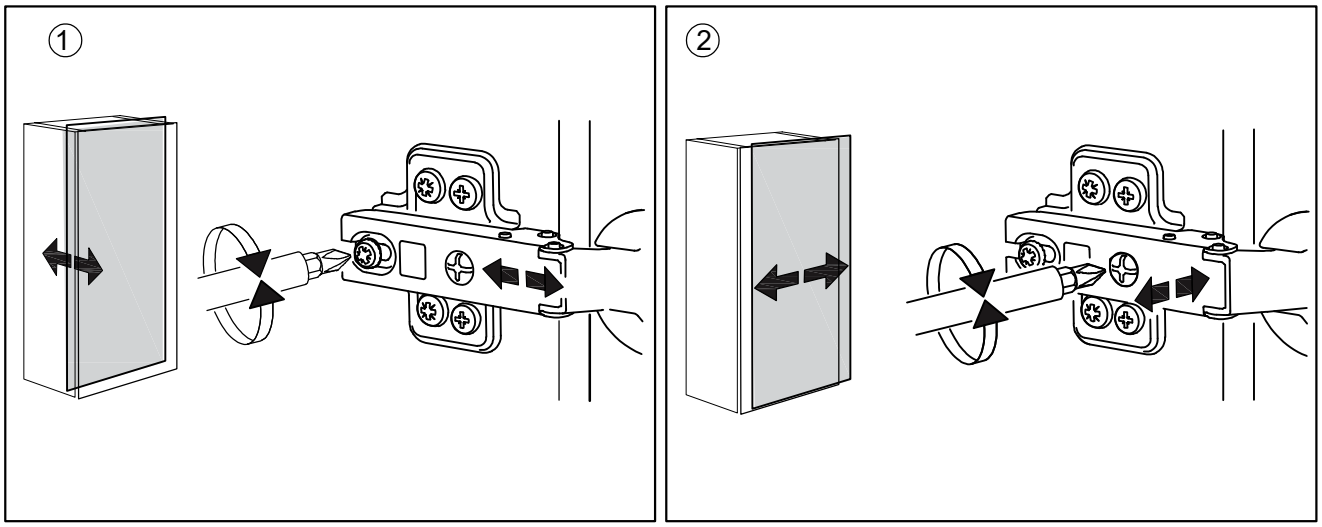

TIPS FOR ADJUSTMENT:

These “adjustments” are not preset and will need to be checked to meet the desired look

- We recommend the use of a #2 Phillips Screwdriver.
- Adjust in small steps and check your progress frequently.
- Use a measuring tape to ensure the gaps between the top and bottom of the door are even.
- Avoid forcing the door closed if it does not align properly, as this may damage the door.
- If the alignment is still off, make further adjustments as needed.

By following these steps, you can achieve a balanced door alignment.

If you need further adjustments, repeat the process in small increments.

Important notes

While adjusting the hinges, firmly hold the door in place to prevent it from falling and getting damaged.

Repeatedly tightening and loosening the hinge screws can cause the screw holes to widen. To avoid this, minimize adjustments and avoid overtightening.

Step 5

! WARNING
For use with televisions weighing 175 lbs / 80 (Kg) or less.
Attention : this unit is not rated for use with a CRT type television.

! WARNING
Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

! WARNING
Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.


All other support shelves should not be loaded more than 25 lbs

DO NOT EXCEED RECOMMENDED LOAD. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.

Please use caution when using electrical equipment. Improper use could result in the risk of fire, electric shock or injury to persons associated with the use of this unit during operation, user-maintenance,loading, storage, and, as applicable, electrical issues including grounding or double-insulation.

Electronic components generate heat that may cause damage to the equipment. Please refer to the manufacturer's owner's manual for space and ventilation requirements.

Do not allow children under 16 years to move cart.

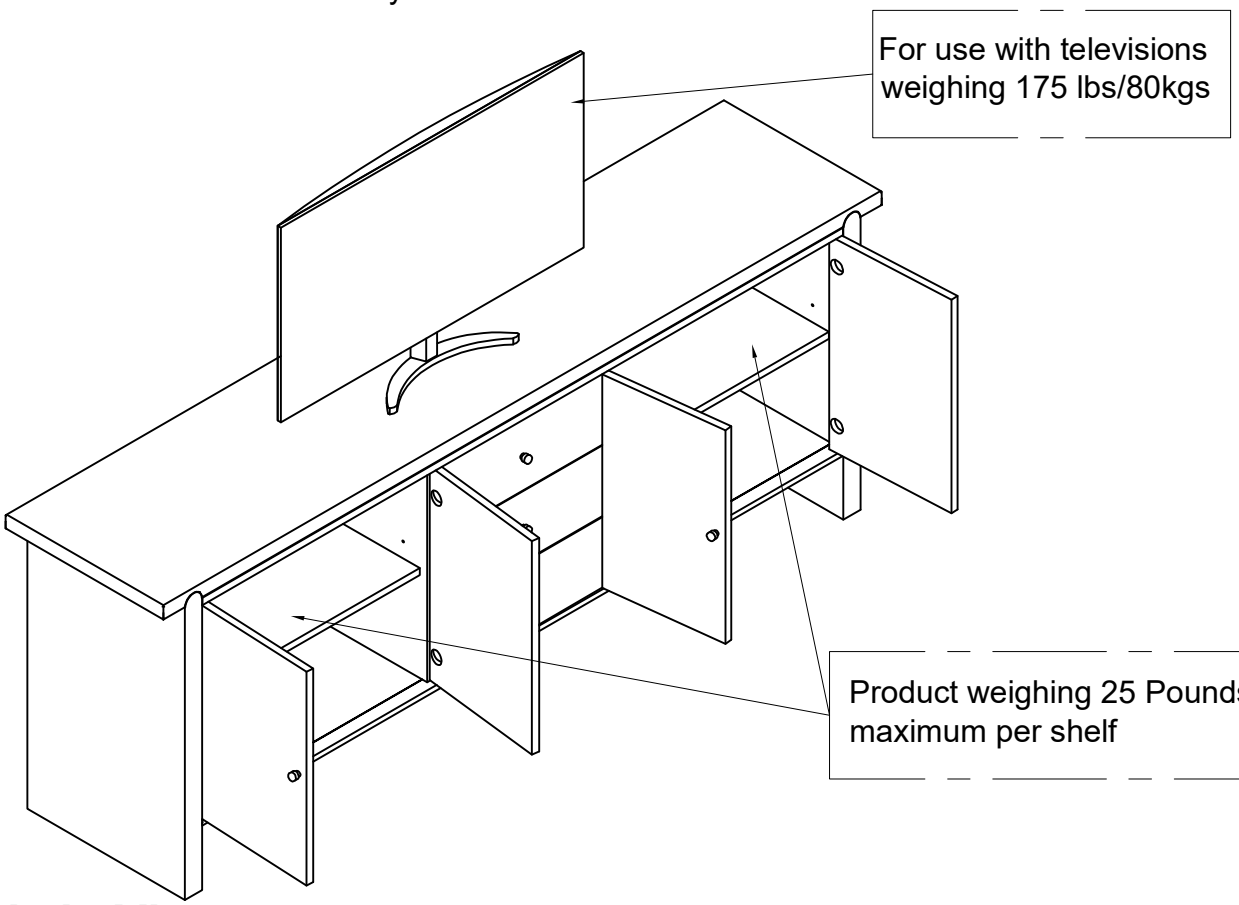

Made in Vietnam