



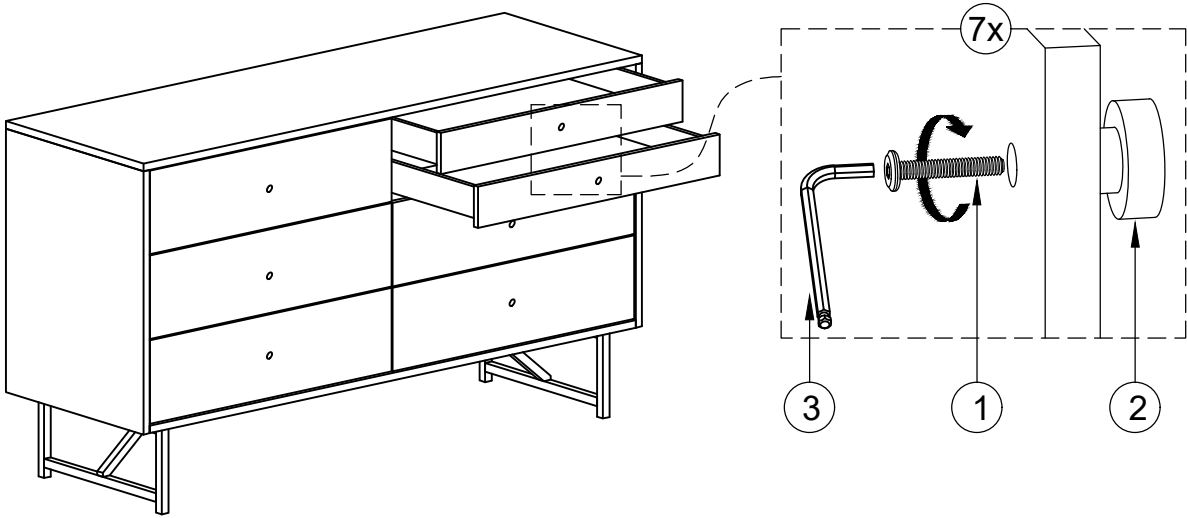


**ASSEMBLY INSTRUCTION FOR**  
**MODEL: VAN 7D DRESSER**

★ **REMARK:** There is a tip restraint kit provided on the back of this product please read the direction thoroughly and install immediately

1		Bolts M6x35	7
2		Handles	7
3		Allen Key K4	1
4		Tipping Hardware	2

**Step 1**



**Step 2**

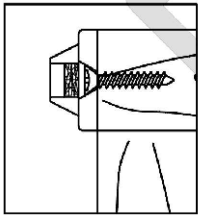


Figure 1

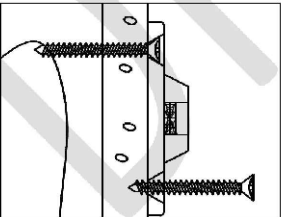


Figure 2


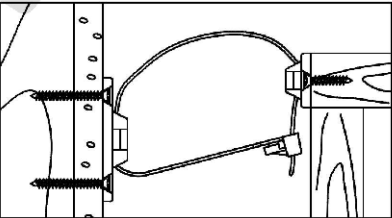


Figure 3

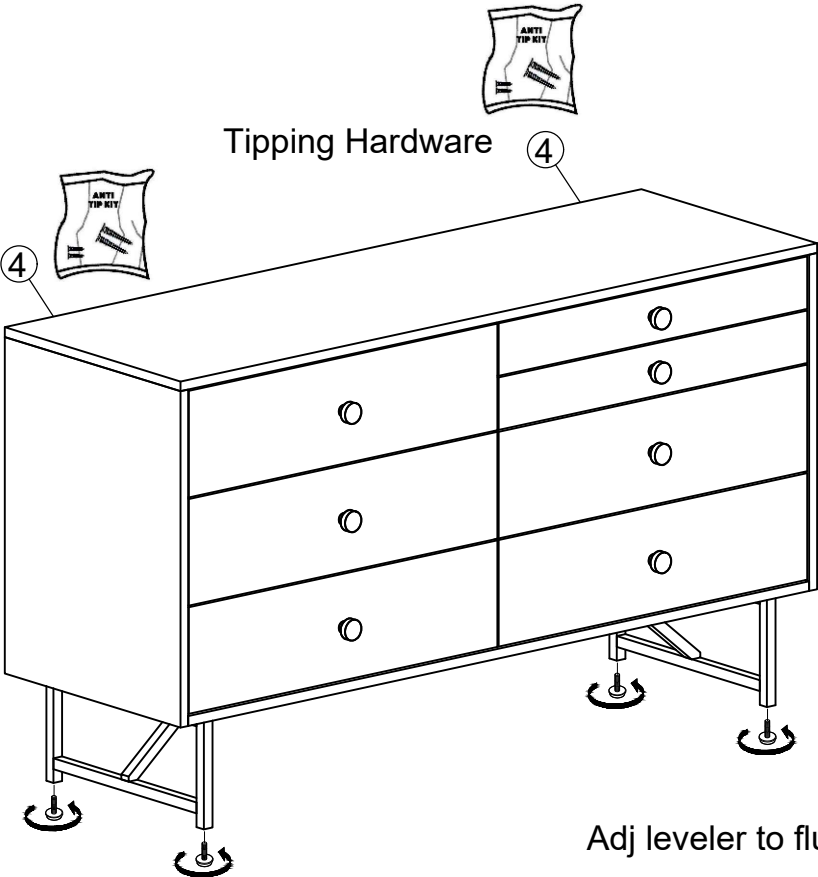

Adj leveler to flush