



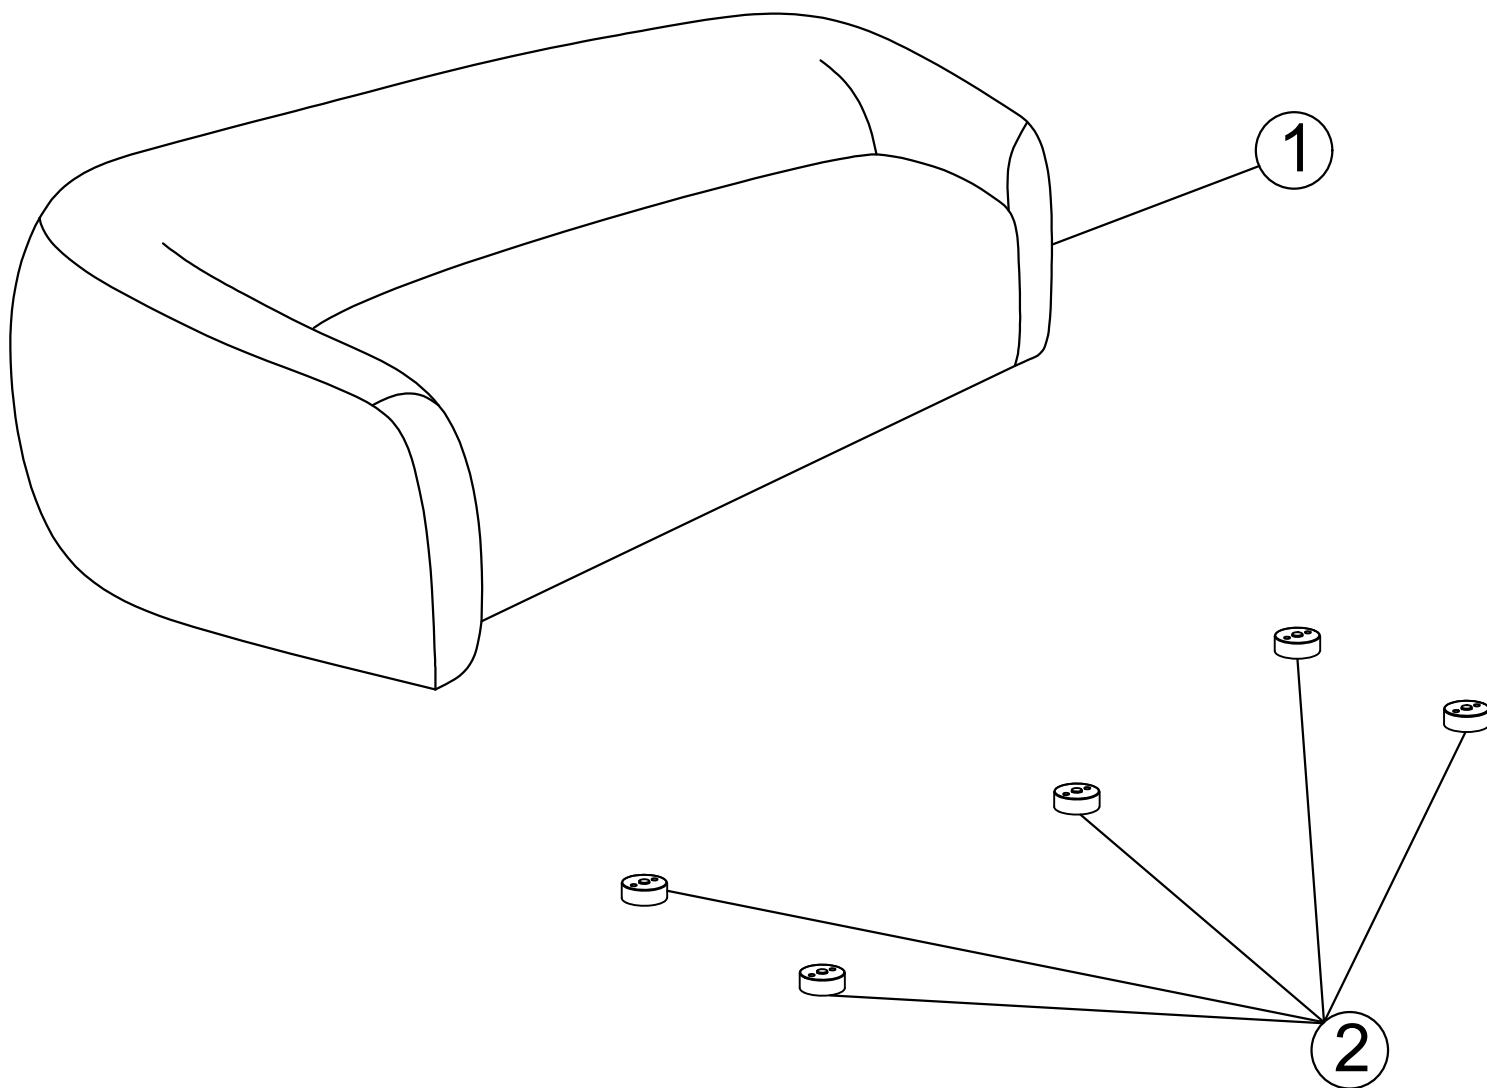


ASSEMBLY INSTRUCTION FOR


CHANNING SOFA-100"

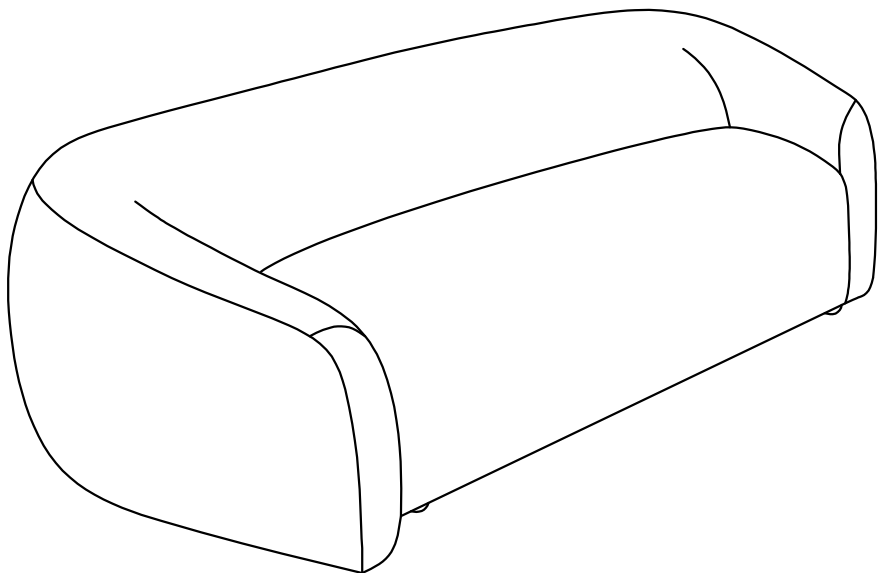


| Hardware List | | | | |
|---------------|--|-----------|-----------|----|
| A |  | Bolt | M6x60mm | 10 |
| B |  | Allen Key | 4mm | 1 |
| C |  | Leveler | M6 x 21mm | 1 |



Step 1

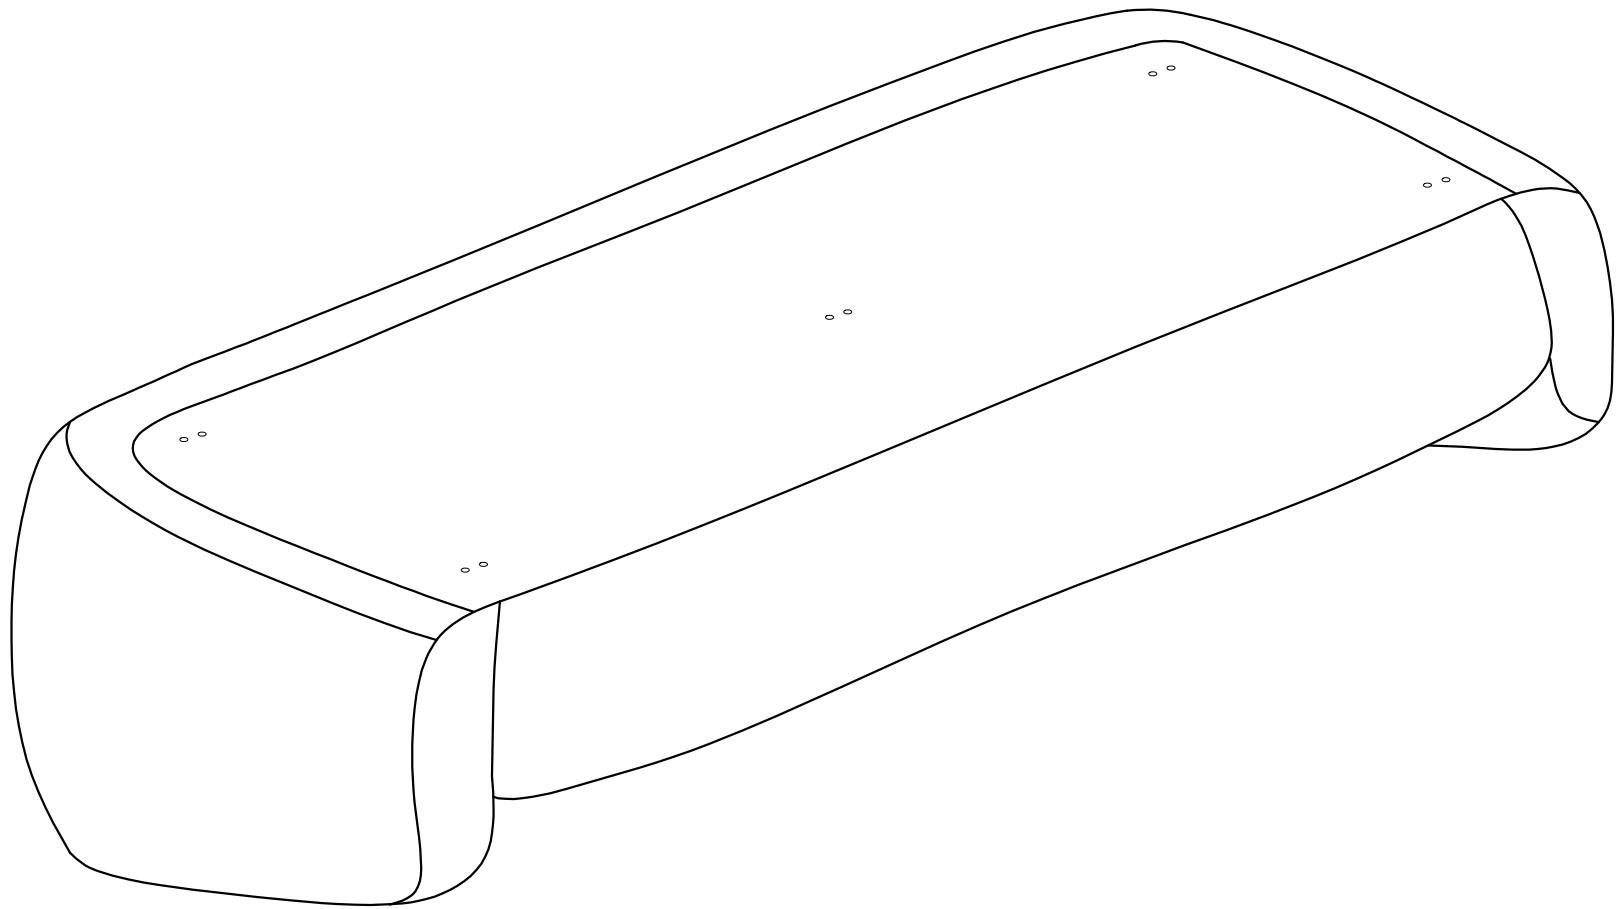

Step 2

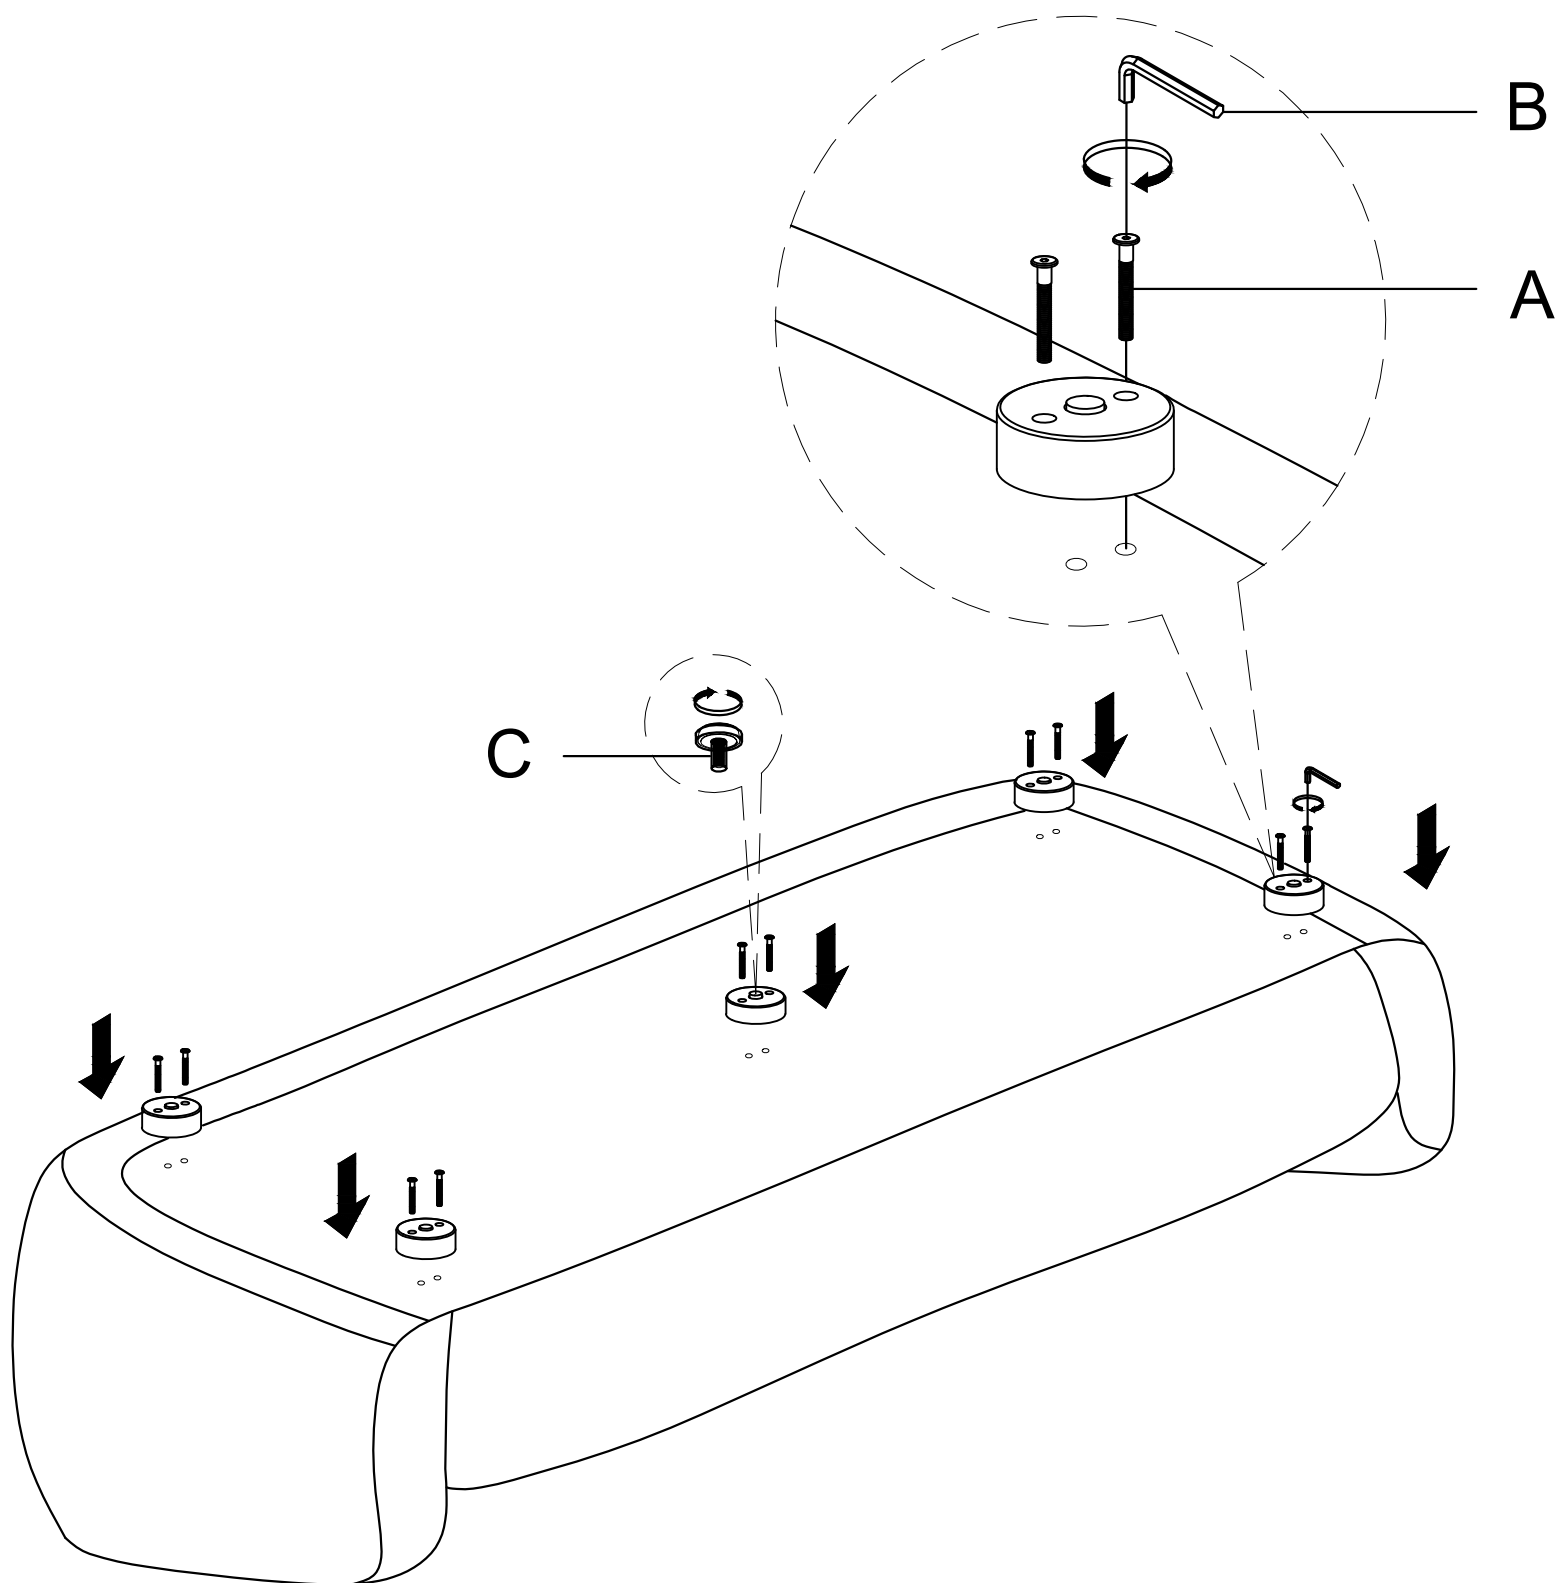

Step 3

