





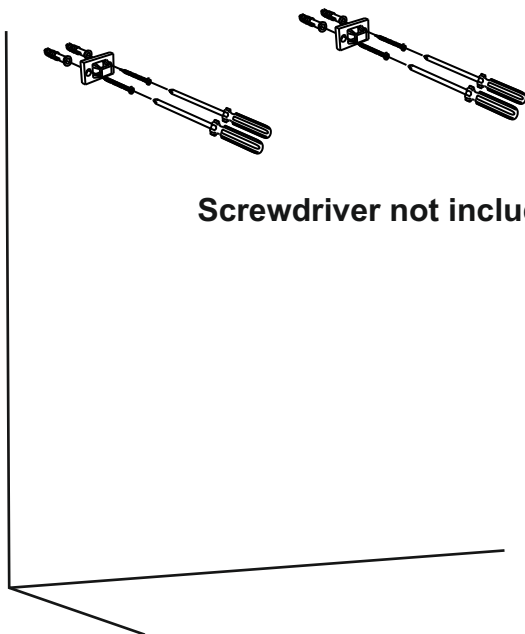
1

TROYES FLOOR MIRROR
ANTI TIP KIT INSTRUCTIONS

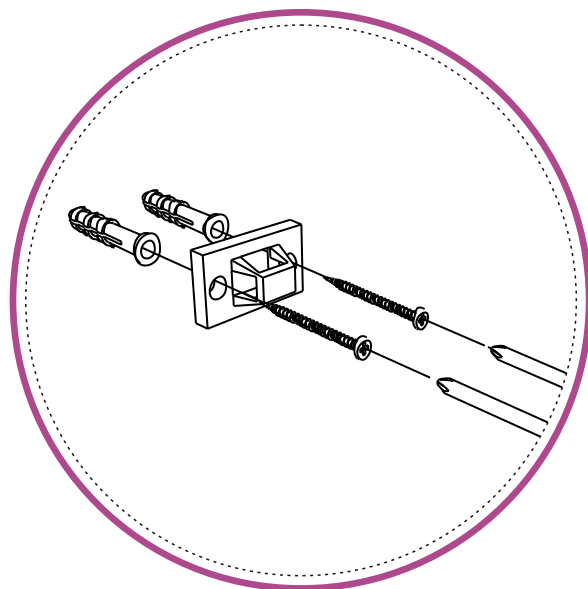
	X02 WALL CLIP		X05 SCREW
	X02 ZIP TIE		X05 PLASTIC WALL ANCHORS

2

Wall



Screwdriver not included



3

Wall

