


# SHUFFLEBOARD TABLE

---

M4001-S

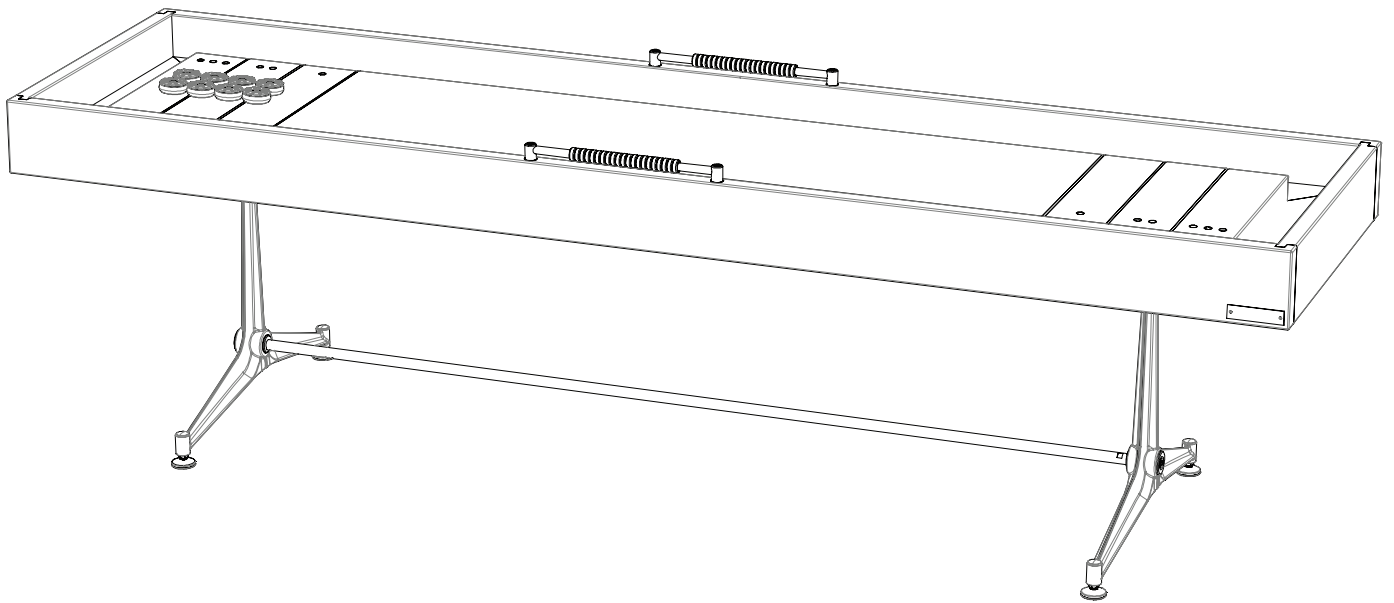

DISTRICT EIGHT

---


Metal and wood components can be cleaned using a clean cloth and if you feel it is needed, use Pledge or any other wax based furniture polish to restore your furniture's lustre.

## SUPPLIED COMPONENTS

---




\_\_\_\_\_

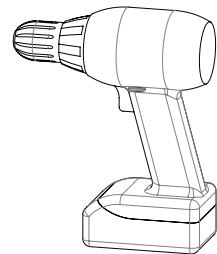



## DISTRICT EIGHT


# ASSEMBLY STEPS

- 1


  
10 mm


 x 2


 x 2

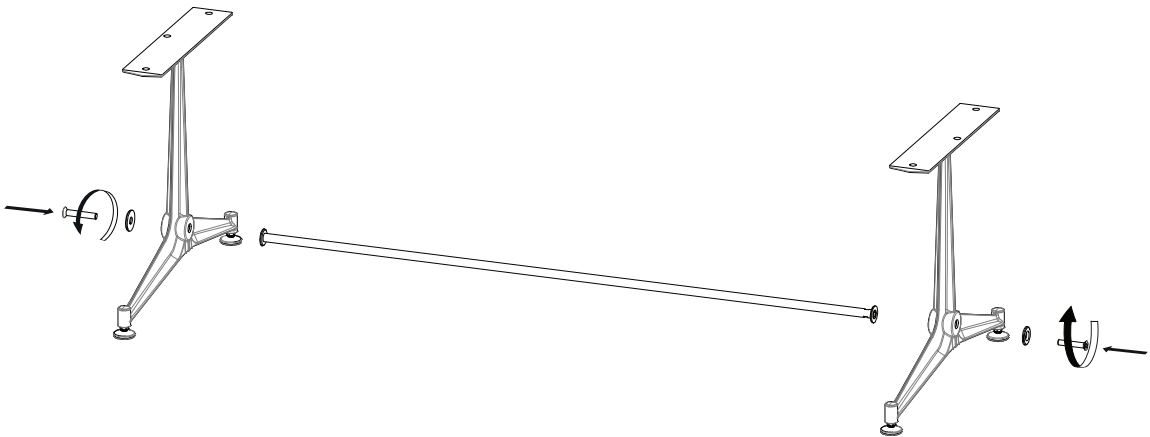


- 2



  
6 mm

 x 6



 x 6

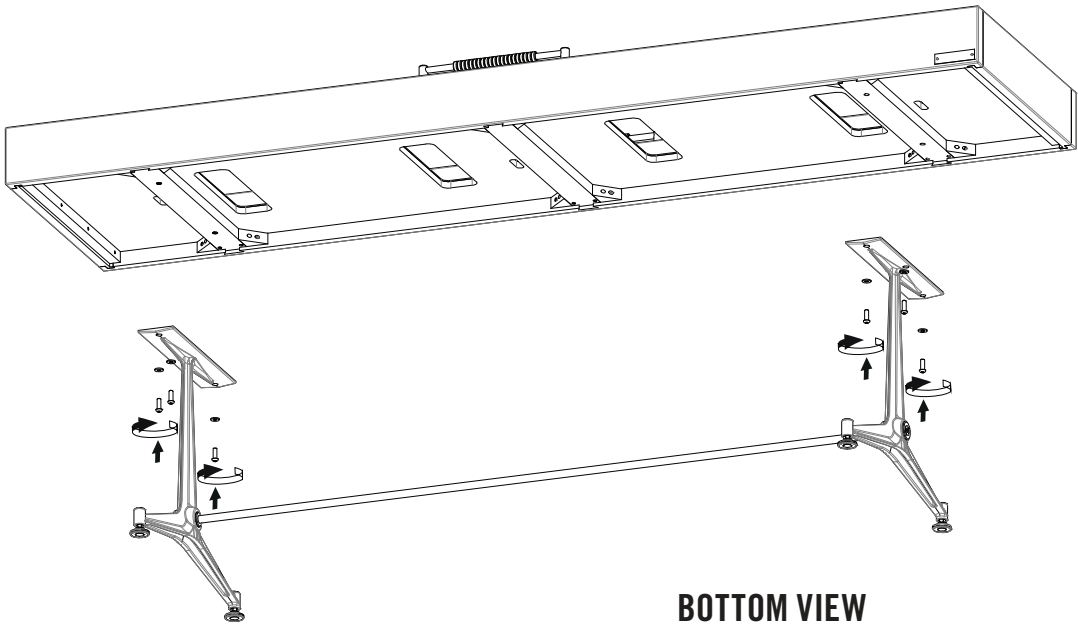

# ASSEMBLY STEPS

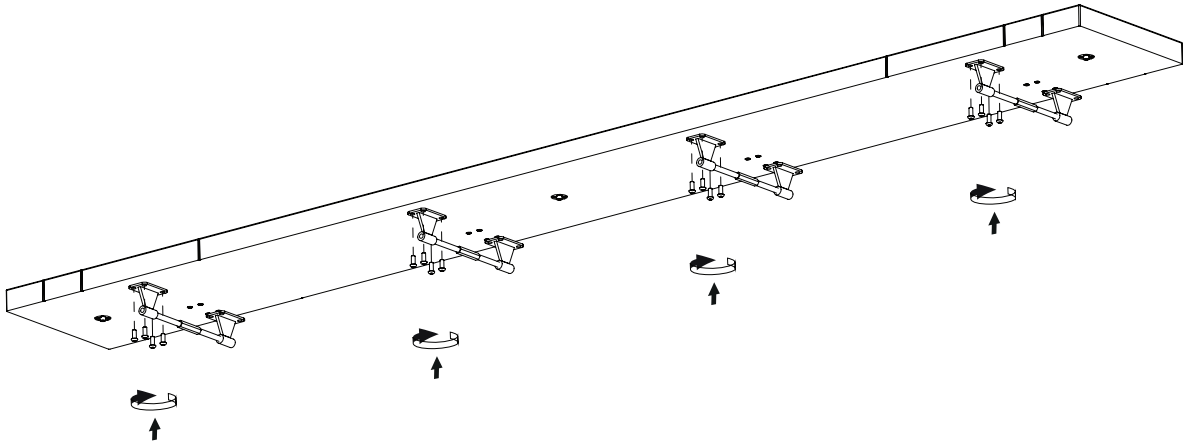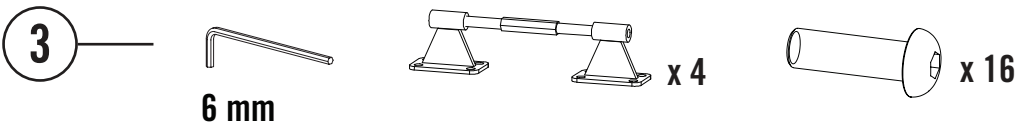

BOTTOM VIEW

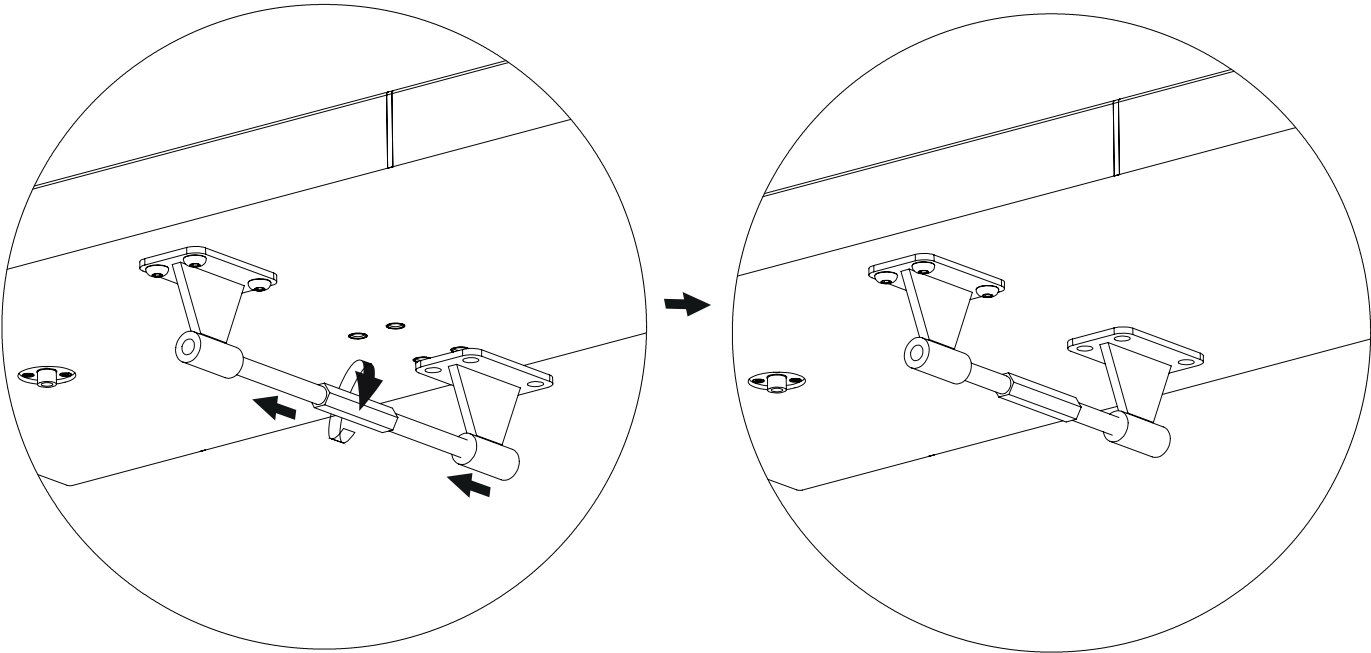


ASSEMBLY STEPS

- 5



  
6 mm
- 


x 16

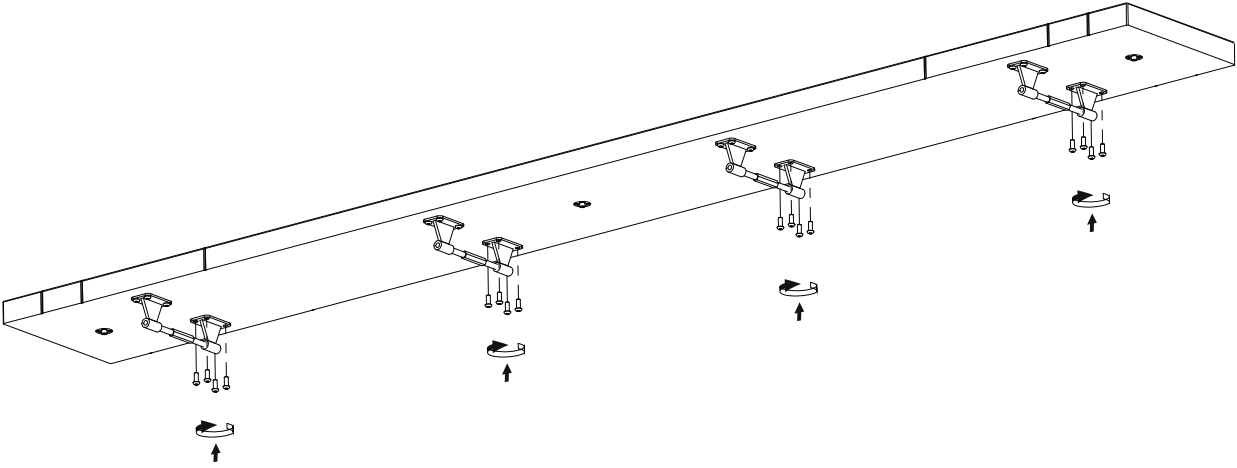


BOTTOM VIEW

- 6

  
6 mm
- 

x 3
- 


x 3

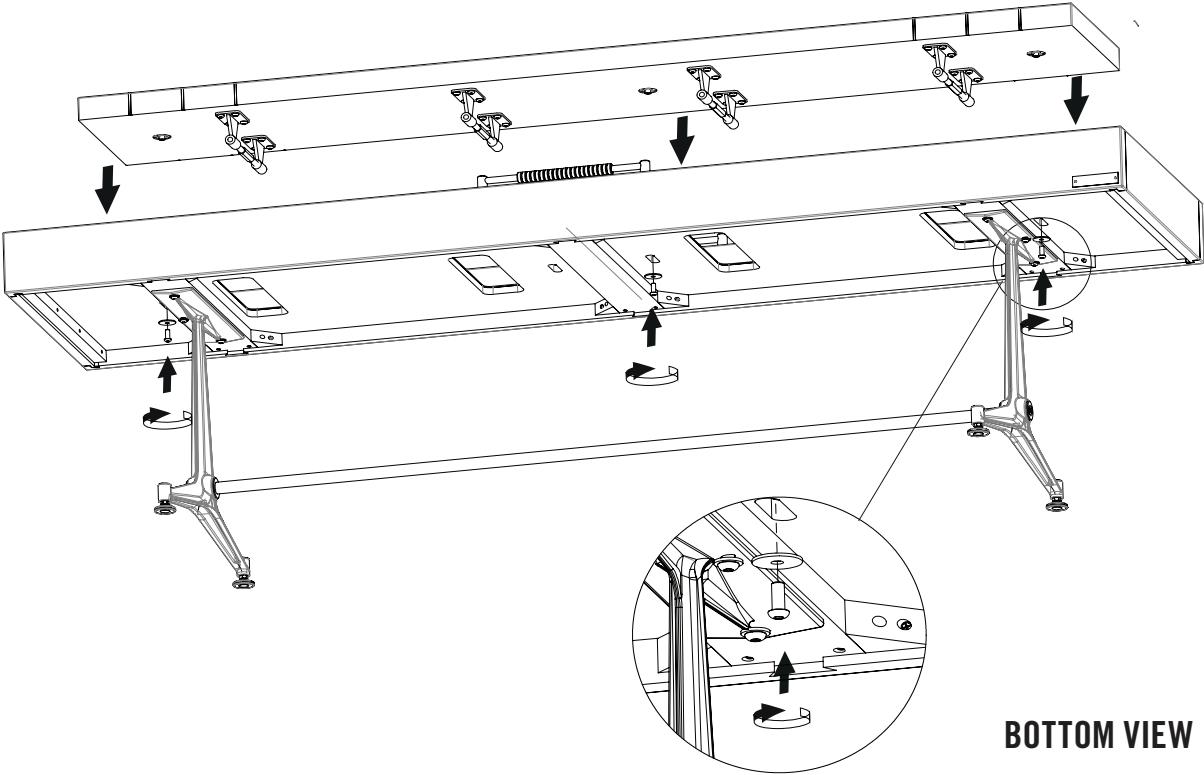


BOTTOM VIEW

# ASSEMBLY STEPS

5

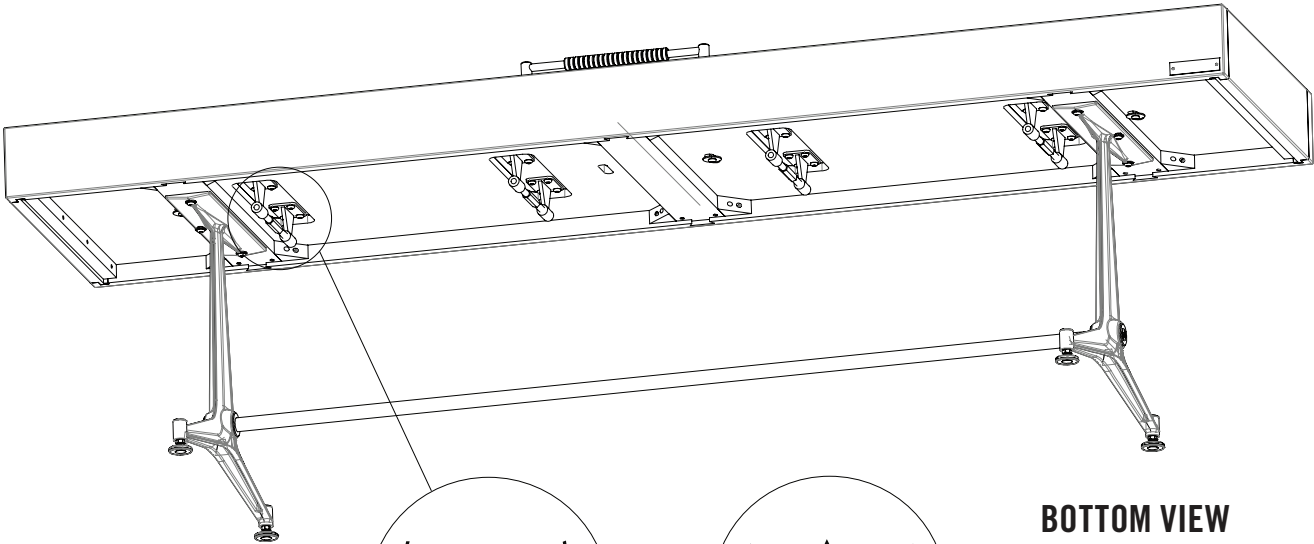


**BOTTOM VIEW**

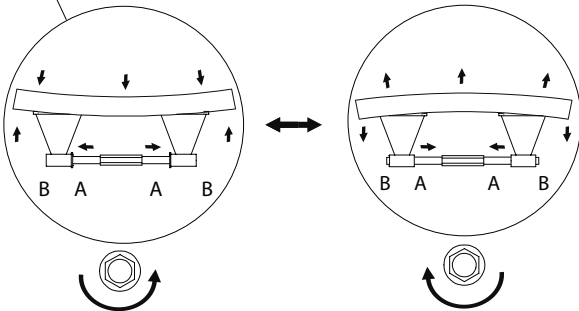


ALLOW TIME (DAYS) FOR THE BOARD TO ADJUST  
REPEAT THE PROCESS UNTIL YOU HAVE A CONCAVE (OR CONVEX) PLAY SURFACE

6



x 8

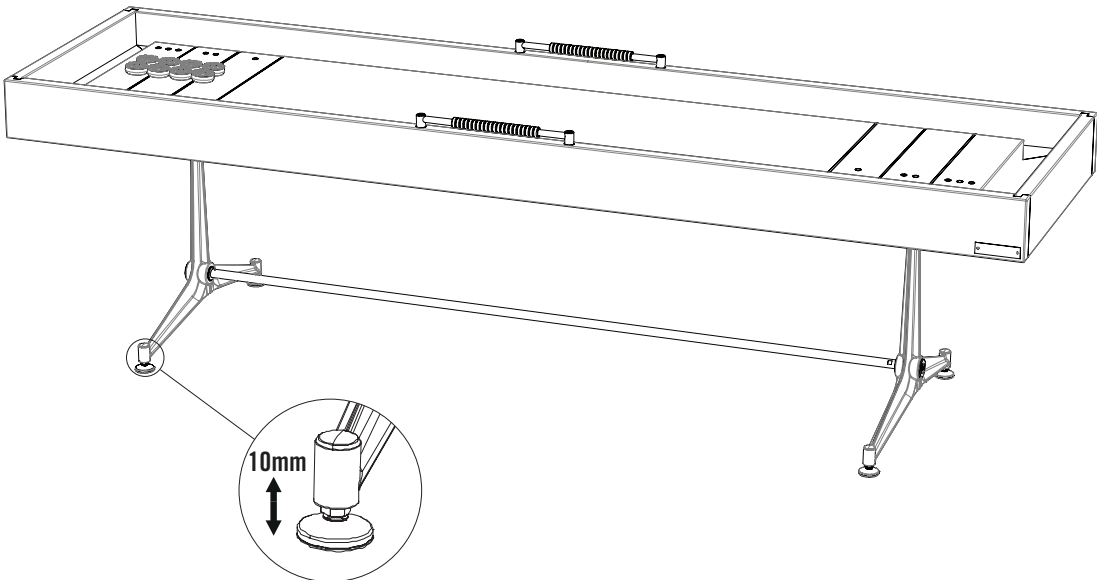

**DISTRICT EIGHT**