







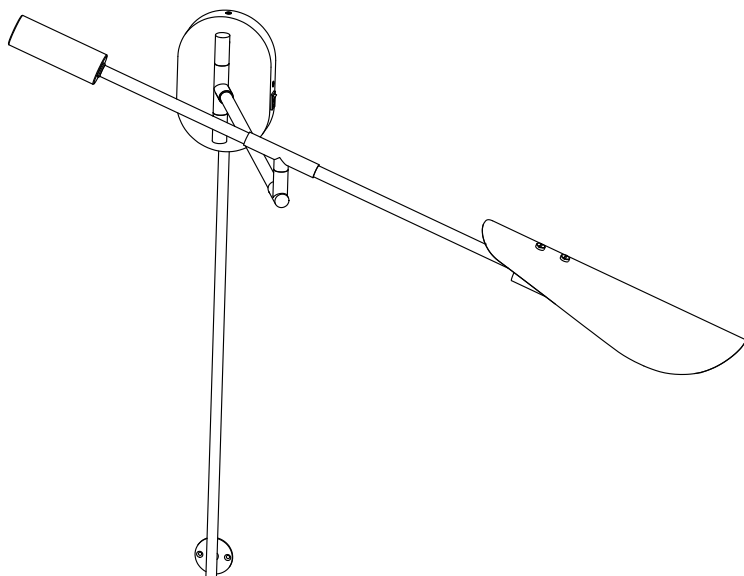


ASSEMBLY & INSTALLATION INSTRUCTION

MODEL: ASTRID SCONCE



ACCESSORIES LIST			
No.	Name	Image	Qty
1	LAMP BODY		1
2	PLASTIC ANCHOR M4x30		6
3	ANCHOR SCREW M4x30		6
4	BULB LED T10-4 E26 base		1
5	LAMP SHADE		1
6	WRENCH 14MM		1
7	HEX KEY 2MM		1

REQUIRED TOOL (NOT INCLUDED)

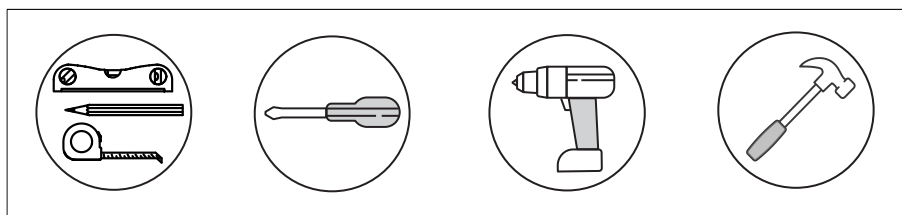

! Attention

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

⚠ WARNING

All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result. Do not connect electricity until your fixture is fully assembled. To reduce the risk of fire, electrical shock, or personal injury, always turn off fixture and allow it to cool prior to replacing the lightbulb. Do not touch or look directly at the bulb when fixture is illuminated. Keep flammable materials away from lit bulb.


THIS PRODUCT IS NOT A TOY AND HAS NO PLAY VALUE.

ASSEMBLY & INSTALLATION INSTRUCTION

MODEL: ASTRID SCONCE


1

Unscrew the METAL FINIALS on LAMP BODY(1) then mount LAMP SHADE(5) in to position then reinstall the METAL FINIALS to secure it.

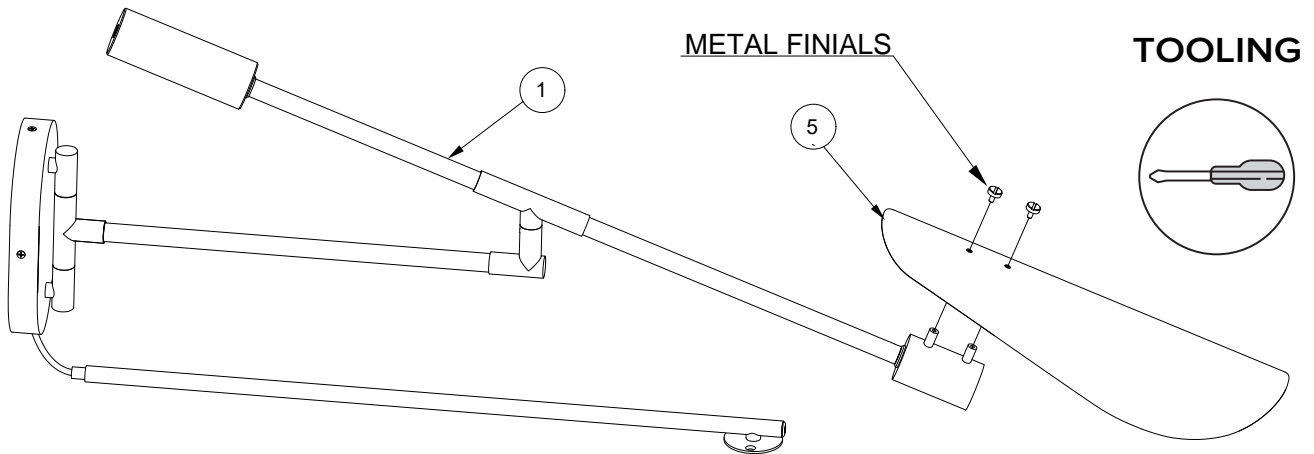

2


Unscrew the METAL SCREW on CANOPY of LAMP BODY(1) and take out MOUNTED PLATE.

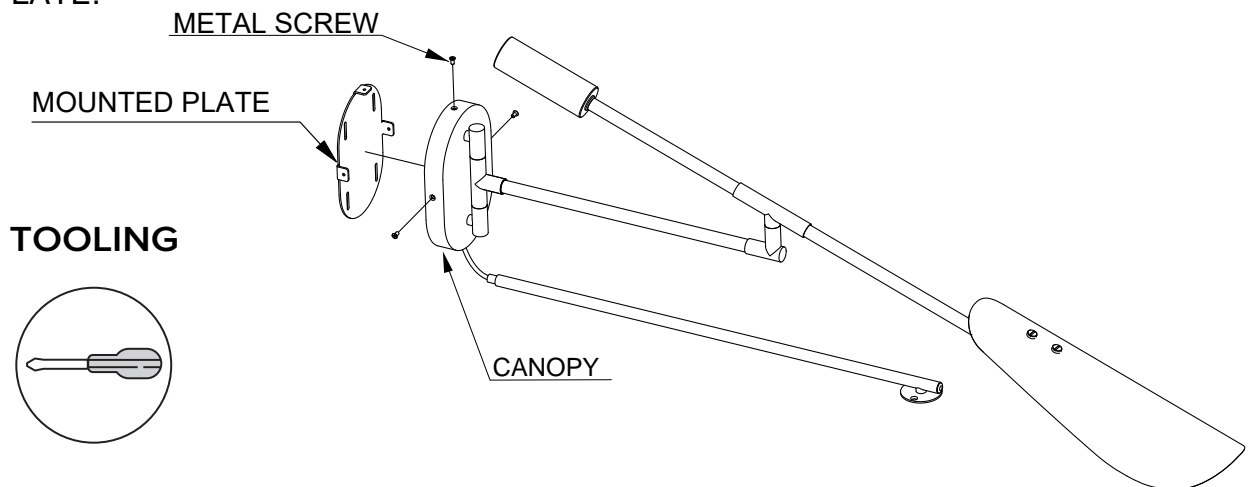


3

Use a MOUNTED PLATE from step 1 to mark the hole position on the wall for drilling Ø7x6 hole with 50mm deep.

TOOLING

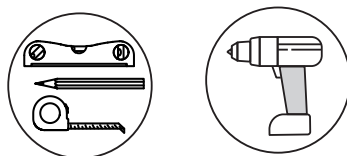

Caution: Do not drill holes for plastic anchors in the same location as the in-wall electrical channel.

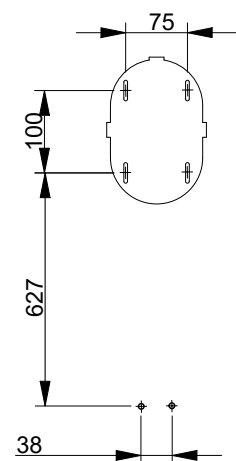



ASSEMBLY & INSTALLATION INSTRUCTION

MODEL: ASTRID SCONCE

4

Mount the PLASTIC ANCHOR(2) into the hole from last step. Then attach MOUNTED PLATE to the wall by using ANCHOR SCREW(3).

TOOLING

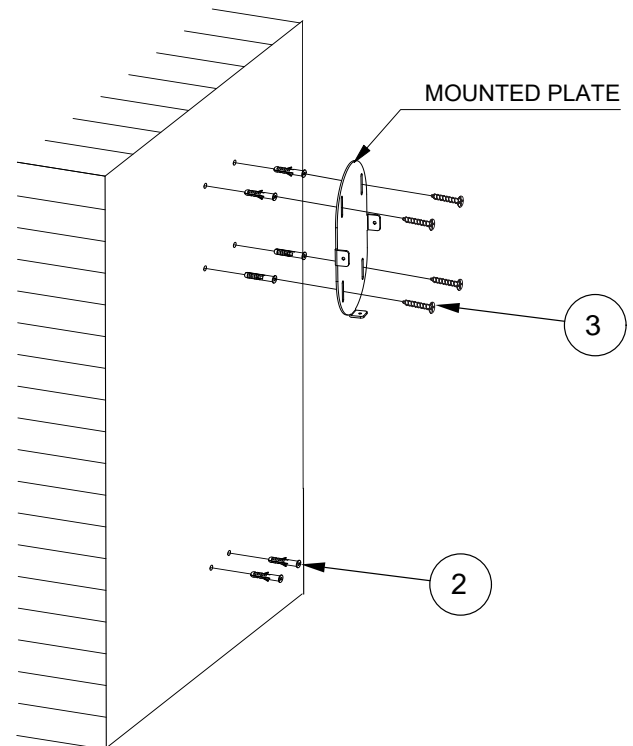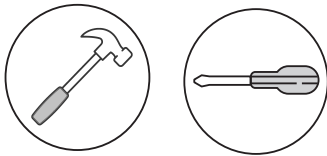

5


Assembly the LAMP BODY(1) together:

- Insert THREADED BAR on the head of BOTTOM BODY to CANOPY.

- Ensure the face of BOTTOM BODY and CANOPY have the same direction.

- Use WRENCH(6) to tightening the METAL NUT and METAL WASHER to BOTTOM BODY and secure it movement.

TOOLING

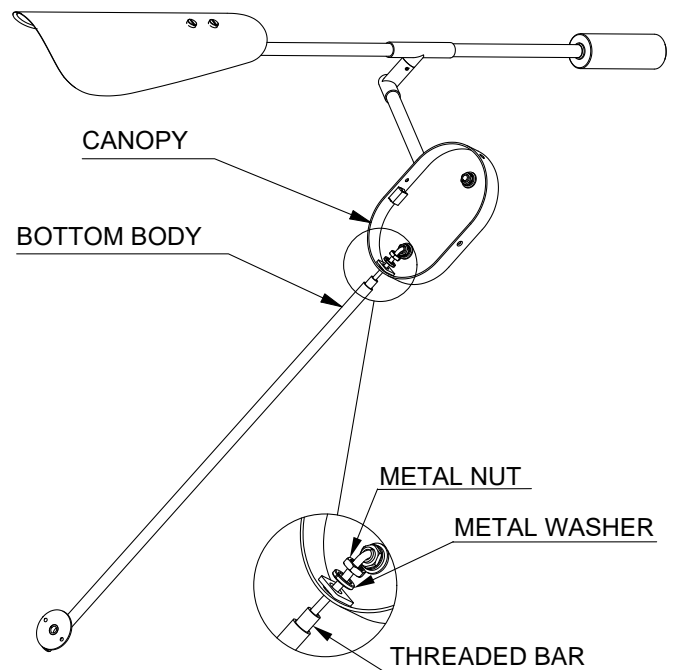



ASSEMBLY & INSTALLATION INSTRUCTION

MODEL: ASTRID SCONCE

6


Mount the LAMP BODY(1) to the wall. For the top, attach CANOPY to the MOUNTED PLATE on the wall and secure it with METAL SCREW from step 1. On the bottom, use ANCHOR SCREW(3) and secure the BOTTOM BODY to the hole on the wall.

TOOLING

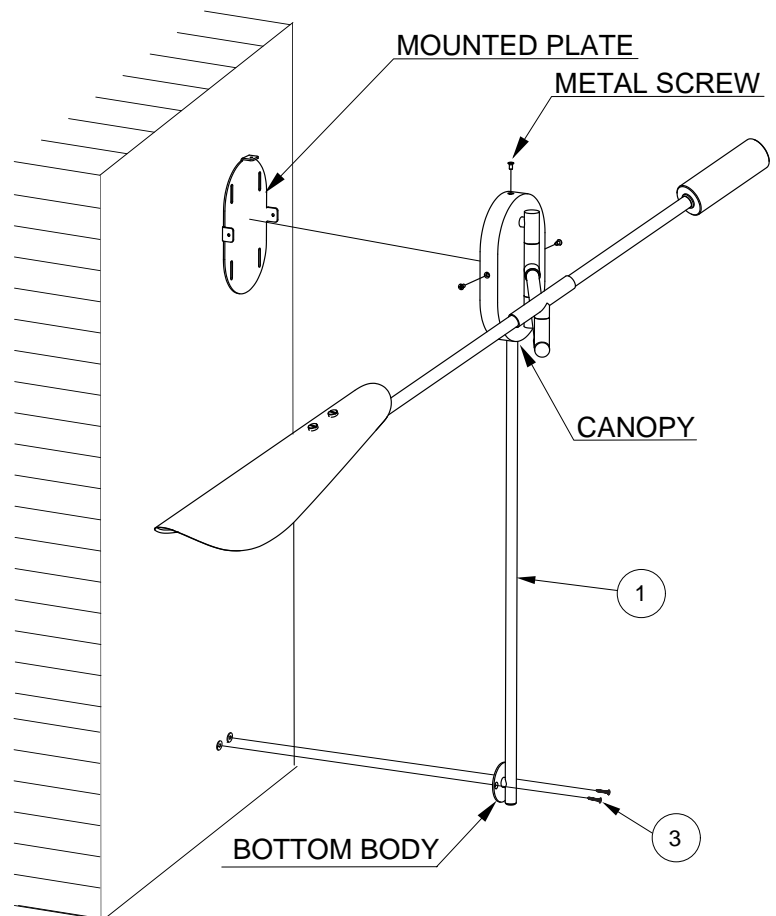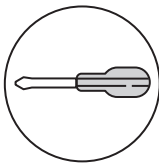

7

Insert BULB LED(4) to the socket on LAMP BODY(1) and twist to secure it in place

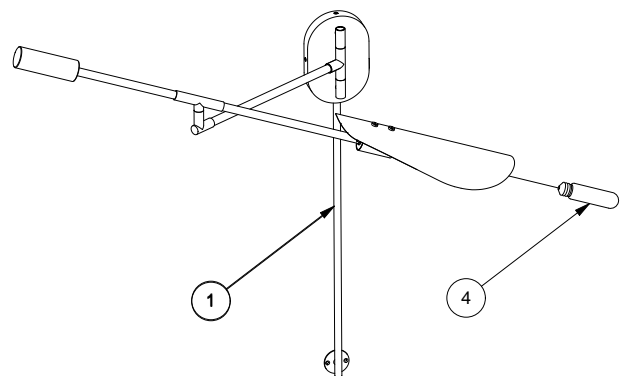



ASSEMBLY & INSTALLATION INSTRUCTION

MODEL: ASTRID SCONCE

8

Use HEX KEY 2MM(7) to loose the screw on LAMP BODY(1) arm and rotary LAMP ARM . After rotary it to your desired position, tightening the screw to lock it rotary.

TOOLING

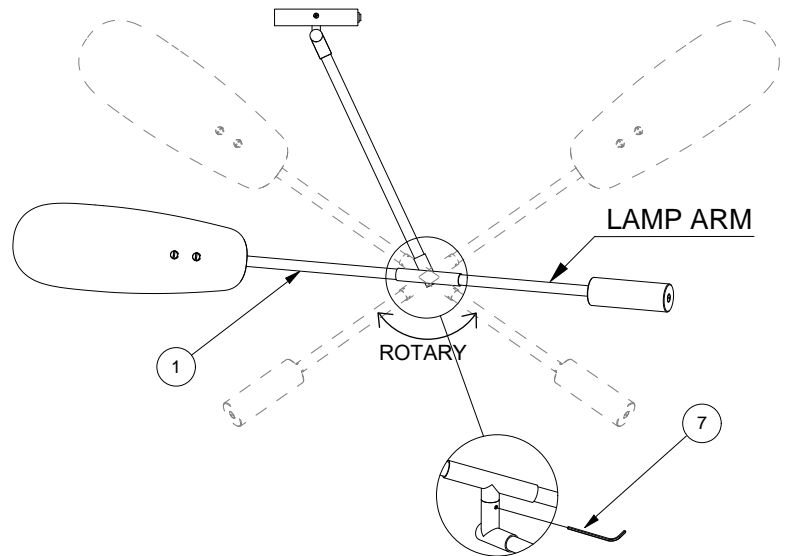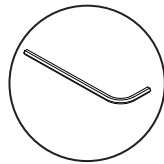

9

Connect your lamp to power source. Ensure the power cable is securely connected to a compatible outlet.

