


ASSEMBLY INSTRUCTION


Dorset Banquette U Shape 102.5"

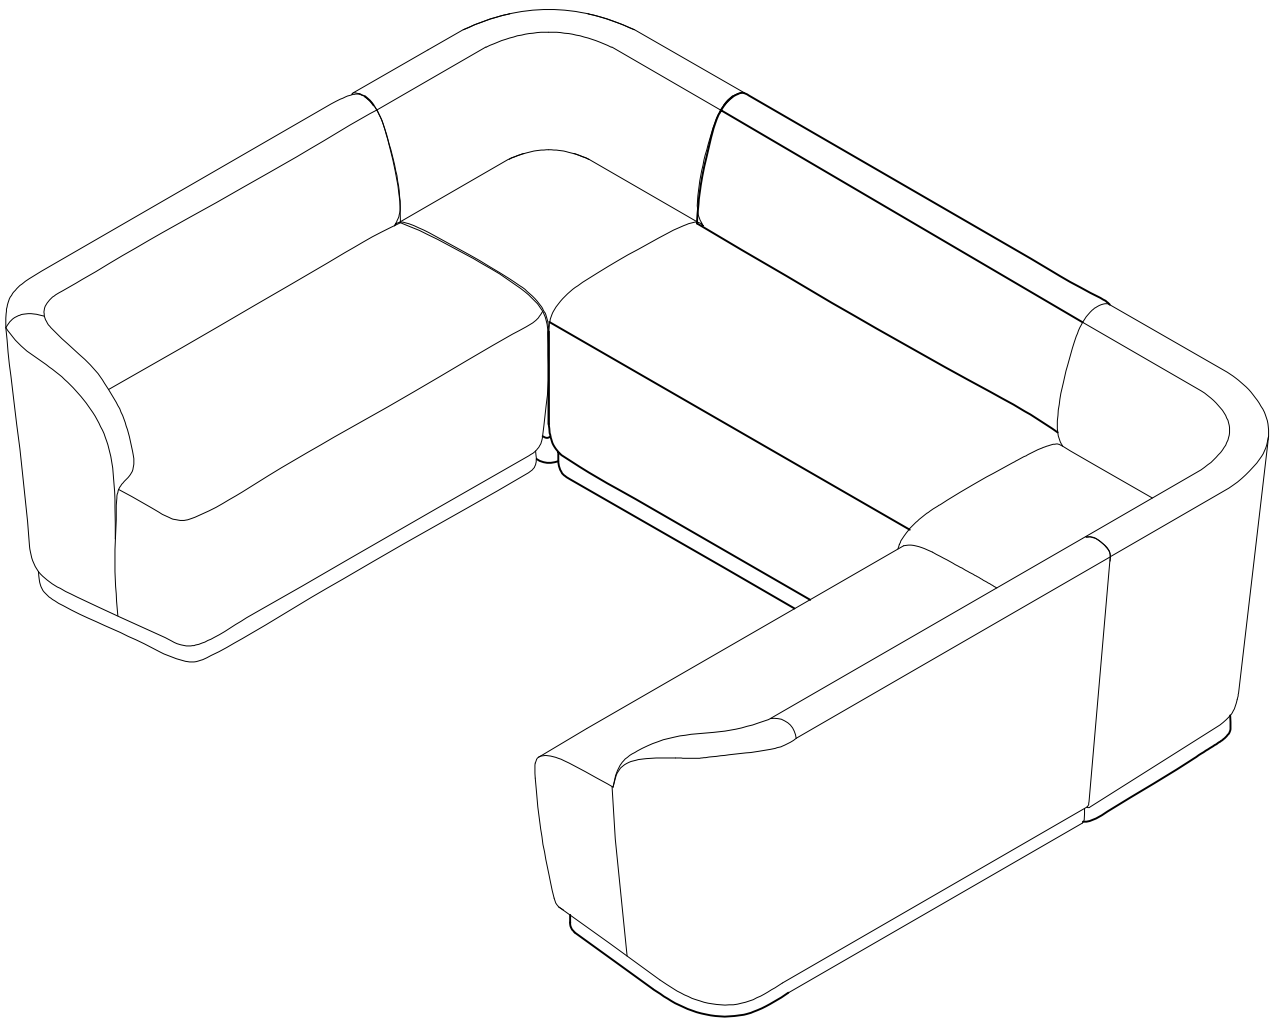

ASSEMBLY INSTRUCTION

Dorset Banquette U Shape 102.5"

Assembly of the sectionals.

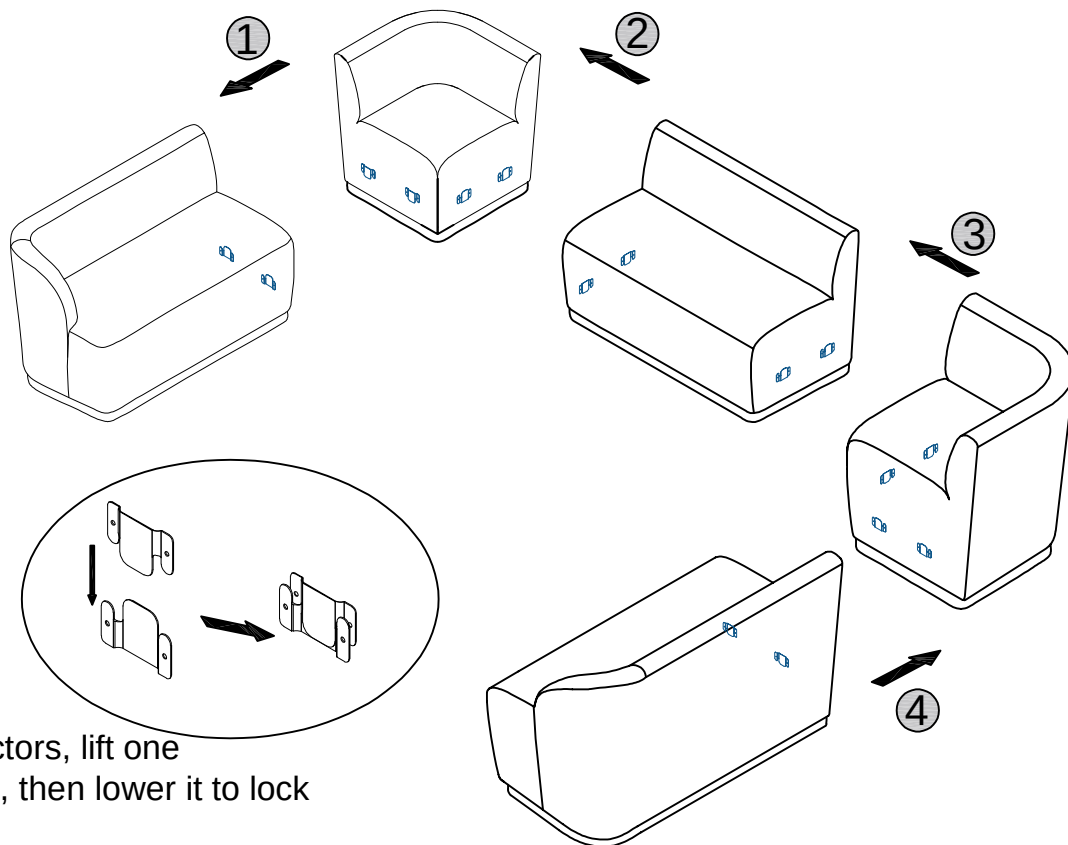

- Align the connectors, lift one sectional slightly, then lower it to lock them together.
- Follow Steps 1–4 in order.

How to disconnect.

Lift the sectional slightly and pull it apart.

