

LIVING DISTRICT

Collection: COHEN

Installation manual for


LD810D36 D36.4"H33.7"L6

Installation instructions:











1. Check the materials first.
2. Take out the metal tube(P10) from the lampholder(P12).
3. Thread the metal plate(P11) onto the lampholder(P12), then fix with metal tube(P10) until tight.
4. Screw the lifting rings(P9) into the nipple of the lampbody(P13) and tighten it.
5. Black wire from ceiling(junction box) attaches to "L" wire from the fixture.
6. White wire from ceiling(junction box) attaches to "N" wire from the fixture.
7. Install the "E" wire of the lampbody on the mounting bracket(P1) and connect it to the junction box.
8. Fix the mounting bracket(P1) on the junction box with screws(P2).
9. Fix the canopy loop(P3) to screw tube, then cover the canopy plate(P4) and fix it by canopy ring(P5).
10. Adjust the position of each lamp arm.
11. Install the bulbs(not included) into the lampholder(P12).
12. Turn on the power and light up.

The end!

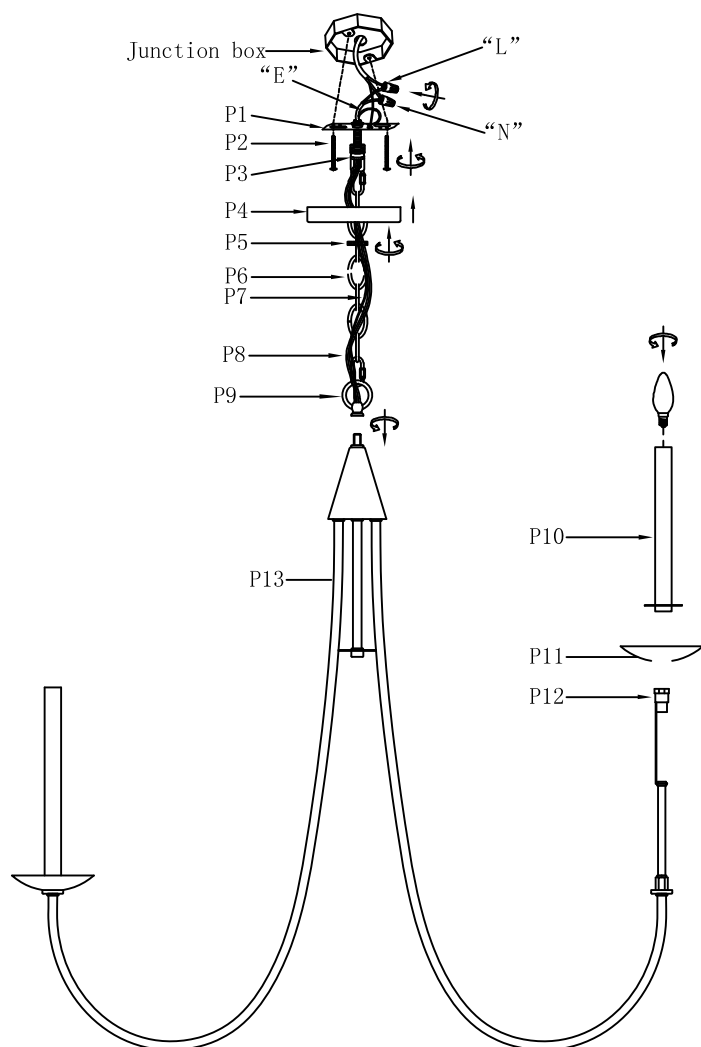PARTS LIST



"L" = Hot wire
 "N" = Neutral wire
 "E" = Ground wire

part	picture	Description	Qty	Check list
P1		L4" Mounting bracket	1	
P2		8/32-32 Screw	2	
P3		Canopy loop (Canopy part)	1	
P4		ø4.875" canopy plate	1	
P5		Canopy ring (Canopy part)	1	
P6		L60"CHAIN04P Plain Design	1	
P7		Ground wire	1	
P8		Power Cord 79" SPT-1-18#	1	
P9		Rings	1	
P10		D0.9"*10.6"tube	6	
P11		D4.3"*10.7" metal plate	6	
P12		E12 lampholder	6	
P13		D36.4"*131.9" lampbody	1	