


If you have any questions or problems assembling your fixture please call us for assistance. Customer Service: (702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING:


1. If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
2. Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
3. DO NOT install bulb which exceeds the maximum wattage specified on the socket label.
4. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

FIXTURE ASSEMBLY


1. Use 8-32 screw to fix mounting block to J-box and Wall.
Note: Ensure the mounting holes on the canopy are at the top and not on the sides.
2. Refer to wiring diagram. Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector.
See page 2 for surge protection installation instructions.
3. Carefully tuck in all wires Attach.
4. Fix part Lamp body to part mounting block by using part Flat screw.
5. Screw part crystal to part lamp body.

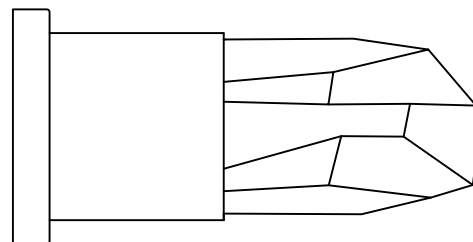

(FRONT VIEW)

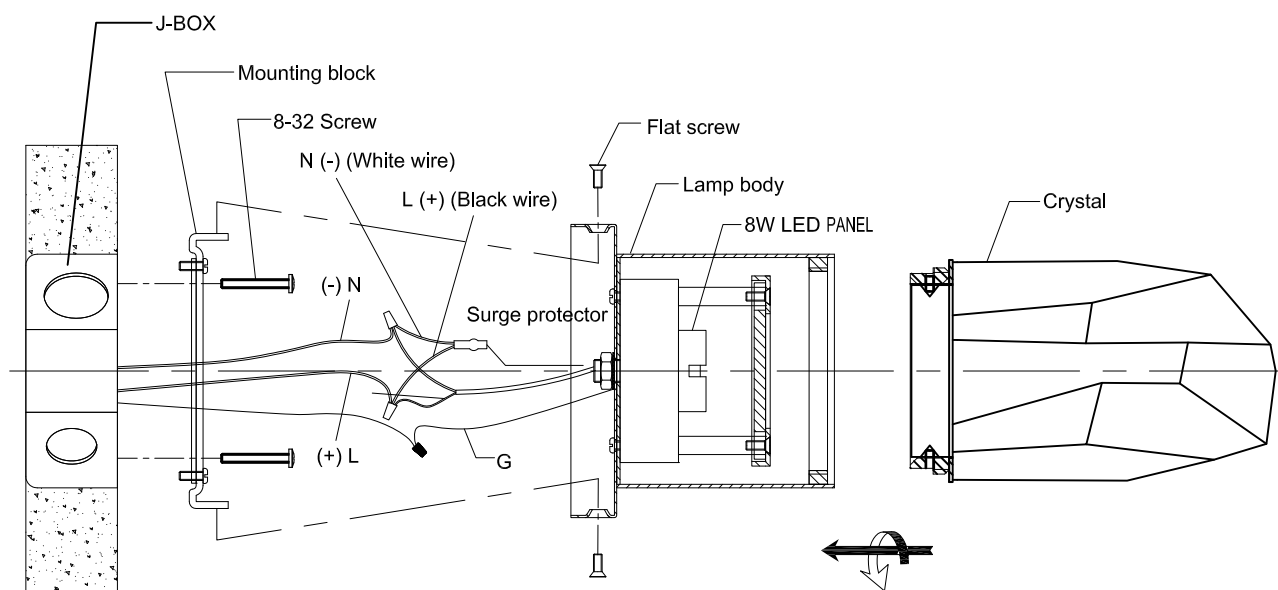

Wiring Diagram

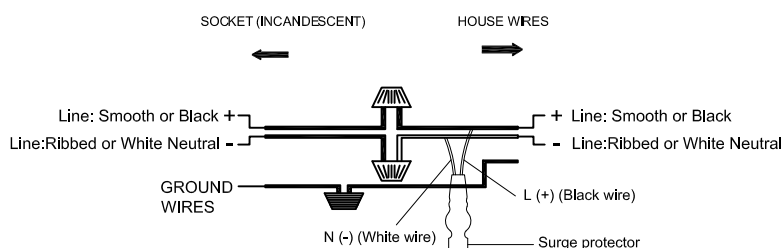

(FIG.1)



If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

Note:It is recommended that each surge protector be connected to a maximum of 6 LED boards!

SPD Installation

