

M17416

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE



- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

Technical Support: 1-844-628-8368

Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX
*CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE
DE JONCTION*

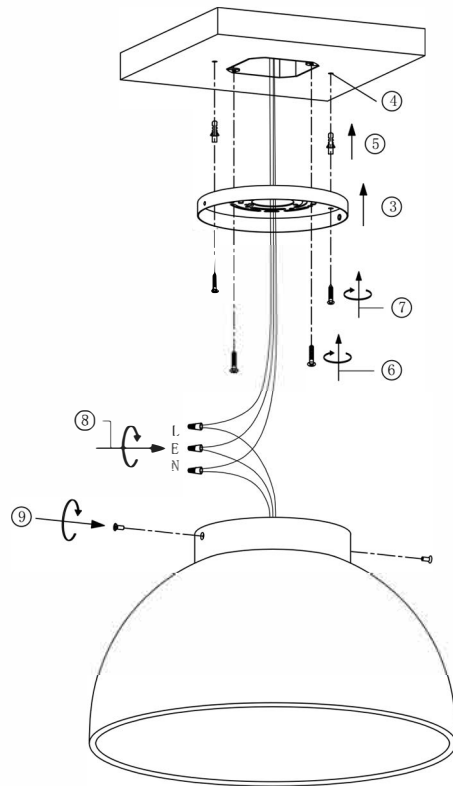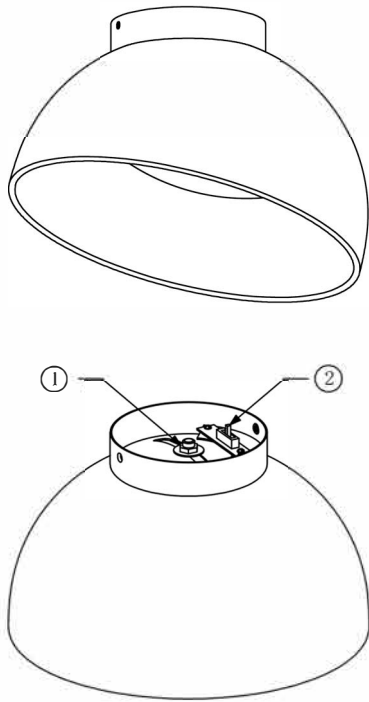

- Ensure main supply is switched off
- Loosen the nuts and adjust the angle of the canopy to what you want then fix it tight by the nuts again(1)
- Use the CCT switch to choose the colour temperature you want(2)
- Make sure the rod through the center hole of the canopy then put the canopy tightly onto the ceiling, mark on the wall at the position of $\varnothing 5$ holes then put the canopy down from the ceiling(3)
- Drill holes on the ceiling at the position with signs(4)
- Insert anchor screws into the holes(5)
- Use screws to fix the mounting bracket on the junction box(6)
- Use self-tapping screws to fix it tight(7)
- Connect wires according to colour (White to White, Black to Black), connect all earth lug together onto the crossbar with green screw to tight(8)
- Use M4 flat screws to fix the canopy and shade onto the mounting bracket(9)
- Reconnect power
- Lamping: AC LED 120V 24W CRI90, ELV DIMMING, 2700K/3000K/3500K/4000K/5000K selectable

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.