

# M18816

## INSTALLATION INSTRUCTIONS SHEET

### START FROM HERE


- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

**Technical Support:** 1-844-628-8368

### Please Note:

- All Matteo Lighting fixtures come with pre-wired module(s).
- Unless instructed to do so, please do not touch any part of the module(s) as unnecessary contact with the module could cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED IN A JUNCTION BOX  
*CE LUMINAIRE DOIT ÊTRE MONTÉ OU SUPPORTÉ DANS UNE BOÎTE  
DE JONCTION*

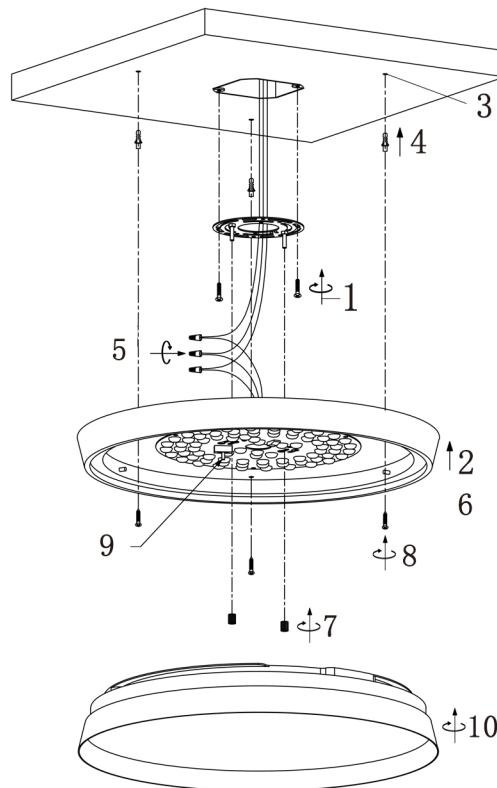

- Ensure main supply is switched off
- Use machine screws to fix the mounting bracket onto junction box(1)
- Make sure the rod through the center hole of the canopy then put the canopy tightly onto the ceiling, mark on the wall at the position of  $\varnothing 5$  holes then put the canopy down from the ceiling(2)
- Drill holes on the ceiling at the position with signs(3)
- Insert anchor screws into the holes(4)
- Connect wires according to color (White to White, Black to Black), connect all earth lug together onto the crossbar with green screw to tight(5)
- Make sure the rod through the center hole of the canopy then use nuts to fix it on the junction box(6&7)
- Use self-tapping screws to fix it tight(8)
- Use the CCT switch to choose the color temperature you want(9)
- Install the shade(10)
- Reconnect power
- Lamping: AC LED 120V 30W CRI90, ELV DIMMING, 2700K/3000K/3500K/4000K/5000K selectable

### WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.