

## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.: DWC46

NAME:FRESNO SCONCE

MATERIAL TYPE: LEATHER

FINISH:IVORY

SOCKET TYPE:LED



SOCKET QTY: 1

BULB WATTAGE: 4W/2700K/90+CRI

VOLTAGE:100V-130V

ITEM NET WEIGHT:4.3LBS

**PLEASE IGNORE THIS DEVICE IN**

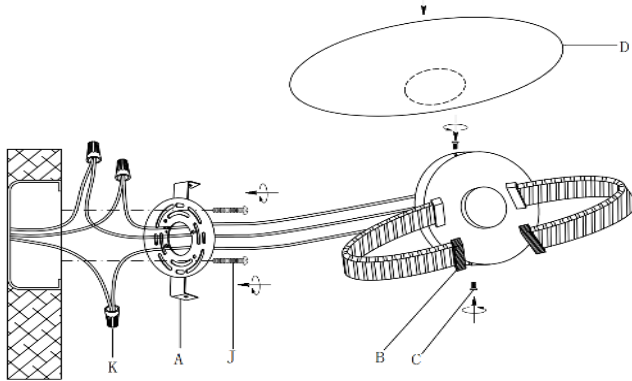

### PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Canopy Screw (C)	Qty: 2 Pcs
Lamp Base (B)	Qty: 1 Pc	Glass Shade (D)	Qty: 1 Pc

### HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

### TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. PLEASE PAY SPECIAL ATTENTION THAT YOU DO NOT NEED TO CONNECT THE TERMINAL BLOCK (M) IN THE LAMP BASE. IT IS USED FOR THE WIRE CONNECTION FOR EURO-MARKET.
6. Attach lamp base(B) to mounting plate (A) by inserting canopy screws (C) through predrilled holes.Then tighten by using screwdriver
7. Please pay special attention to the wider side of the glass shade at the bottom, **put it on the lamp base carefully till it rests on the base.**
8. Restore power to junction box and test fixture.

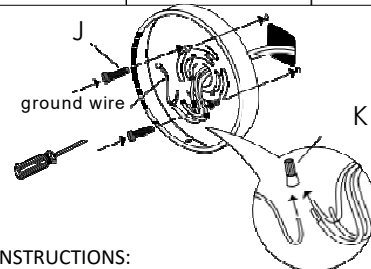

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

ARTERIO RS