

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.:DMC30

NAME:HADDEN CHANDELIER

MATERIAL TYPE: METAL

FINISH: ENGLISH BRONZE


SOCKET TYPE: E12

SOCKET QTY: 9

BULB WATTAGE: 60W /13W CFL/8W LED

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 22.5LBS

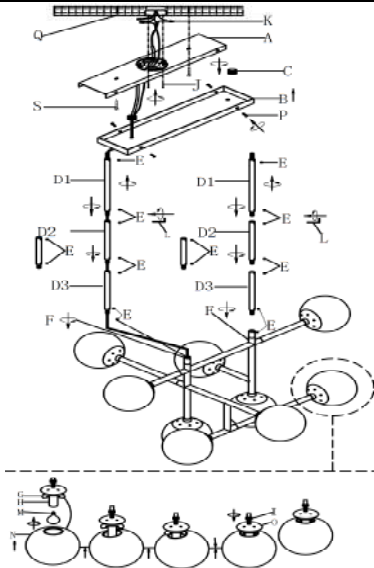

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1Pc	Bracket (G)	Qty:9Pcs
Canopy (B)	Qty: 1Pc	Socket (H)	Qty:9Pcs
Knurling Nut (C)	Qty: 2Pcs	Knurled Metal Ring (I)	Qty:9Pcs
Rod (D)	Qty: 8Pcs	Glass Shade (N)	Qty:9Pcs
Hex Screw (E)	Qty: 18Pcs	Metal Cap (O)	Qty:9Pcs
Lamp Assembly (F)	Qty : 1Pc	Set Screw (P)	Qty:4Pcs

HARDWARE INCLUDED:

Mounting Screws J	Qty : 2Pcs	Plastic Anchor(Q)	Qty: 2Pcs
Plastic Wire Connector(K)	Qty : 3Pcs	Allen Wrench (L)	Qty: 1Pc
Green Ground Screw	Qty : 1Pc	Strengthen Screw(S)	Qty: 2Pcs

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Pull the electrical cord from canopy(B) and knurling nut (C)through the exit hole of the mounting plate(A)
5. Connect lamp assembly (F) and canopy (B) with rod(D1,D2,D3,D4) by turning knurling nut (C) in a clockwise direction until tighten,when you connect the rods,loosen the small hex screws(E) first then tighten with allen wrench(L) after all rods are connected. be sure all the hex screws(E)are tight enough.
6. Drill 2 holes in wall in line with 2 holes of mounting plate(A),insert plastic anchors(Q)into drilled holes.fasten mounting plate(A)to wall by screwing the 2 strengthen screws(S) provided in the plastic anchors(Q).
7. Attach the mounting plate (A) to the outlet box by using the mounting screws(J).
8. Carefully inspect the chandelier's fixture wires.Neutral fixture wire: White Hot fixture wire: Black Ground wire: Green
9. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector(K) and wrap the connection with electrical tape.
10. Attach the neutral fixture wire from the chandelier to the neutral junctionbox wire (usually white). Fasten each together with a connector(K) and wrap the connection with electrical tape.
11. Attach the hot fixture wire from the chandelier to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape.DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. Gently tuck the wire connections neatly into the ceiling junction box.
13. Attach the canopy(B) to the mounting plate(A) using the enclosed set screws(P).secure the canopy by tightening 4 set screws(P).
14. Insert 9 TYPE-G 60W /13W CFL/8W LED bulb(not included) into socket (H). DO NOT EXCEED SPECIFIED WATTAGE OF PENDANT.
15. Lift the metal cap(O) and knurled metal ring(I) and put the bracket(G) inside the glass shade(N) at an angle.Put down the metal cap(O) to cover the top of the glass shade(N), then tighten the knurled metal ring (I) in a clockwise direction to secure the glass shade.

CARE INSTRUCTIONS: Turn off the power to the junction box and test fixture.

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS