

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: DWCS2 NAME:FLEMMING SCONCE

MATERIAL TYPE: GLASS FINISH: MATTE SWIRL

SOCKET TYPE:E26 SOCKET QTY: 1

BULB WATTAGE: 40W or /CFL 9W or /LED 4W

VOLTAGE:110V-120V ITEM NET WEIGHT: 7LBS

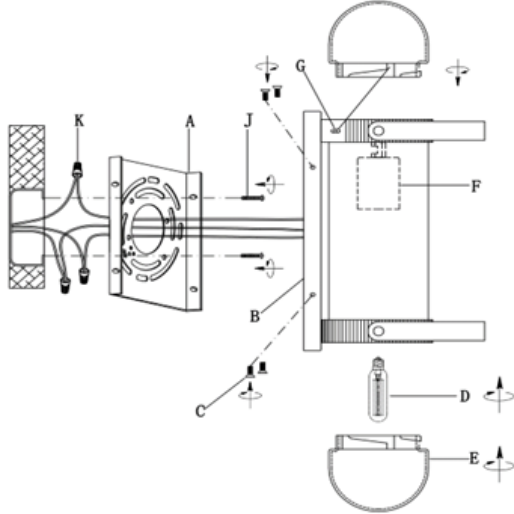

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Glass Shade (E)	Qty: 2 Pcs
Back Plate (B)	Qty: 1 Pc	Socket (F)	Qty: 1 Pc
Canopy Screw (C)	Qty: 4 Pcs	Thumb Screw (G)	Qty: 2 Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):

1 Screwdriver



These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Attach Back Plate (B) to mounting plate (A) by inserting canopy screws (C) through predrilled holes.Then tighten by using screwdriver.
6. Insert 1 TYPE-T 40W or/CFL 9W or /LED 4W bulb(not included) into socket(F). DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.
7. Put and assemble the glass shade(E) by rotating in a clockwise direction **with fix the U ring by securing the thumb screw (G) carefully.**
8. Restore power to junction box and test fixture.

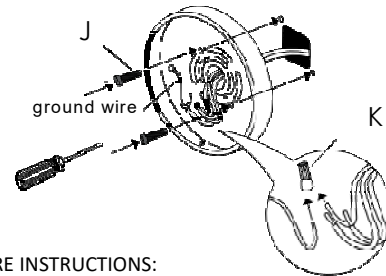

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

For customer service questions call 1-800-338-2150

ARTERIO RS