

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC58

NAME:FAMOSO SCONCE

MATERIAL TYPE: FAUX VELLUM

FINISH: IVORY


SOCKET TYPE:E12

SOCKET QTY:2

BULB WATTAGE: LED BULB 4W

VOLTAGE:110V-120V

ITEM NET WEIGHT:2.2 LBS

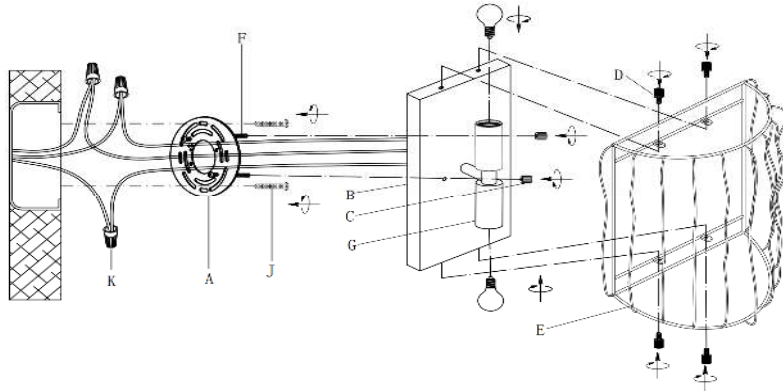

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Shade (E)	Qty: 1 Pc
Back Plate (B)	Qty: 1 Pc	Screw Threaded (F)	Qty: 2 Pcs
Screw Nut (C)	Qty: 2 Pcs	Socket (G)	Qty: 2 Pcs
Screw Nut (D)	Qty: 4 Pcs		

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):



1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp by using wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
5. Attach back plate (B) to mounting plate (A) and through predilled holes by screw threaded(F) .Then tighten using screw nut(C).
6. Insert 2 TYPE-G led 4w bulb(not included) into the socket(G). **DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.**
7. Attach the shade (E) to back plate (B), then seure the shade by using screw nut (D) at top and bottom.
8. Restore power to junction box and test fixture.

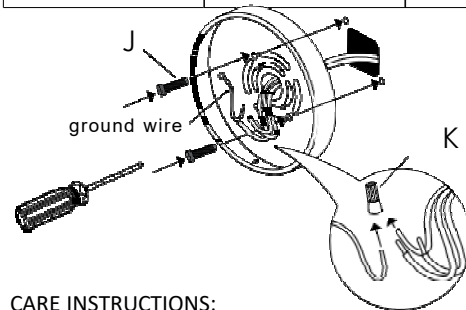

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

For customer service questions call 1-800-338-2150

ARTERIO RS