

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC54

NAME:GREENSBORO SCONCE

MATERIAL TYPE: METAL, GLASS

FINISH:ENGLISH BRONZE,MATTE SWIRL


SOCKET TYPE:E12

SOCKET QTY: 2

BULB WATTAGE: 40W or /CFL 9W or /LED 4W

VOLTAGE:110V-120V

ITEM NET WEIGHT: 4.9LBS

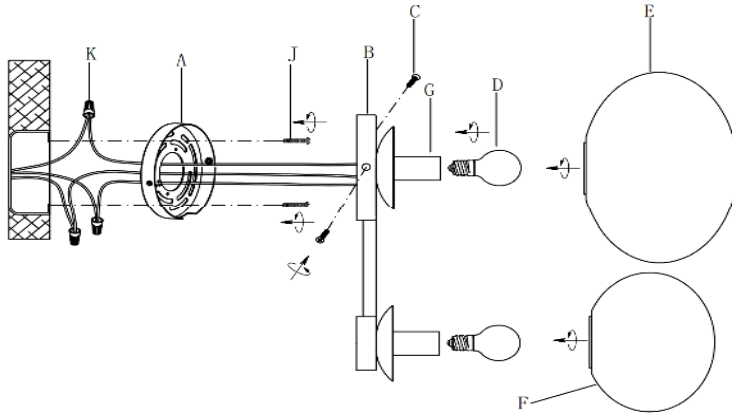

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Large Glass Sphere (E)	Qty: 1 Pc
Back Plate (B)	Qty: 1 Pc	Small Glass Sphere (F)	Qty: 1 Pc
Canopy Screw (C)	Qty: 2 Pcs	Socket Assembly (G)	Qty: 2 Pcs

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
5. Attach back plate (B) to mounting plate (A) by inserting canopy screws (C) through predrilled holes.Then tighten by using screwdriver.
6. Insert 2 TYPE-B 40W or/CFL 9W or /LED 4W bulb (not included) into socket assembly (G). **DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.**
7. Put and assemble the small glass sphere (F) and Large glass sphere(E) by rotating in a clockwise direction with socket assembly (G) .
8. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of

For customer service questions call 1-800-338-2150

ARTERIO RS