

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DSC08

NAME: GENESIS CHANDELIER

MATERIAL TYPE: METAL

FINISH: ANTIQUE BRASS

SOCKET TYPE: E12


SOCKET QTY: 6

BULB WATTAGE: 60W /13W CFL/8W LED

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 31.9LBS

FIG 1.

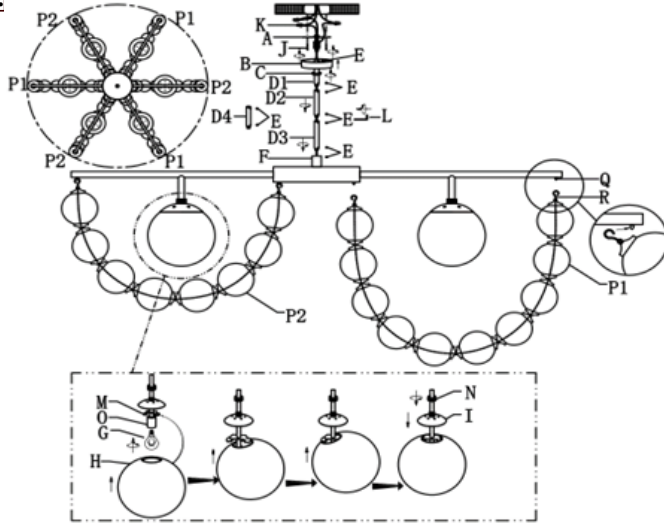

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1Pc	Bracket (M)	Qty: 6Pcs
Canopy (B)	Qty: 1Pc	Knurled Metal Ring (N)	Qty: 6Pcs
Collar Loop (C)	Qty: 1Pc	Socket (O)	Qty: 6Pcs
Rod (D)	Qty: 4Pcs	Glass Bunch (P1)	Qty: 3Pcs
Hex Screw (E)	Qty: 9Pcs	Glass Bunch (P2)	Qty: 3Pcs
Lamp Assembly (F)	Qty: 1Pc	Metal Slot (Q)	Qty: 12Pcs
Glass Shade (H)	Qty: 6Pcs	Metal S Hook (R)	Qty: 12Pcs
Metal Cap (I)	Qty: 6Pcs		

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2Pcs	Canopy Screws	
Plastic Wire Connector(K)	Qty: 3Pcs	Allen Wrench (L)	Qty: 1Pc
Green Ground Screw	Qty: 1Pc		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate from the canopy by unscrewing the collar.
5. Connect the lamp assembly(F) and canopy(B) with rod(D1,D2,D3,D4), when you connect the rods, loosen the small hex screws(E) first then tighten with allen wrench(L) after all rods are connected, be sure all the hex screws(E) are tight enough.
6. Carefully inspect the chandelier's fixture wires. Neutral fixture wire: White Hot fixture wire: Black Ground wire: Green
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector(K) and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the chandelier to the neutral junction box wire (usually white). Fasten each together with a connector(K) and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the chandelier to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Place the mounting plate(A) over the center of the ceiling junction box.
12. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
13. Push canopy (B) up over the mounting plate(A) until it is flush with the ceiling.
14. Push collar loop (C) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar loop (C) clockwise until canopy(B) is flush with the ceiling.
15. Insert 6 TYPE-G 60W /13W CFL/8W LED bulb(not included) into socket(O). DO NOT EXCEED SPECIFIED WATTAGE OF PENDANT.
16. Lift the metal cap(I) and knurled metal ring(N) and put the bracket(M) inside the glass shade(H) at an angle. Put down the metal cap(I) to cover the top of the glass shade(H), then tighten the knurled metal ring (N) in a clockwise direction to secure the glass shade.
17. Carefully hang the glass bunch (P1,P2) by the metal S hook(R) to go through the metal slot(Q). Please see the FIG.1 for the placement of glass bunch.
18. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.



For customer service questions call 1-800-338-2150

ARTERIO RS