

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:


ITEM NO.: GADMC01 NAME: GLAZE CHANDELIER

MATERIAL TYPE: METAL FINISH:ANTIQUE BRASS

SOCKET TYPE: E26 SOCKET QTY: 3PCS

BULB WATTAGE: 40W TYPE A

VOLTAGE: 120V ITEM NET WEIGHT: 22.5LBS

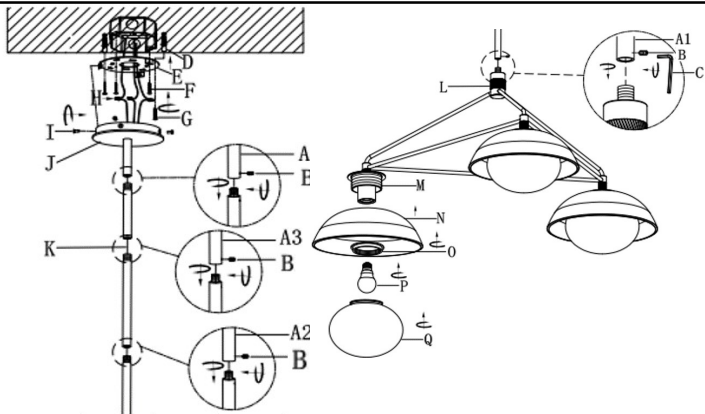

PARTS INCLUDED:

Steel rods(A1,A2,A3,A4) Qty: 4 Canopy(J) Qty: 1

Set screws(B) Qty: 4 Power wire(K) Qty: 1

Allen wrench(C) Qty: 1 Lamp body(L) Qty: 1

Anchor(D) Qty: 3 Threaded ring(M) Qty: 3

Mounting plate(E) Qty: 1 Ceramic shade(N) Qty: 3

Mounting screw(F) Qty: 3 Metal ring(O) Qty: 3

Strengthen screws(G) Qty: 3 Bulb(P, Not included) Qty: 3

Wire cap(H) Qty: 3 Glass shade(Q) Qty: 3

Canopy screw(I) Qty: 3

HARDWARE INCLUDED:

Mounting Screws Qty: 3

Plastic Wire Connector Qty: 3

Green Ground Screw Qty: 1

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
 2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
 3. Gently pull wiring down from ceiling junction box and allow to hang.
 4. Remove mounting plate(E) from the canopy(J) by unscrewing the canopy screw (I).
 5. Pass the power wire(K) through the rods (A1), (A2), (A3), and (A4). Screw the rod (A1) to the lamp body(L) until tight. Repeat the same operation with rods (A2), (A3), and (A4). When you connect the rods, loosen the small set screws (B) in the side hole first, then tighten them with an Allen wrench (C) after all rods are connected. Ensure that all the hexagonal screws are tightened securely.
 6. Screw the canopy (J) onto the rod (A3) till it's tight, then thread the power wire (K) through the mounting plate (E).
 7. Pull the electrical cord of "J box" through the exit hole of the mounting plate(E).
 8. Carefully inspect the chandelier's fixture wires.
Neutral fixture wire: White
Hot fixture wire: Black
Ground wire: Bare wire
 9. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire cap(H) and wrap the connection with electrical tape.
 10. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire cap(H) and wrap the connection with electrical tape.
 11. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire cap(H) and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
12. Gently tuck the wire caps(H) neatly into the ceiling junction box.
 13. Place the mounting plate(E) over the center of the ceiling junction box.
 14. Attach the mounting plate (E) to the ceiling outlet box using the enclosed mounting screws (F) and (3) strengthened screw (G). Tighten screws with a screwdriver.
 15. Connect the canopy (J) to the mounting plate (E) using 3 canopy screw(I) . And tighten screws with a screwdriver.
 16. Attach ceramic shades (N) to the threaded ring(M) and secure with metal ring(O).
 17. Install 3 light bulbs (P) into socket (each max. 40W A or 10W CFL or 9W LED - bulbs are not included)
 18. Screw the glass shades (Q) on the socket assembly.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS