


# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.: 45047	NAME: Pascal Pendant
MATERIAL TYPE: Fiberglass	FINISH: Matte Black
SOCKET TYPE: E26	SOCKET QTY: 1, 3" Neck
BULB WATTAGE: 150W/CFL 35W/LED 28W	
VOLTAGE: 110-120 V	ITEM NET WEIGHT: 40LBS

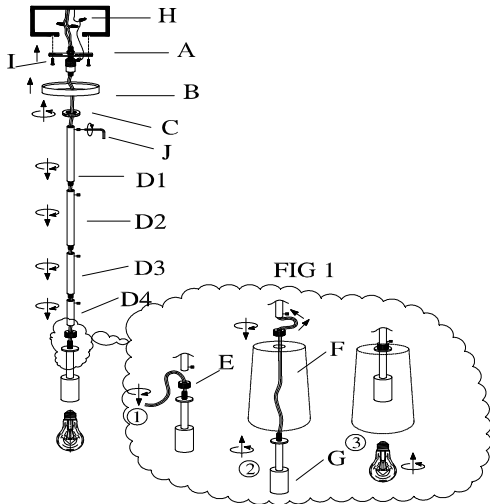

## PARTS INCLUDED:

(A) MOUNTING PLATE	Qty: 1
(B) CANOPY	Qty: 1
(C) COLLAR LOOP	Qty: 1
(D) RODS	Qty: 4
(E) LOCKING RING	Qty: 1
(F) SHADE	Qty: 1
(G) SOCKET ASSEMBLY	Qty: 1

## HARDWARE INCLUDED:

(H) Plastic Wire Connector	2 Pcs	Canopy Screws	2 Pcs
Mounting Screws	2 Pc		
Green Ground Screw	1 Pc	Allen Wrench	1 Pc

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. As shown in fig, unscrew the locking ring(e) off the socket assembly(g), and attach the shade(f, not included) from the bottom to the socket properly, then secure it by screw the locking ring(e) till tight.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Remove mounting plate from the canopy by unscrewing the collar.
6. Carefully inspect the pendant's fixture wires. Neutral fixture wire: White | Hot fixture wire: Black | Ground wire: Green
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Place the mounting plate over the center of the ceiling junction box.
12. Align holes in mounting plate with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
13. Push canopy up over the mounting plate until it is flush with the ceiling.
14. Push collar through hole in canopy and thread onto nipple on the mounting plate. Secure by turning collar clockwise until canopy is flush with the ceiling.
15. Restore power to junction box and test fixture. Insert 150W bulb into fixture. **DO NOT EXCEED SPECIFIED WATTAGE OF PENDANT.**

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS