


## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.: DPC18	NAME: IRENE PENDANT
MATERIAL TYPE: METAL	FINISH: ANTIQUE BRASS
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: 60W /13W CFL/8W LED	
VOLTAGE: 110V-120V	ITEM NET WEIGHT: 9.10Lb

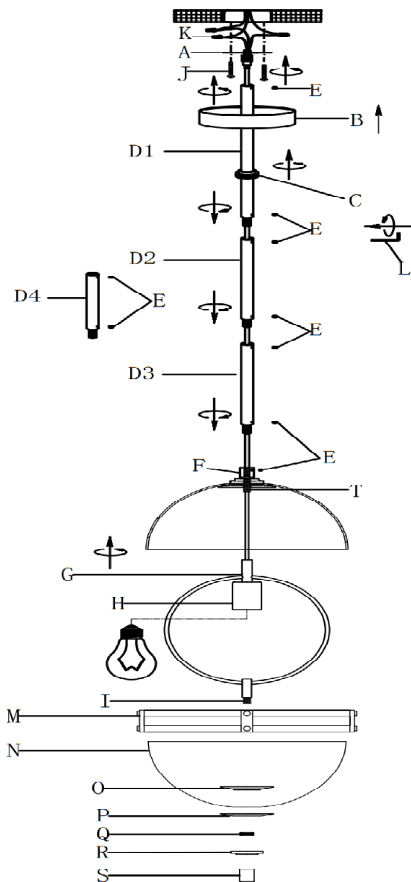

### PARTS INCLUDED:

Mounting Plate (A)	Qty: 1Pc	Metal frame (M)	Qty: 1Pc
Canopy (B)	Qty: 1Pc	Glass Shade (N)	Qty: 1Pc
Collar Loop (C)	Qty: 1Pc	Metal washer (O)	Qty: 1Pc
Rod (D)	Qty: 4Pcs	Metal washer (P)	Qty: 1Pc
Hex Screw (E)	Qty: 9Pcs	Screw nut (Q)	Qty: 1Pc
Lamp Body (F)	Qty: 1Pc	Metal cap (R)	Qty: 1Pc
Internal metal ring (G)	Qty: 1Pc	Finial (S)	Qty: 1Pc
Socket (H)	Qty: 1Pc	Screw thread (T)	Qty: 1Pc
Screw thread (I)	Qty: 1Pc		

### HARDWARE INCLUDED:

Mounting Screws(J)	Qty : 2Pcs	Canopy Screws	
Plastic Wire Connector(K)	Qty : 3Pcs	Allen Wrench (L)	Qty : 1Pc
Green Ground Screw	Qty : 1Pc		

### TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate(A) from the canopy by unscrewing the collar.
5. Connect the lamp assembly(F) and canopy(B) with rod(D1,D2,D3,D4) carefully, when you connect the rods, loosen the small hex screws(E) first then tighten with allen wrench(L) after all rods are connected. be sure all the hex screws(E) are tight enough.
6. Carefully inspect the pendant's fixture wires. **Neutral fixture wire: White Hot fixture wire: Black Ground wire: Green**
7. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector(K) and wrap the connection with electrical tape.
8. Attach the neutral fixture wire from the pendant to the neutral junctionbox wire (usually white). Fasten each together with a connector(K) and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Place the mounting plate(A) over the center of the ceiling junction box.
12. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
13. Push canopy (B) up over the mounting plate(A) until it is flush with the ceiling.
14. Push collar loop (C) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar loop (C) clockwise until canopy(B) is flush with the ceiling.
15. Connect the internal metal ring(G) with screw thread(T) by turning in a clockwise direction until tight.
16. Insert 1 TYPE-A 60W /13W CFL/8W LED bulb(not included) into socket(H). **DO NOT EXCEED SPECIFIED WATTAGE OF PENDANT.**
17. Put the metal frame(M), metal washer(O), glass shade(N) and metal washer(P) to through the screw thread(I) then tight by screw nut(Q) carefully.
18. Put the metal cap(R) onto screw thread (I) and tight it by finial(S)
19. Restore power to junction box and test fixture.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIOS