


## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.: DW C66	NAME: JAYCE SCONCE
MATERIAL TYPE: METAL	FINISH: VINTAGE SILVER
SOCKET TYPE: : E12	SOCKET QTY: 1
BULB WATTAGE: TYPE T 60W	
VOLTAGE: 110V-120V	ITEM NET WEIGHT: 4.6 LBS

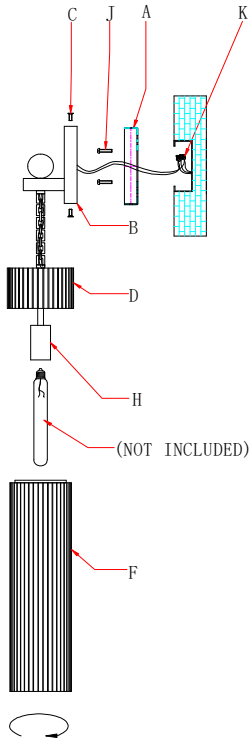

### PARTS INCLUDED:

Mounting Plate(A)	Qty: 1PC
Back Plate(B)	Qty: 1PC
Canopy Screw(C)	Qty: 2PCS
Lamp body (D)	Qty: 1PC
Glass shade (F)	Qty: 1PC
Socket(H)	Qty: 1PC
Mounting Screw(J)	Qty: 2PCS
Plastic Wire Cap(K)	Qty: 3PCS

### HARDWARE INCLUDED:

Mounting Screws	Qty: 2PCS
Canopy Screws	Qty: 2PCS
Green Ground Screw	Qty: 1PC
Plastic Wire Cap	Qty: 3PCS

### TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from junction box and allow to hang.
4. Remove mounting plate(A) from the back plate(B) by loosening the canopy screw (C) using a Phillips screwdriver.
5. Place the mounting plate(A) over the center of the junction box.
6. Align the holes in the mounting plate (A) with the holes in the junction box and secure it with two mounting screws (J). Secure the screws using a Phillips head screwdriver.
7. Connect ground wire from wall to ground wire from lamp using wire caps (K).
8. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps .
9. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
10. Gently tuck the wire caps(K) neatly into the junction box.
11. Attach front face of light to back plate by inserting canopy screws (C) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
12. Insert 1 TYPE T 60W bulbs (or /CFL 12W OR /LED 10W, not included) into socket(H). DO NOT EXCEED THE SPECIFIED WATTAGE.
13. Attach the glass shade (F) to Lamp body (D) by turning clockwise until it is tight.
14. Restore power to junction box and test fixture.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

professional electrician.

For customer service questions call 1-800-338-2150

A R T E R I O R S