

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DLC47

NAME: Jacqueline Chandelier

MATERIAL TYPE: Iron, Glass

FINISH: Antique Brass, Champagne


SOCKET TYPE: E12

SOCKET QTY: 12

BULB WATTAGE: 60W /13W CFL/8W LED

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 28.22LBS

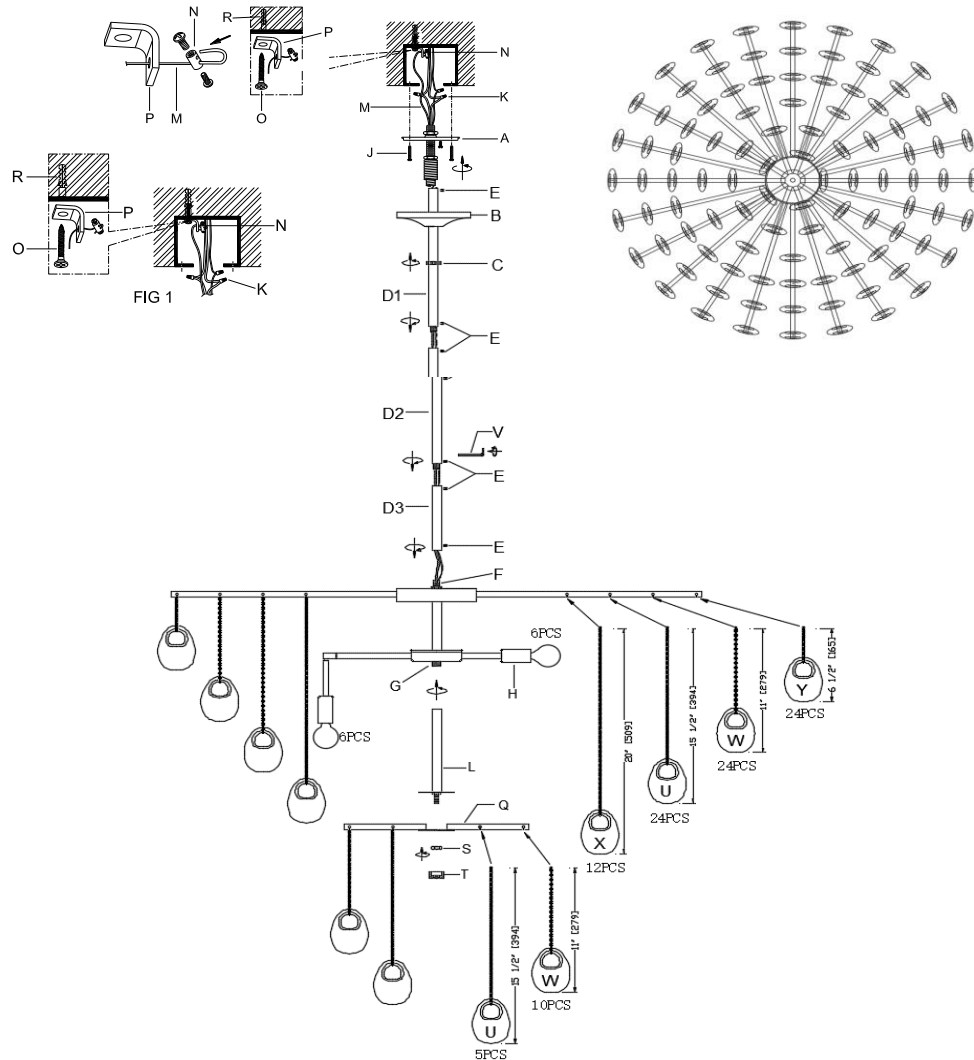

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1PC	Coupling (N)	Qty: 1PC
Canopy (B)	Qty: 1PC	Bracket (P)	Qty: 1PC
Collar Loop (C)	Qty: 1PC	Iron Bracket (Q)	Qty: 1PC
Rod (D)	Qty: 4PCS	Metal Washer (S)	Qty: 1PC
Hex Screw (E)	Qty: 9PCS	Finial (T)	Qty: 1PC
Lamp Body (F)	Qty: 1PC	Glass (Y)	Qty: 24PCS
Junction Box (G)	Qty: 1PC	Glass (W)	Qty: 34PCS
Socket (H)	Qty: 12PCS	Glass (U)	Qty: 29PCS
Steel wire (M)	Qty: 1PC	Glass (X)	Qty: 12PCS

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2PCS	Allen Wrench (V)	Qty: 1PC
Plastic Wire Connector (K)	Qty: 3PCS	Strengthen Screw (O)	Qty: 1PC
Plastic Anchor (R)	Qty: 1PC		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Please be sure you have all parts indicated before you begin assembly.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Connect the junction box (G) to the threaded pipe (L), iron bracket (Q), metal washer (S) and finial (T) by tighten both ends of the threaded pipe(L) in a clockwise direction .
6. Remove the mounting plate(A) from the canopy(B) by unscrewing the collar loop(C).
7. Connect lamp body (F) and canopy (B) with rod(D1,D2,D3,D4), loosen the small hex screws (E) first then tighten with Allen wrench (V), after all rods are connected. Be sure all the hexagonal screws are tight enough. Note: if you want the fixture to be semi-flush mount, you only need connect lamp body (F) and canopy (B) with rod (D4).
8. Drill 1 hole inside the junction box and fasten the bracket (P) to ceiling by screwing the strengthen screws (O) into . Drilled hole as fig.1. *If attach to cement ceiling, use plastic anchor (R) first then screw strengthened screws (O) into the plastic anchor (R). * If attach to wood ceiling, thread strengthened screw (O) directly into ceiling, pass the steel wire (M) through the hole of bracket (P), and pass the steel wire (M) through the 2 holes of coupling (N), then fix with 2pcs screws provided in the coupling (N) as fig.2. Be sure to tighten two screws attached on the coupling (N).
9. Attach the mounting plate (A) to the outlet box by using the mounting screws(J).
10. **Carefully inspect the pendant's fixture wires. Neutral fixture wire: white hot fixture wire: black ground wire: green**
11. Wrap ground wire of lamp body and ground wire of junction box together and fasten together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
12. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
13. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **Do not reverse the hot and neutral connections or safety will be compromised.**
14. Gently tuck the wire connections neatly into the ceiling junction box.
15. Attach the mounting plate (A) with nipple to the ceiling outlet box using the enclosed mounting screws (J) and tighten screws with a screwdriver.
16. Push collar loop up to canopy (B) and tighten onto nipple in mounting plate (A) by turning in a clockwise to secure canopy.
17. Insert 12 type G 60w bulb (or CFL 13w or LED 10w, not included) into the socket (H). **Do not exceed specified wattage.**
18. Attach the glass (X,U,W,Y) into the four holes of the arm carefully. Note: Glass with chain in 4 dimension as labeled. Please start from interior to exterior. When glass assembly is completed, remove label from the glass.
19. **Attach the glass (U,W,Y)** into the three holes of the arm carefully. Note: Glass with chain in 3 dimension as labeled. Please start from interior to exterior. When glass assembly is completed, remove label from the glass.
20. Attach the Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO