

## ASSEMBLY INSTRUCTIONS


### ITEM DESCRIPTION:

ITEM NO.: DWC71	NAME:INLET SCONCE
MATERIAL TYPE: METAL	FINISH:ENGLISH BRONZE, IVORY
SOCKET TYPE: E26	SOCKET QTY: 1
BULB WATTAGE: LED 8W	
VOLTAGE:110V-120V	ITEM NET WEIGHT:3.08LBS



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
5. Attach Back Plate (C) to Mounting Plate (A) by inserting canopy screws (B) through predrilled holes. Then tighten by using screwdriver.
6. Put the shade (F) onto the socket(E) by attaching the metal sleeve(G), then tight by socket ring (H) .
7. Insert 1 TYPE-G 8W LED bulb(not included) into socket(E). DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.
8. Restore power to junction box and test fixture.

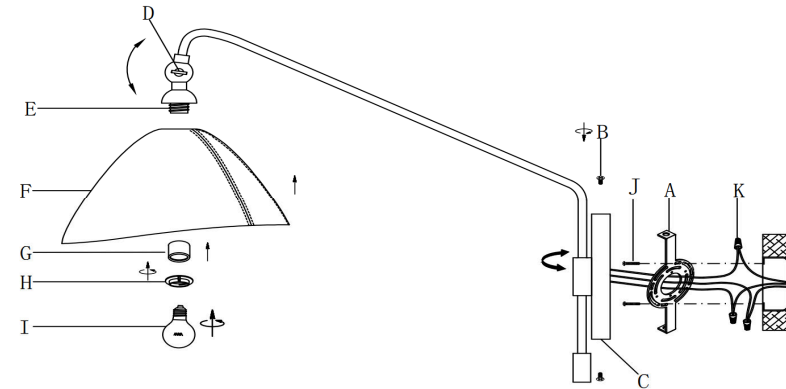

### PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Shade (F)	Qty: 1 Pc
Canopy Screw (B)	Qty: 2 Pcs	Metal sleeve (G)	Qty: 1 Pc
Back Plate (C)	Qty: 1 Pc	Socket ring (H)	Qty: 1 Pc
Socket (E)	Qty: 1 Pc		

### HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

### TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS