


## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.: DWC91	NAME: LONDON SCONCE
MATERIAL TYPE: IRON, GLASS, LEATHER	FINISH: ENGLISH BRONZE, CLEAR SEEDY, GRAY
SOCKET TYPE: E12	SOCKET QTY: 2
BULB WATTAGE: 40W or /CFL 9W or /LED 4W	
VOLTAGE: 110V-120V	ITEM NET WEIGHT: 6.6LBS

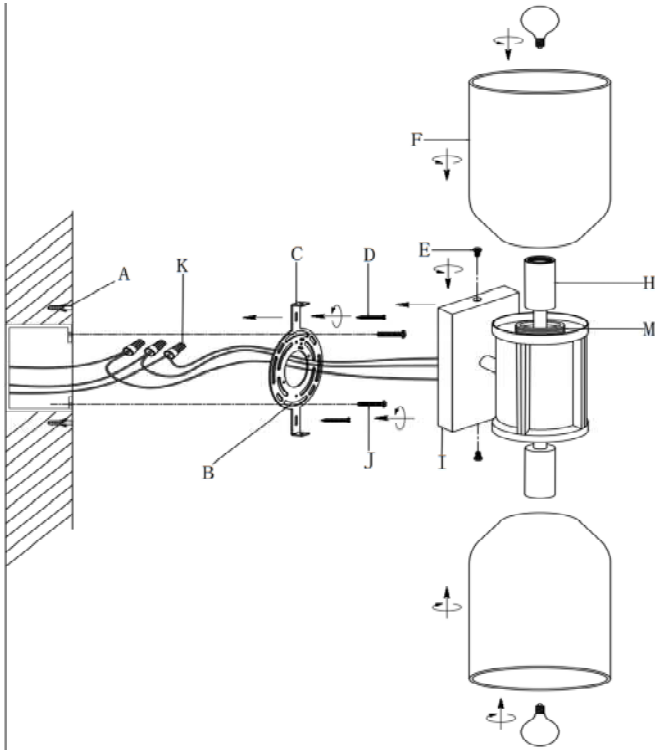

### PARTS INCLUDED:

Mounting Plate (B)	Qty: 1 Pc	Glass Shade (F)	Qty: 2 Pcs
Back Plate (C)	Qty: 1 Pc	Socket (H)	Qty: 2 Pcs
Canopy Screw (E)	Qty: 2 Pcs	Lamp Base (I)	Qty: 1 Pc

### HARDWARE INCLUDED:

Plastic anchor (A)	Qty: 2Pcs
Strengthen screw (D)	Qty: 2Pcs
Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs

### TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Drill 2 holes in wall to align with 2 holes of Back Plate(C) , insert plastic anchors(A) into drilled holes. Attach mounting plate(B) to wall or junction box using mounting screws (J). .
4. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
5. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
6. Attach and fasten Back Plate(C) to wall by screwing the 2 strengthen screws(D) provided in the plastic anchors(A)
7. Attach lamp base (I) to back plate (C) by inserting canopy screws (E) through predrilled holes then tighten using screwdriver.
8. Put and assembly the glass shade (F) to the lamp base (I) by rotating in a clockwise direction.
9. Insert 2 TYPE-G 40W or/CFL 9W or /LED 4W bulb(not included) into socket (H). DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE..
10. Restore power to junction box and test fixture.

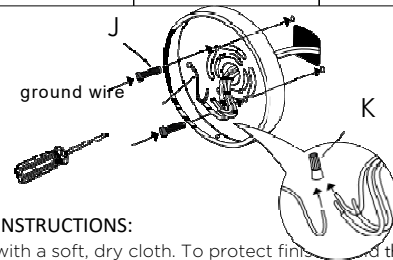

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish and the use of chemicals and household cleaners.

ARTERIO RS