


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.:DPC28	NAME: Marco Large Pendant
MATERIAL TYPE:IRON, GLASS	FINISH:ANTIQUE BRASS
SOCKET TYPE: LED	SOCKET QTY: 1
BULB WATTAGE: LED 15W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT:11.4LBS

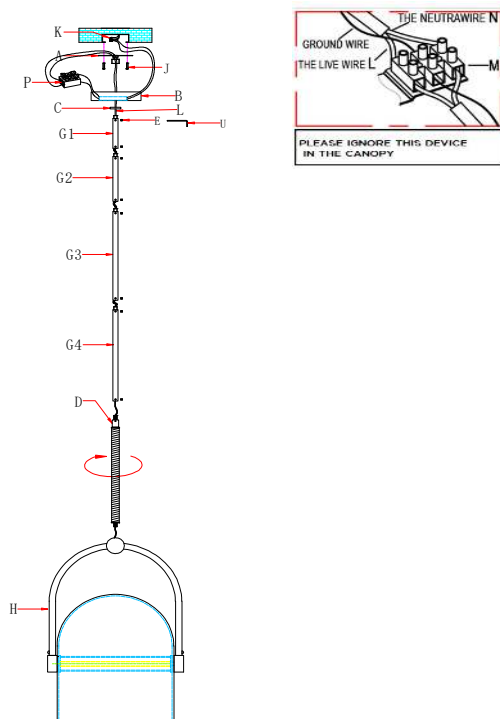

PARTS INCLUDED:

Mounting Plate(A)	Qty:1PC	Electric Wire(L)	Qty:1PC
Canopy(B)	Qty:1PC	Fast Connector (P)	Qty:1PC
Collar (C)	Qty:1PC		
The armor hose(D)	Qty:1PC		
Lamp Body (H)	Qty:1PC		
Hexangular Screw (E)	Qty:8PCS		
Rod (G1,G2,G3,G4)	Qty:4PCS		

HARDWARE INCLUDED:

Mounting Screw(J)	Qty:2PCS	Allen Wrench(U)	Qty:1PC
Plastic Wire Connector(K)	Qty:3PCS		
Green Ground Screw	Qty:1PC		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate(A) from the canopy(B) by unscrewing the collar(C).
5. Pass the power wire (L) through the armor hose (D), the rods (G4), (G3), (G2), and (G1). Screw the armor hose (D) to the lamp body (H) until tight. Repeat the same operation with rods (G4),(G3), (G2), and (G1). When you connect the rods, loosen the small hex screws (E) in the side hole first, then tighten with an Allen wrench (U) after all rods are connected. Ensure that all the hexagonal screws are tightened.
6. Put the collar loop (C) and canopy (B) onto the rod (G1) in sequence, then thread the power wire (L) through the mounting plate (A). Secure the rod (G1) to the nipple of the mounting plate (A) until it is tight.
7. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE DEVICE (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
8. Carefully inspect the pendant's fixture wires.
Neutral fixture wire: White
Hot fixture wire: Black
Ground wire: Bare wire
9. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
10. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
11. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

12. Please note that this product is suitable for 0-10V dimmer switches. Connect the purple wire (+) and the gray wire (-) to the dimmer switch as shown in Figure 1. BE SURE NO STRANDS ARE EXPOSED.

13. Connect the power wires(L) of the lamp together using the fast connector (P). Connect the black wire to the positive electrode and the white wire to the negative electrode of the fast connector (P).

14. Gently tuck the wire connections(K) neatly into the ceiling junction box.


15. Place the mounting plate(A) over the center of the ceiling junction box.

16. Align holes in mounting plate(A) with holes in junction box and attach with two mounting screws(J). Secure screws with a Phillips head screwdriver.

17. Push canopy up over the mounting plate until it is flush with the ceiling.

18. Push collar(C) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar(C) clockwise until canopy(B) is flush with the ceiling.

19. Re

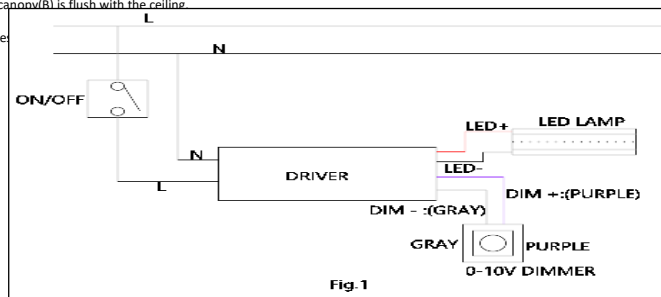

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIOS