

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.:DMC36

NAME: Leon Large Chandelier

MATERIAL TYPE: Iron,Glass

FINISH: Antique Brass,White Glazed


SOCKET TYPE: E26

SOCKET QTY: 7

BULB WATTAGE: 60W /12W CFL/10W LED

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 71.07LBS

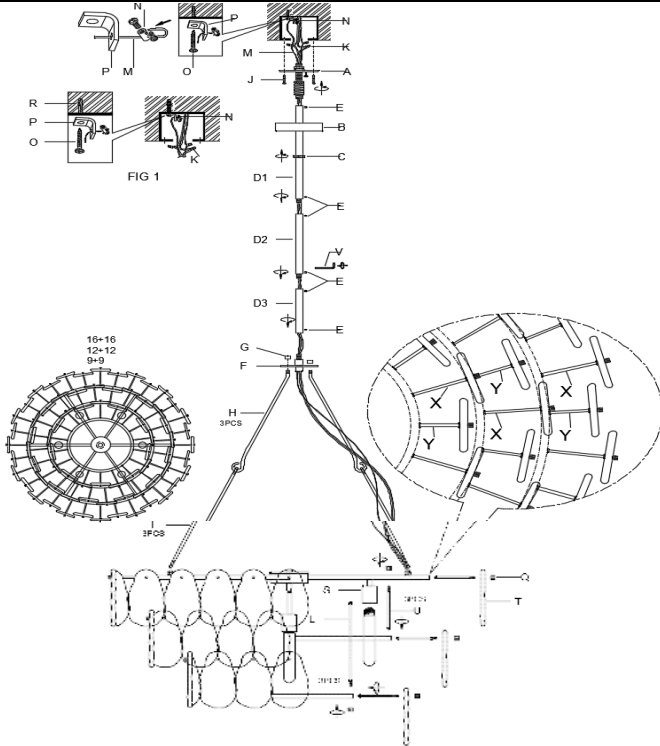

PARTS INCLUDED:

| | | | |
|--------------------|-----------|-------------------|------------|
| Mounting Plate (A) | Qty: 1Pc | Coupling (N) | Qty: 1Pc |
| Canopy (B) | Qty: 1Pc | Bracket (P) | Qty: 1Pc |
| Collar Loop (C) | Qty: 1Pcs | Turn-screw (Q) | Qty: 80Pcs |
| Rod (D) | Qty: 4Pcs | Socket (S) | Qty: 7Pcs |
| Hex Screw (E) | Qty: 8Pcs | Threaded Pipe (L) | Qty: 3Pcs |
| Lamp Body (F) | Qty: 1Pc | Threaded Pipe (U) | Qty: 3Pcs |
| Nut Caps (G) | Qty: 3Pcs | Glass (T) | Qty: 74Pcs |
| HOOK1 (H) | Qty: 3Pcs | Threaded Pipe (X) | Qty: 37Pcs |
| HOOK2 (I) | Qty: 3Pcs | Threaded Pipe (Y) | Qty: 37Pcs |
| Steel Wire (M) | Qty: 1Pc | | |

HARDWARE INCLUDED:

| | | | |
|----------------------------|------------|----------------------|-----------|
| Mounting Screws (J) | Qty : 2Pcs | Allen Wrench (V) | Qty : 1Pc |
| Plastic Wire Connector (K) | Qty : 3Pcs | Strengthen Screw (O) | Qty : 1Pc |
| Plastic Anchor (R) | Qty : 1Pc | | |

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Please be sure you have all parts indicated before you begin assembly.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Remove the mounting plate(A) from the canopy(B) by unscrewing the collar loop(C).
6. Connect lamp body (F) and canopy (B) with rod(D1,D2,D3,D4), loosen the small hex screws (E) first then tighten with allen wrench (V), after all rods are connected. Be sure all the hexagonal screws are tight enough. Note: if you want the fixture to be semi-flush mount, you only need connect lamp body (F) and canopy (B) with rod (D4).
7. Drill 1 hole inside the junction box and fasten the bracket (P) to ceiling by screwing the strengthen screws (O) into . Drilled hole as fig 1. If attach to cement ceiling, use plastic anchor (R) first then screw strengthened screws (O) into the plastic anchor (R). If attach to wood ceiling, thread strengthened screw (O) directly into ceiling, pass the steel wire (M) through the hole of bracket (P), and pass the steel wire (M) through the 2 holes of coupling (N), then fix with 2pcs screws provided in the coupling (N) as fig.1. Be sure to tighten two screws attached on the coupling (N).
8. Attach the mounting plate (A) to the outlet box by using the mounting screws (J).
9. **Carefully inspect the pendant's fixture wires. Neutral fixture wire: white hot fixture wire: black ground wire: green**
10. Wrap ground wire of lamp body and ground wire of junction box together and fasten together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
11. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
12. Attach the hot fixture wire from the pendant to the to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **Do not reverse the hot and neutral connections or safety will be compromised.**
13. Gently tuck the wire connections neatly into the ceiling junction box.
14. Attach the mounting plate (A) with nipple to the ceiling outlet box using the enclosed mounting screws (J) and tighten screws with a screwdriver.
15. Push collar loop upto canopy (B) and tighten onto nipple in mounting plate (A) by turning in a clockwise to secure canopy.
16. Remove the nut caps (G) from the hook1 (H) in a counter clockwise direction and put hook1 (H) through the hole of lamp body(F). Then tighten nut caps (G) again. Repeat the same operation on the other two hook1 (H).
17. Connect hook1(H) and hook rings by using the hook2 (I), then repeat the same operation on the other two hook2 (I).
18. Screw the 3pcs threaded pipe (L) & (U) on the lamp body metal bar, secure by turn-screw (Q) till tight.
19. Insert 7 type t 60w bulb (or CFL 13w or LED 10w, not included) into the socket (S). **Do not exceed specified wattage.**
20. Attach the glass (T) to the long threaded pipe(X) & short threaded pipe(Y) and secure by turn-screw (Q). Then repeat the same operation on the other glasses. Note: starting at the bottom of the glass.
21. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS