

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DWC92

NAME: NAYA SCONCE

MATERIAL TYPE: IRON

FINISH: LIGHT ANTIQUE BRASS HAMMER


SOCKET TYPE: E12

SOCKET QTY: 1

BULB WATTAGE: 40W or /CFL 9W or /LED 4W

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 2.4LBS

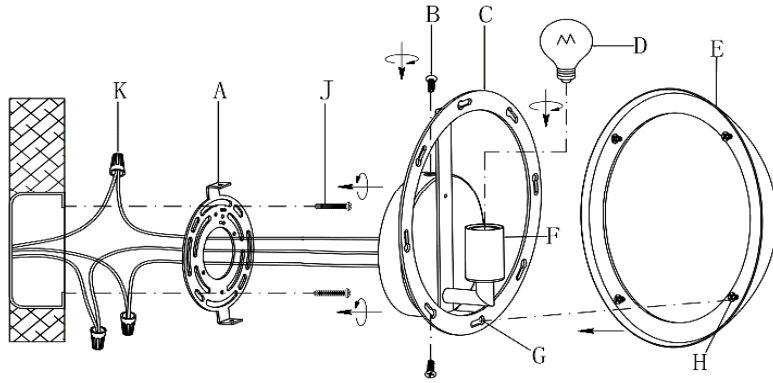

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Socket (F)	Qty: 1 Pc
Canopy Screw (B)	Qty: 2 Pcs	Metal Bracket (G)	Qty: 8 Pcs
Lamp Base (C)	Qty: 1 Pc	Mounting Screwhead (H)	Qty: 4 Pcs
Metal Shade (E)	Qty: 1 Pc		

HARDWARE INCLUDED:

Mounting Screws (J)	Qty: 2 Pcs
Plastic Wire Cap (K)	Qty: 3 Pcs


TOOLS NEEDED (Not Included):

1 Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.



We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150

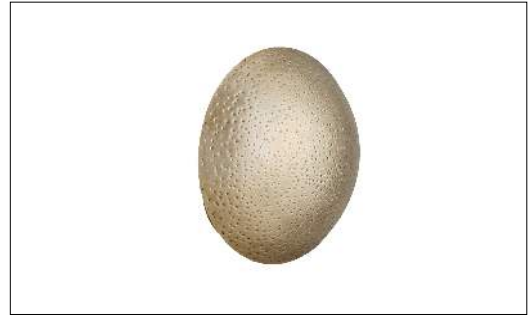

TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Attach mounting plate(A) to wall or junction box using mounting screws (J).
3. Connect ground wire from wall to ground wire from lamp using the wire caps (K).
4. Attach house wire to lamp wires as shown. Fasten the pairs together with a wire caps(K) . **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
5. Attach lamp base (C) to mounting plate (A) by inserting canopy screws (B) through predrilled holes. Then tighten by using screwdriver.
6. Insert 1 TYPE-G 40W or /CFL 9W or /LED 4W bulb(not included) into socket(F). **DO NOT EXCEED SPECIFIED WATTAGE OF SCONCE.**
7. Attach the screwhead(H) of the metal shade (E) onto the metal bracket notch (G) then rotate in clockwise direction to secure
8. Restore power to junction box and test fixture.

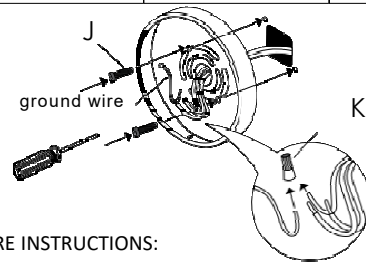

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS