

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DPC38

NAME: Berkley Pendant

MATERIAL TYPE: IRON, CRYSTAL

FINISH: Antique Brass/ Clear



SOCKET TYPE: LED

SOCKET QTY: 1

BULB WATTAGE: LED 6.5W

VOLTAGE: 120-277V

ITEM NET WEIGHT: 11.5lbs

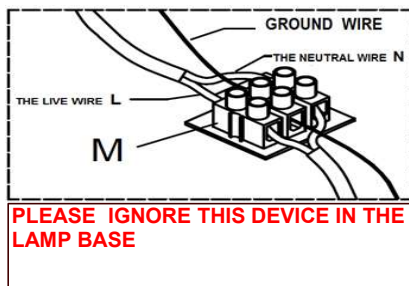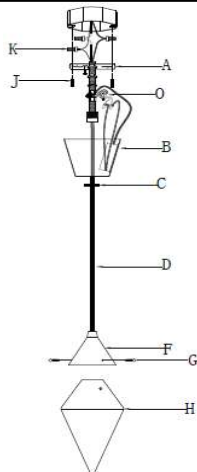

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1pc	Lamp Body (F)	Qty: 1pc
Canopy (B)	Qty: 1pc	Thumb Screw (G)	Qty: 3pcs
Collar Loop (C)	Qty: 1pc	Crystal (H)	Qty: 1pc
The Cord (D)	Qty: 1pc	The Figure-8 Buckle (O)	Qty: 1pc

HARDWARE INCLUDED:

Mounting Screws(J)	Qty: 3pcs	PlasticWireConnector(K)	Qty: 3pcs
--------------------	-----------	-------------------------	-----------

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

For customer service questions call 1-800-338-2150



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove the mounting plate(A) from the canopy(B) by turning collar loop(C) in a counter clockwise direction.
5. Carefully inspect the pendant's fixture wires. Neutral fixture wire: White; Hot fixture wire: Black; Ground wire: Green
6. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
7. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire nut and wrap the connection with electrical tape.
8. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a wire nut and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. **PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE DEVICE (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Remove the lamp body from the packaging, adjust the figure-8 buckle (O) and the cord (D) to a suitable size (Note: During the adjustment process, loosen one end of the wire slightly to facilitate adjustment), and then tighten the figure-8 buckle (O).
12. Attach the mounting plate(A) with nipple to the ceiling outlet box using the enclosed mounting screws(J) and tighten screws with a screwdriver.
13. Push collar loop(C) through hole in canopy and thread onto nipple on mounting plate(A). Secure by turning collar clockwise until canopy is flush with the ceiling.
14. Then place Crystal(H) into lamp body by screwing the Thumb Screw(G).
15. Place the fixture wire through chain exit from the canopy.
16. Restore power to the junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

ARTERIO RS

WARNING:

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE.

DO NOT APPLY POWER AT THE BREAKER OR SWITCH
UNTIL THE FIXTURE IS FULLY INSTALLED. FAILURE TO
FOLLOW INSTRUCTIONS MAY RESULT IN
MALFUNCTION AND WILL VOID WARRANTY.