

## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO.:DPC41

NAME:Noble Drop Pendant

MATERIAL TYPE: Iron,Crystal

FINISH: antique brass,Crystal


SOCKET TYPE: E12

SOCKET QTY: 1

BULB WATTAGE: 60W /13W CFL/8W LED

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 8.55 LBS

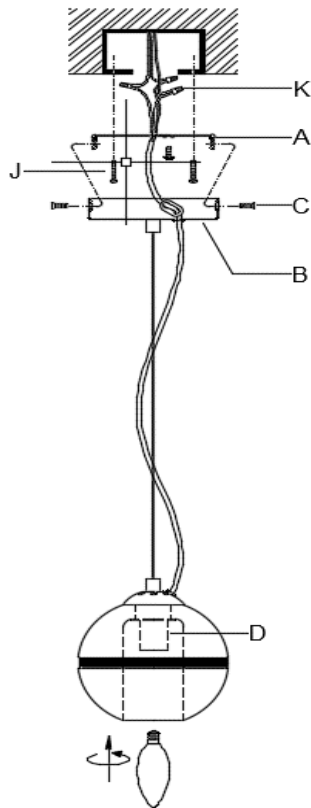

### PARTS INCLUDED:

|                      |           |                  |           |
|----------------------|-----------|------------------|-----------|
| Mounting Plate ( A ) | Qty: 1 Pc | Set Screws ( C ) | Qty: 2 Pc |
| Canopy ( B )         | Qty: 1 Pc | Socket ( D )     | Qty: 1 Pc |

### HARDWARE INCLUDED:

|                            |            |
|----------------------------|------------|
| Mounting Screws ( J )      | Qty : 2Pcs |
| Plastic Wire Connector (K) | Qty : 3Pcs |

### TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Please be sure you have all parts indicated before you begin assembly.
4. Gently pull wiring down from ceiling junction box and allow to hang.
5. Unscrew the pre-assembled Set Screws (C) from mounting plate(A).
6. **Carefully inspect the pendant's fixture wires. Neutral fixture wire: white hot fixture wire: black ground wire: green**
7. Wrap ground wire of lamp body and ground wire of junction box together and fasten together with a plastic wire connector (K) and wrap the connection with electrical tape. If your outlet box does not have a ground wire, insert the green ground screw into the mounting plate (A) facing down, and wrap the fixture's bare ground wire around the ground screw.
8. Attach the neutral fixture wire from the pendant to the neutral junction box wire (usually white). Fasten each together with a wire connector(K) and wrap the connection with electrical tape.
9. Attach the hot fixture wire from the pendant to the hot junction box wire (usually black). Fasten each together with a plastic wire connector (K) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **Do not reverse the hot and neutral connections or safety will be compromised.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Attach the mounting plate (A) to the outlet box using the mounting Screws(J) and tighten mounting screws (J) with a screwdriver.
12. Attach canopy (B) to the mounting plate (A) using 2pcs set screws(C) and tighten set screws(C) with a screwdriver.
13. Insert 1 type B 60w bulb (or/cfl 13w or/led 8w ,not incl) into the socket (D). **Do not exceed specified wattage.**
14. Restore power to the junction box and test fixture.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS