


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO.: DPC31	NAME: Tyche Pendant
MATERIAL TYPE: Iron / resin	FINISH: English Bronze
SOCKET TYPE: LED	SOCKET QTY: 1PC
BULB WATTAGE: LED 12 W /2700K / 90+CRI	
VOLTAGE: 110-120V	ITEM NET WEIGHT:14.1 LBS

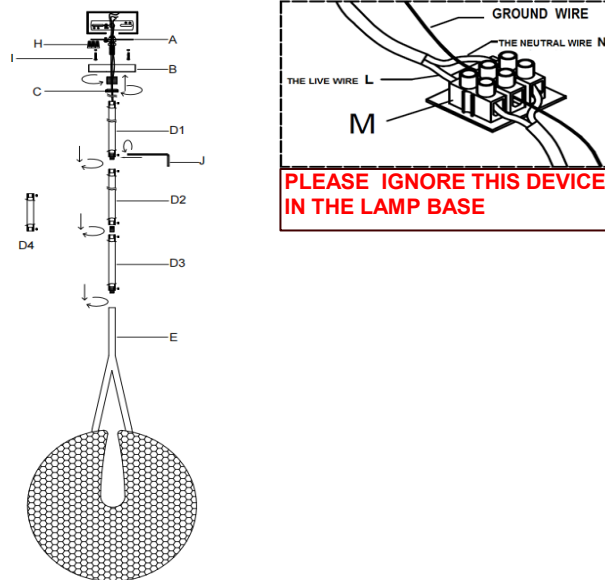

PARTS INCLUDED:

Mounting Plate (A)	Qty: 1
Canopy (B)	Qty: 1
Collar Loop (C)	Qty: 1
Rods (D1/2/3/4)	Qty: 4
Assembly Part (E)	Qty: 1

INCLUDED ASSEMBLY HARDWARE



HARDWARE INCLUDED:

Mounting Screws	Qty: 2	Canopy Screws	Qty: 4
Plastic Wire Connector	Qty: 1	Hexangular Screw	Qty: 1
Green Ground Screw	Qty: 1	Allen Wrench	Qty: 1

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read and completely before beginning installation .

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. REMOVE ALL PACKING CONTENTS FROM THE CARTON CAREFULLY
 2. REMOVE ALL PARTS FROM THE PACKAGE(S) CAREFULLY
 3. REMOVE THE MOUNTING PLATE(A)FROM THE CANOPY(B)BY TURNING COLLAR LOOP(C) IN A COUNTER CLOCKWISE DIRECTION.
 - 4.SCREW THE ROD(D3) TO THE TOP ASSEMBLY PART(E) AND TIGHTEN HEXANGULAR SCREW IN THE SIDE DESIRE HOLE BY ALLEN WRENCH(J) .REPEAT THE SAME OPERATION ON THE ROD (D1)AND (D2).F THE CEILING IS HIGH ENOUGH , PLS ASSEMBLE THE ROD(D4)IF NEED.
 - 5.ATTACH THE GROUND WIRE FROM THE FIXTURE TO THE GROUND JUNCTION BOX WIRE FROM THE OUTLET (USUALLY GREEN)OR BARE WIRE). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF YOUR OUTLET BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW INTO THE MOUNTING PLATE (A) FACING DOWN, AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND THE GROUND SCREW.IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
 - 6.CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN EACH TOGETHER WITH A WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO STRANDS ARE EXPOSED.
 - 7.CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN EACH TOGETHER WITH A PLASTIC WIRE CONNECTOR (H) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED
 - 8.GENTLY TUCK THE WIRE CONNECTIONS NEATLY INTO THE CEILING JUNCTION BOX
 - 9.ATTACH THE MOUNTING PLATE (A) WITH NIPPLE TO THE CEILING OUTLET BOX USING THE ENCLOSED MOUNTING SCREWS (I) AND TIGHTEN SCREWS WITH A SCREWDRIVER.
 - 10.PUSH COLLAR LOOP IN CANOPY (B) AND THREAD ONTO NIPPLE IN MOUNTING PLATE (A) BY TURNING IN A CLOCKWISE
 - 11.SCREW ROD (D1) TO CANOPY (B), USING HEXANGULAR SCREW AND ALLEN WRENCH(J) BE SURE ALL THE HEXANGULAR SCREWS ARE TIGHT ENOUGH.
 - 12.PUSH CANOPY UP OVER THE MOUNTING PLATE UNTIL IT IS FLUSH WITH THE CEILING .
 - 13.PUSH COLLAR THROUGH HOLE IN CANOPY AND THREAD ONTO NIPPLE ON THE MOUNTING PLATE.SECURE BY TURNING COLLAR CLOCKWISE UNTIL CANOPY IS FLUSH WITH THE CEILING.
 - 14.RESTORE POWER TO JUNCTION BOX AND TEST FIXTURE.
 - 15.PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE WIRE TO THE DEVICE (M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
- DO NOT EXCEED SPECIFIED MAX WATTAGE.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS

WARNING:

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE.

**DO NOT APPLY POWER AT THE BREAKER
OR SWITCH UNTIL FIXTURE IS FULLY INSTALLED.
FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT
IN MALFUNCTION AND WILL VOID WARRANTY.**