


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO. : DLC56	NAME: GISELLE LINEAR MULTI-PORT CHANDELIER
MATERIAL TYPE: IRON, GLASS	FINISH: ANTIQUE BRSS, SMOKE
SOCKET TYPE: E12	SOCKET QTY: 9
BULB WATTAGE: TYPE T 25W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT: 45.3LBS

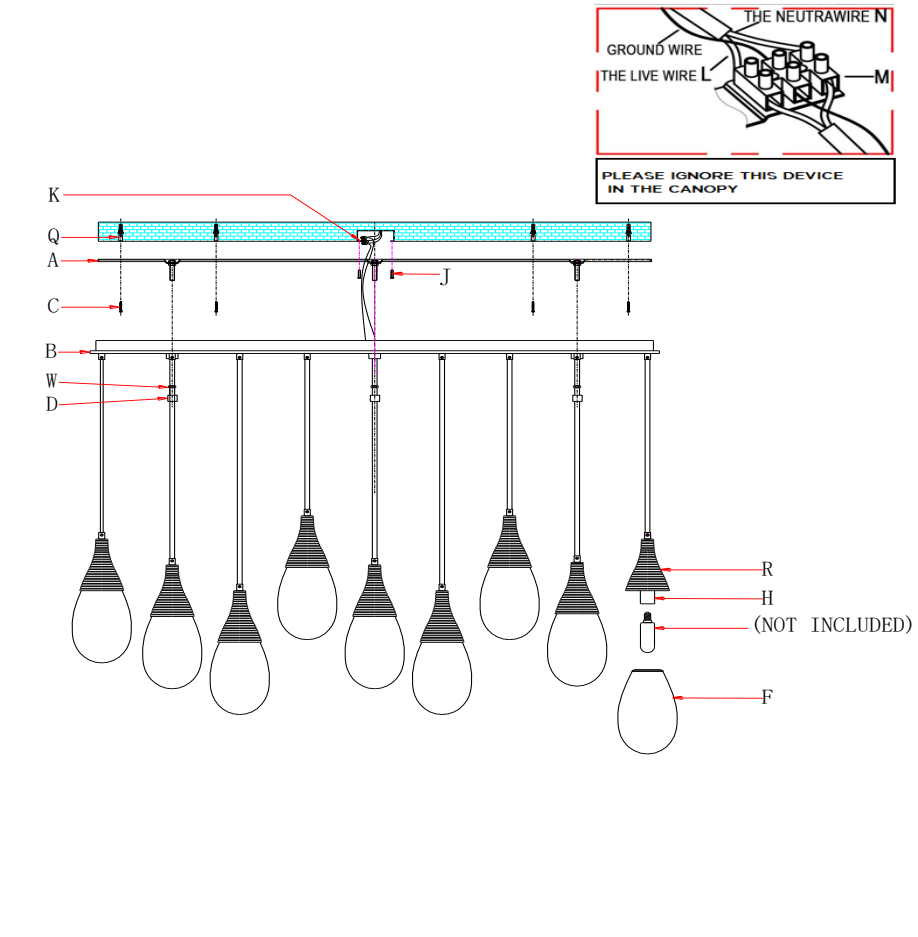

PARTS INCLUDED:			
Mounting Plate (A)	Qty:1PC	Socket (H)	Qty:9PCS
Canopy (B)	Qty:1PC	Anchor (Q)	Qty:10PCS
Strengthen Screw(C)	Qty:10PCS	Dome cap (R)	Qty:9PCS
Final (D)	Qty:3PCS	Nut (W)	Qty:3PCS
Glass shade (F)	Qty:9PCS		
HARDWARE INCLUDED:			
Mounting Screw (J)	Qty:2PCS		
Wire Cap (K)	Qty:3PCS		
Green Ground Screw	Qty:1PC		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
 2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
 3. Gently pull wiring down from ceiling junction box and allow to hang.
 4. Remove the mounting plate(A) from the canopy (B) by loosening the nut(W) and the final(D).
 5. Position fixture in desired location on ceiling. the mounting plate features (10) holes for screw mounting. Mark these spots on the ceiling with a pencil to drill holes. Drill 10 holes on these spots and insert anchors(Q) into drilled holes.
 6. Align holes in mounting plate(A) with holes in junction box and attach with two mounting screws(J) and ten strengthen screw(C). Secure screws with a Phillips head screwdriver.
 7. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE TERMINAL BLOCK(M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
 8. Pull the electrical cord of "J box "through the exit hole of the mounting plate(A).
 9. Carefully inspect the fixture wires.
Neutral fixture wire: Nickel
Hot fixture wire: It has a smooth covering
Ground wire: Bare wire
 10. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
 11. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
 12. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. Gently tuck the wire cap(K) neatly into the ceiling junction box.
 14. Attach the canopy (B) to the mounting plate (A) using the nut(W) and the final(D), and secure it until tight.
 15. Insert 9 TYPE T 25W bulbs (or /CFL 12W OR /LED 10W, not included) into the socket(H).
- DO NOT EXCEED THE SPECIFIED WATTAGE.
- 16.Attach the glass shade (F) to the dome cap (R) by turning in a clockwise direction until tight.
 17. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS