

# ASSEMBLY INSTRUCTIONS

## ITEM DESCRIPTION:

ITEM NO.:DLC51

NAME:FLEURANA CHANDELIER

MATERIAL TYPE:IRON,GLASS

FINISH:ANTIQUE BRASS, CLEAR SEEDY


SOCKET TYPE: LED

SOCKET QTY: 16


BULB WATTAGE: 45W /2700K/90+CRI

VOLTAGE: 100V-130V

ITEM NET WEIGHT:36.7 LBS

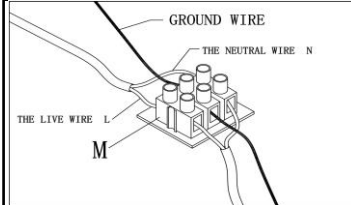

**PLEASE IGNORE THIS  
DEVICE IN THE CANOPY**

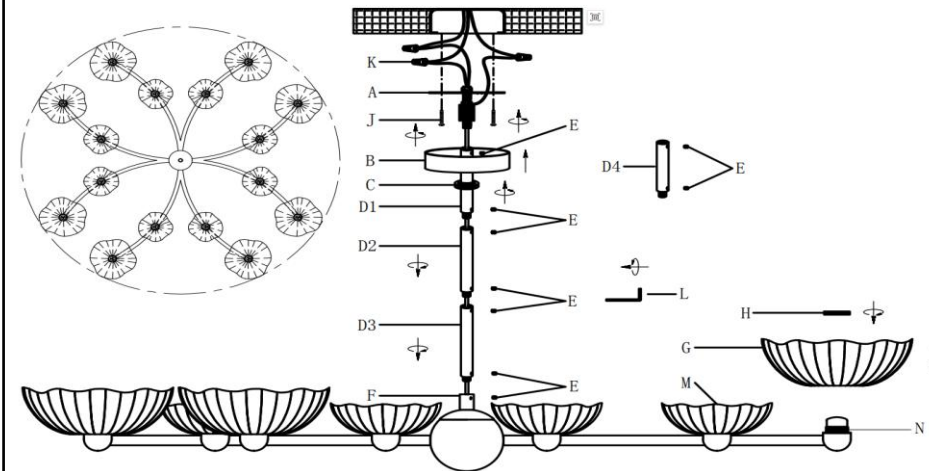

## PARTS INCLUDED:

Mounting Plate (A)	Qty: 1 Pc	Lamp Assembly (F)	Qty: 1 Pc
Canopy (B)	Qty: 1 Pc	LG Glass Shade (G)	Qty: 8 Pcs
Collar Loop (C)	Qty: 1 Pc	Socket Ring (H)	Qty: 16 Pcs
Rod (D)	Qty: 4 Pcs	SM Glass Shade (M)	Qty: 8 Pcs
Hex Screw (E)	Qty: 9 Pcs	Socket (N)	Qty: 16 Pcs

## HARDWARE INCLUDED:

Mounting Screws (J)	Qty : 2 Pcs	Canopy Screws	
Plastic Wire Connector (K)	Qty : 3 Pcs	Allen Wrench (L)	Qty: 1 Pc
Green Ground Screw	Qty : 1 Pc		

## TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

## TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove mounting plate from the canopy by unscrewing the collar.
5. Connect the lamp assembly(F) and canopy(B) with rod(D1,D2,D3,D4), when you connect the rods, loosen the small hex screws(E) first then tighten with Allen wrench(L) after all rods are connected. be sure all the hex screws(E) are tight enough.
6. Attach the large glass shade (G) and small glass shade (M) onto the socket (N). then tighten with socket ring (H) to secure the glass shade carefully.
7. **Please pay special attention that you do not need to connect the terminal block(M) in the canopy. It is used for the wire connection for EURO-market.**
8. Carefully inspect the chandelier's fixture wires.  
**Neutral fixture wire: White, Hot fixture wire: Black, Ground wire: Green**
9. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire connector (K) and wrap the connection with electrical tape.
10. Attach the neutral fixture wire from the chandelier to the neutral junction box wire (usually white). Fasten each together with a wire connector (K) and wrap the connection with electrical tape.
11. Attach the hot fixture wire from the chandelier to the hot junction box wire (usually black). Fasten each together with a wire connector (K) and wrap the connection with electrical tape. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
12. Gently tuck the wire connections neatly into the ceiling junction box.
13. Place the mounting plate(A) over the center of the ceiling junction box.
14. Align holes in mounting plate(A) with holes in junction box and attach with two mounting bolts. Secure bolts with a Phillips head screwdriver.
15. Push canopy (B) up over the mounting plate(A) until it is flush with the ceiling.
16. Push collar loop (C) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar loop (C) clockwise until canopy(B) is flush with the ceiling.
17. Restore power to junction box and test fixture.

## CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS

# **WARNING:**

## **INSTALL BEFORE RESTORING POWER AT THE BREAKER**

---

LOW VOLTAGE POWER INSIDE.

DO NOT APPLY POWER AT THE BREAKER OR SWITCH  
UNTIL THE FIXTURE IS FULLY INSTALLED. FAILURE TO  
FOLLOW INSTRUCTIONS MAY RESULT IN