


ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION:

ITEM NO. : DLC49	NAME: VETRINA LINEAR CHANDELIER
MATERIAL TYPE: IRON, GLASS	FINISH: ENGLISH BRONZE, BRONZE
SOCKET TYPE: E12	SOCKET QTY: 6
BULB WATTAGE: TYPE G 60W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT:46LBS

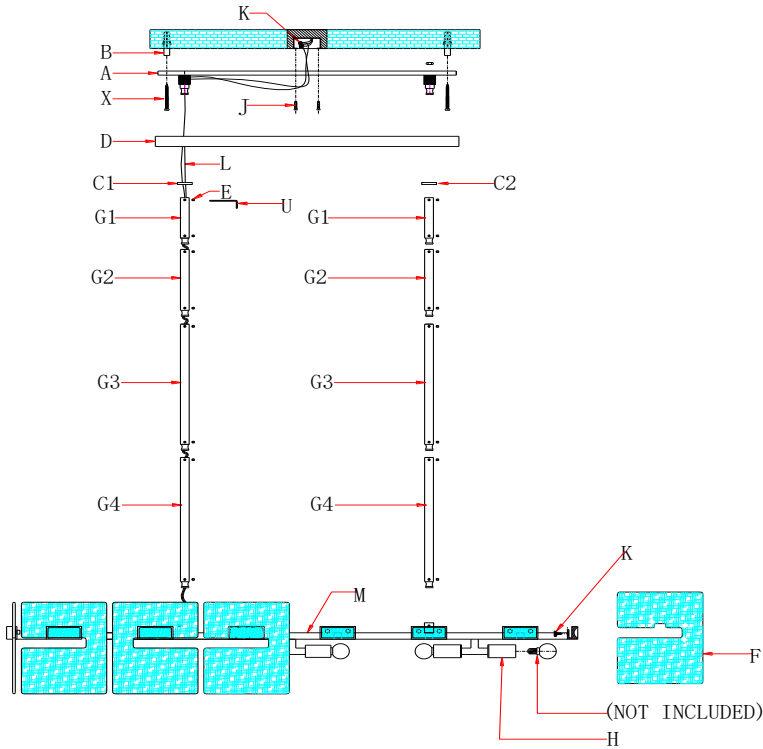

PARTS INCLUDED:

Mounting Plate (A)	Qty:1PC	Socket (H)	Qty:6PCS
Anchors (B)	Qty:2PCS	Power Wire (L)	Qty:1PC
Collar ring (C1, C2)	Qty:2PCS	Lamp Body (M)	Qty:1PC
Canopy (D)	Qty:1PC	Thumb-screw (K)	Qty:28PCS
Hex Screw (E)	Qty:32PCS		
Glass Shade (F)	Qty:14PCS		
Rod (G1, G2, G3, G4)	Qty:8PCS		

HARDWARE INCLUDED:

Mounting Screw (J)	Qty:2PCS	Allen Wrench (U)	Qty:1PC
Wire Cap (K)	Qty:3PCS	Strengthen screw (X)	Qty:2PCS
Green Ground Screw	Qty:1PC		

TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver
- Allen Wrench

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
 2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
 3. Gently pull wiring down from ceiling junction box and allow to hang.
 4. Remove mounting plate(A) from the canopy(D) by unscrewing the collar (C1),(C2),
 5. Position fixture in a desired location on ceiling. the mounting plate features (2) holes for screw mounting. Mark these spots on the ceiling with a pencil to drill holes. Drill 2 holes on these spots and insert anchors(B) into drilled holes.
 6. Attach the lamp body (M) and canopy(D) with rod(G1,G2,G3,G4). When you connect the rods, loosen the small hex screws(E) first then tighten with allen wrench(U). After all rods are connected. Be sure all the hexangular screws(E) are tight enough.
 7. Align holes in mounting plate(A) with holes in junction box and attach with two mounting screws(J) and two strengthen screw(X). Secure screws with a Phillips head screwdriver.
 8. Pull the electrical cord of "J box"through the exit hole of the mounting plate(A).
 9. Carefully inspect the fixture wires.
Neutral fixture wire: Nickel
Hot fixture wire: It has a smooth covering
Ground wire: Bare wire
 10. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
 11. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
 12. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. Gently tuck the wire cap(K) neatly into the ceiling junction box.
 14. Push canopy(D) up over the mounting plate(A) until it is flush with the ceiling.
 15. Push collar(C1) (C2) through hole in canopy(B) and thread onto nipple on the mounting plate(A). Secure by turning collar(C1) (C2) clockwise until canopy(B) is flush with the ceiling.
 16. Insert 6 TYPE G 60W bulbs (or /CFL 12W OR /LED 10W, not included) into socket(H).
- DO NOT EXCEED THE SPECIFIED WATTAGE.
17. Place the glass shade (F) on the lamp body (M) gently and secure it with the thumb screws (K) as shown.
 18. Restore power to junction box and test fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS