


## ASSEMBLY INSTRUCTIONS

### ITEM DESCRIPTION:

ITEM NO. : DMC38	NAME: OVAL MULTI DROP CHANDELIER
MATERIAL TYPE: IRON, GLASS	FINISH: ANTIQUE BRSS, OPAL
SOCKET TYPE: E12	SOCKET QTY: 6
BULB WATTAGE: TYPE B 60W	
VOLTAGE: 100V-120V	ITEM NET WEIGHT: 44LBS

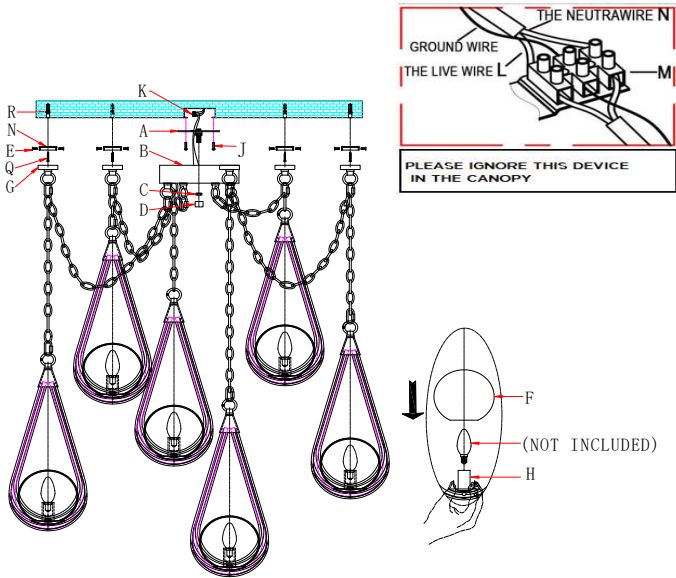

### PARTS INCLUDED:

Mounting Plate(A)	Qty:1PC	Canopy (G)	Qty:6PCS
Canopy (B)	Qty:1PC	Socket(H)	Qty:6PCS
Nut (C)	Qty:1PC	mounting plate(N)	Qty:6PCS
Final (D)	Qty:1PC	Anchors (R)	Qty:6PCS
Screws (E)	Qty:12PCS	Strengthened screw (Q)	Qty:6PCS
Glass shade (F)	Qty:6PCS		

### HARDWARE INCLUDED:

Mounting Screw(J)	Qty:2PCS
Wire Cap(K)	Qty:3PCS
Green Ground Screw	Qty:1PC

### TO INSTALL YOU WILL NEED:

- 2 people recommended
- Phillips Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.



### TO ASSEMBLE:

1. Shut off the main electrical supply from the main fuse box/ circuit breaker.
2. Carefully unpack all fixture parts and hardware and lay them on a soft surface for assembly.
3. Gently pull wiring down from ceiling junction box and allow to hang.
4. Remove the mounting plate(A) from the canopy (B) by loosening the nut(C) and final(D).
5. Align holes in mounting plate(A) with holes in junction box and attach with two mounting screws(J) Secure screws with a Phillips head screwdriver.
6. Position the mounting plate(N) at the desired location on the ceiling, and mark 6 spots with a pencil to drill holes. Drill 6 holes at the marked spots and insert the anchors (R) into the drilled holes. Fix the mounting plate(N) with a strengthened screw (Q) by screwing it into the anchor (R). Attach the back plate (G) to the mounting plate (N) using 2 screws (E), and tighten them with a screwdriver.
7. PLEASE PAY SPECIAL ATTENTION TO THE FACT THAT YOU DO NOT NEED TO CONNECT THE TERMINAL BLOCK(M). IT IS USED FOR WIRE CONNECTIONS IN THE EUROPEAN MARKET.
8. Pull the electrical cord of "J box" through the exit hole of the mounting plate(A).
9. Carefully inspect the chandelier's fixture wires.  
Neutral fixture wire: Nickel  
Hot fixture wire: It has a smooth covering  
Ground wire: Bare wire
10. Wrap ground wire of lamp assembly and ground wire of junction box together and fasten together with a wire nut and wrap the connection with electrical tape.
11. Attach the neutral fixture wire from the chandelier to the neutral junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
12. Attach the hot fixture wire from the chandelier to the hot junction box wire. Fasten each together with a wire nut and wrap the connection with electrical tape.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
13. Gently tuck the wire cap(K) neatly into the ceiling junction box.
14. Attach the canopy (B) to the mounting plate (A) using the nut(C) and the final(D), and tighten them .
15. Insert 6 TYPE B 60W bulbs (or /CFL 12W OR /LED 10W, not included) into socket(H).
- DO NOT EXCEED THE SPECIFIED WATTAGE.
16. Press the spring below socket(H) until the glass shade(F) fits inside.
17. Restore power to junction box and test fixture.

### CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

ARTERIO RS