

ASSEMBLY INSTRUCTIONS

ITEM DESCRIPTION: Palmira Sconce


ITEM NO.: DWI30

MATERIAL TYPE: BRASS FINISH: Vintage Brass

SOCKET TYPE: E26 BULB SOCKET QTY: 1

WATTAGE: 40 W

VOLTAGE: 110-120 V ITEM NET WEIGHT: 5.18 LBS

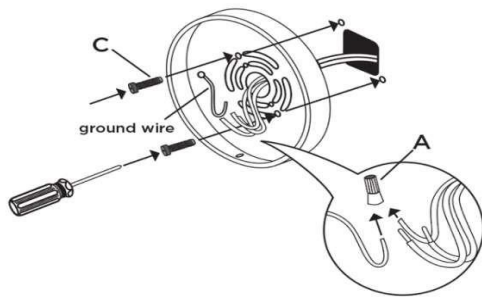

TO ASSEMBLE:

- Shut off the main electrical supply from the main fuse box/circuit breaker.
- Attach mounting plate to wall or junction box using mounting screws (C).
- Connect ground wire from wall to ground wire from lamp using wire caps (A).
- Attach house wire to lamp wires as shown. Fasten the pairs together with a wire cap.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- Attach front face of light to back plate by inserting canopy screws (B) through predrilled holes in front face and into back plate as shown. Tighten using screwdriver.
- Insert light bulb.

PARTS INCLUDED:

Mounting Plate Qty: 1

Back Plate Qty: 1

HARDWARE INCLUDED:

Mounting Screws - Qty: 2

Plate Screw - Qty: 4

Plastic Wire Connect - Qty: 2

Green Ground Screw - Qty: 1

TOOLS NEEDED (Not Included):

Screwdriver

These instructions are provided for safety. It is very important that they are read carefully and completely before beginning installation of this chandelier.

We strongly suggest that all hard-wired fixtures must be installed by a professional electrician.

CARE INSTRUCTIONS:

- Wipe with soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.

For customer service questions call 1-800-338-2150

A R T E R I O R S

