

ASSEMBLY INSTRUCTIONS

ARTERIORS


ITEM DESCRIPTION:

ITEM NO.: DWC109	**NAME:** Alouette Wall Sconce
MATERIAL TYPE: IRON, ALABASTER	**FINISH:** ANTIQUE BRASS, WHITE
SOCKET TYPE: Integrated LED	**SOCKET QTY:** 2
BULB WATTAGE: 3W	**VOLTAGE:** 100V-120V
ITEM NET WEIGHT: 4.6 LBS	

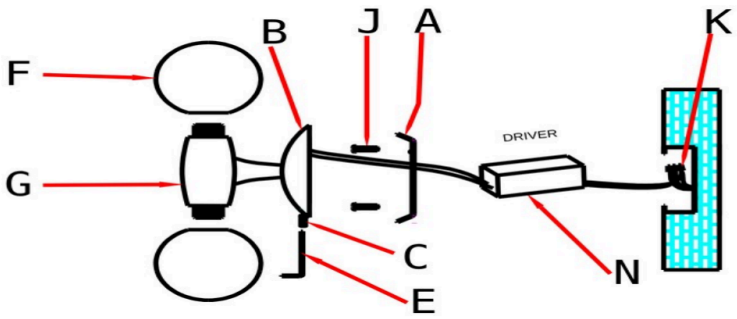

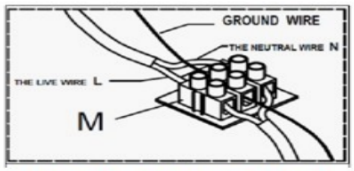

PLEASE IGNORE THIS DEVICE ON THE BACK PLATE.

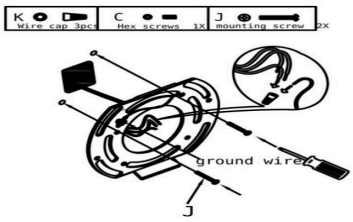

PARTS INCLUDED:

Mounting Plate (A)	1	Back Plate (B)	1
Hex Screw (C)	1	Mounting Screw (J)	2
Alabaster Shade (F)	2	Main Body (G)	1
Driver (N)	1		

HARDWARE INCLUDED:

Green Ground Screw	1	Wire Connector (K)	3
Allen Wrench (E)	1		

TO INSTALL YOU WILL NEED:

- Phillips Screwdriver



TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Remove the mounting plate (A) from the back plate (B) by unscrewing the hex screw (C) with the Allen wrench (E).
4. Gently pull the wires down from the junction box and let them hang.
5. Connect the fixture ground wire (bare) to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. If there is no ground wire in the box, attach the fixture ground wire to the green ground screw on the mounting plate (A).
6. Connect the white (neutral) fixture wire to the white junction box wire with a wire connector (K) and wrap with electrical tape.
7. Connect the black (hot) fixture wire to the black junction box wire with a wire connector (K) and wrap with electrical tape. Make sure no wire strands are exposed.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

8. Gently tuck the driver (N) and all connections into the junction box.
9. Align the mounting plate (A) with the junction box and attach it with the two mounting screws (J), using a Phillips screwdriver. The fixture can be mounted vertically or horizontally.
10. The 3-wire terminal block (M) is for European wiring only. Do not connect any wires to it.
11. Attach the back plate (B) to the mounting plate (A) and tighten the hex screw (C) with the Allen wrench (E).
12. Screw each alabaster shade (F) clockwise onto the main body (G) until snug.
13. Restore power at the breaker and test the fixture.

DIMMING:

Compatible with TRIAC dimmers. Recommended: Lutron DVLC-153P or Lutron DVELV-300P.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150