
ASSEMBLY INSTRUCTIONS


ARTERIORS


ITEM DESCRIPTION:

ITEM NO.: DPS11	**NAME:** Bilal Pendant
MATERIAL TYPE: COCO	**FINISH:** IVORY
SOCKET TYPE: Type A – Standard	**SOCKET QTY:** 1
BULB WATTAGE: 60W	**VOLTAGE:** 120V
ITEM NET WEIGHT: 12.57 LBS	

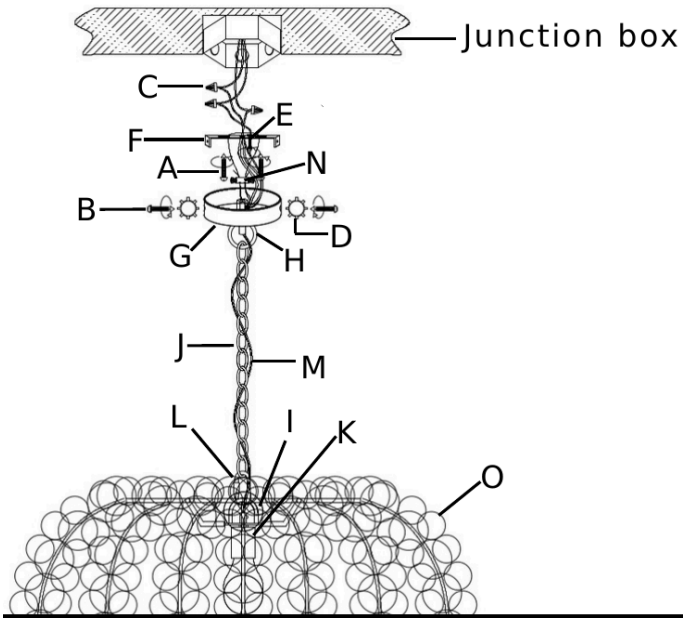



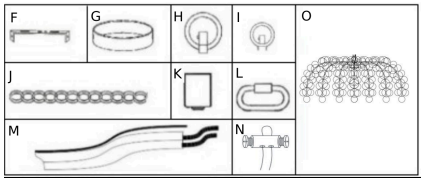

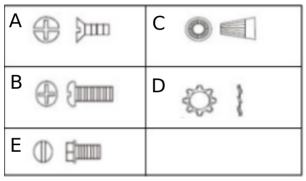

PARTS INCLUDED:

Mounting Plate (F)	1	Socket (K)	1
Canopy (G)	1	Quick Link (L)	2
Canopy Loop (H)	1	Fixture Wire (M)	1
Pendant Loop (I)	1	Safety Cable (N)	1
Chain (J)	1	Shade (O)	1

HARDWARE INCLUDED:

Outlet Box Screw (A)	2	Star Washer (D)	2
Canopy Screw (B)	2	Green Ground Screw (E)	1
Plastic Wire Connector (C)	3		

TO INSTALL YOU WILL NEED:

• 2 people recommended • Phillips screwdriver • Pliers • Ladder • Wire cutter / stripper • Electrical tape

TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Gently pull the wires down from the junction box and let them hang.
4. Remove the mounting plate (F) from the canopy (G) by unscrewing the canopy screws (B).

NOTE: The safety cable (N) holds the fixture while the branch circuit connections are inspected after installation. The fixture wires must be longer than the safety cable.

5. Identify the fixture wires. Neutral: ridges molded on the outside insulation. Hot: smooth insulation. Ground: bare copper wire.
6. Wrap the fixture's bare ground wire around the green ground screw (E) on the mounting plate (F) and tighten the screw. Then connect it to the junction box ground wire (usually green or bare) with a plastic wire connector (C) and wrap with electrical tape. Make sure no wire strands are exposed.
7. Connect the neutral fixture wire to the neutral junction box wire (usually white) with a plastic wire connector (C) and wrap with electrical tape.
8. Connect the hot fixture wire to the hot junction box wire (usually black) with a plastic wire connector (C) and wrap with electrical tape.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

9. Gently tuck the wire connections into the junction box.
10. Place the mounting plate (F) over the center of the junction box, align the holes and attach it with the two outlet box screws (A), using a Phillips screwdriver.
11. Attach the canopy (G) to the mounting plate (F): align the holes on the sides of the canopy with the holes on the mounting plate, then insert the canopy screws (B) with star washers (D) and tighten with a screwdriver. Do not over-tighten.
12. Insert one Type A bulb, max 60W (or 13W CFL / 9W LED), not included, into the socket (K). Do not exceed the maximum wattage.
13. Restore power at the breaker and test the fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. This product must be installed in accordance with applicable installation codes by a person familiar with its construction and operation and the hazards involved. For indoor use in dry locations only. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150