

# ASSEMBLY INSTRUCTIONS

ARTERIORS

## ITEM DESCRIPTION:

| | |
|---|---|
| **ITEM NO.:** DWC104 | **NAME:** Estelle Wall Sconce |
| **MATERIAL TYPE:** IRON / ALABASTER | **FINISH:** CHATTERED AB, AB / WHT |
| **SOCKET TYPE:** Integrated LED | **SOCKET QTY:** 1 |
| **BULB WATTAGE:** 5W | **VOLTAGE:** 100V-120V |
| **ITEM NET WEIGHT:** 7.5 LBS | |

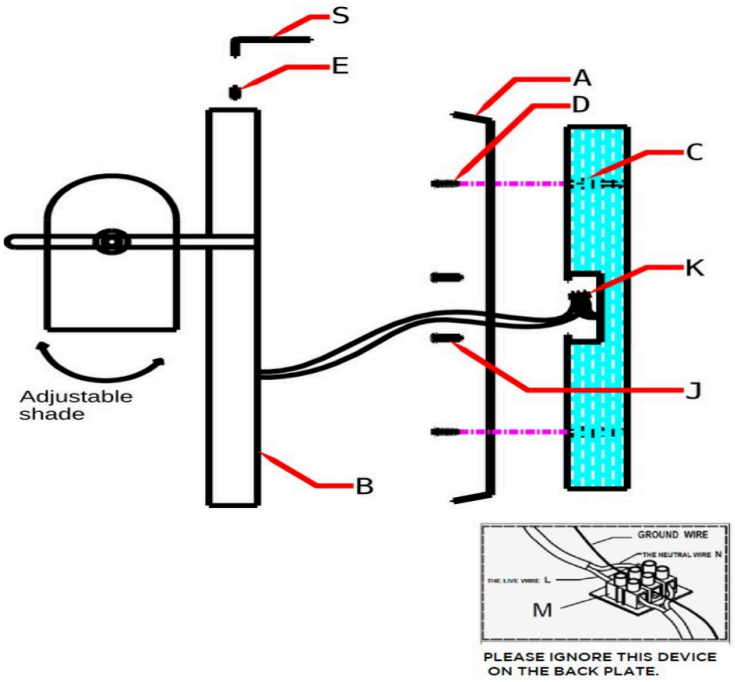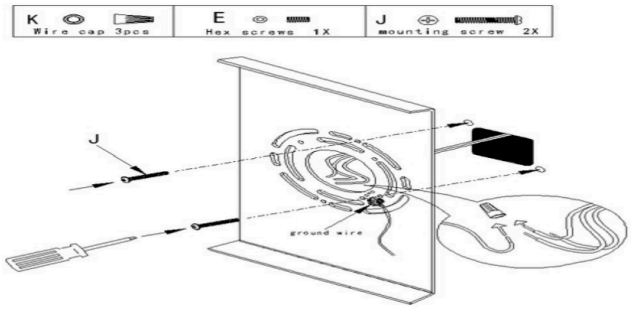


## PARTS INCLUDED:


| | | | |
|---|---|---|---|
| Mounting Plate (A) | 1 | Back Plate (B) | 1 |
| Anchor (C) | 2 | Mounting Screw (J) | 2 |
| Strengthened Screw (D) | 2 | Hex Screw (E) | 1 |

## HARDWARE INCLUDED:

| | | | |
|---|---|---|---|
| Green Ground Screw | 1 | Wire Connector (K) | 3 |
| Allen Wrench (S) | 1 | | |

## TO INSTALL YOU WILL NEED:

· Phillips Screwdriver

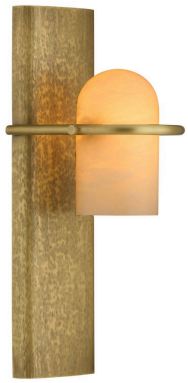

## TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Remove the mounting plate (A) from the back plate (B) by unscrewing the hex screw (E) with the Allen wrench (S).
4. Hold the mounting plate (A) in position on the wall and mark the two outer screw holes with a pencil. Drill the holes and insert the anchors (C).
5. Attach the mounting plate (A) to the junction box with the two mounting screws (J), and to the anchors with the two strengthened screws (D), using a Phillips screwdriver.
6. Gently pull the wires down from the junction box and let them hang.
7. Connect the fixture ground wire (bare) to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. If there is no ground wire in the box, attach the fixture ground wire to the green ground screw on the mounting plate (A).
8. Connect the white (neutral) fixture wire to the white junction box wire with a wire connector (K) and wrap with electrical tape.
9. Connect the black (hot) fixture wire to the black junction box wire with a wire connector (K) and wrap with electrical tape. Make sure no wire strands are exposed.

**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**

10. Gently tuck all connections into the junction box.
11. Attach the back plate (B) to the mounting plate (A) with the hex screw (E) and tighten with the Allen wrench (S).
12. Restore power at the breaker and test the fixture.

**NOTE:**

The alabaster shade pivots. Handle it gently when adjusting.

**DIMMING:**

Compatible with TRIAC dimmers. Recommended: Lutron DVLC-153P or Lutron DVELV-300P.

**CARE INSTRUCTIONS:**

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

**Customer service: 1-800-338-2150**