ASSEMBLY INSTRUCTIONS

ARTERIORS

ITEM DESCRIPTION:

ITEM NO.: DWC108

NAME: Evren Wall Sconce

MATERIAL TYPE: Iron / Faux Stone / Crystal


FINISH: New Bronze / White


SOCKET TYPE: Integrated LED


SOCKET QTY: 2

VOLTAGE: 110V-120V

ITEM NET WEIGHT: 21.34 LBS

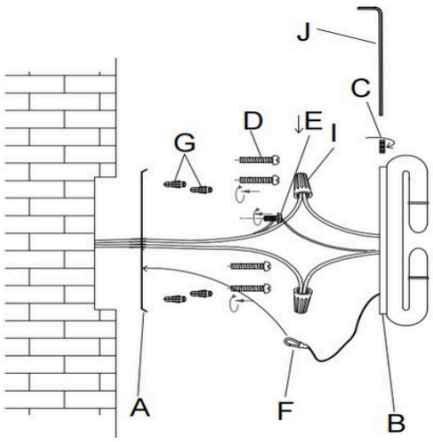

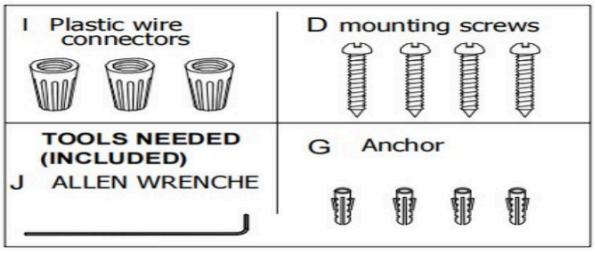

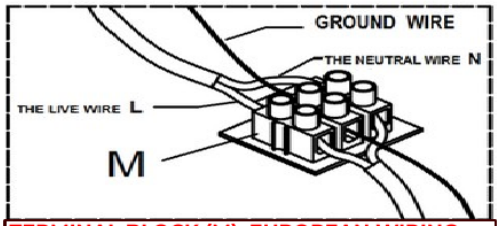

TERMINAL BLOCK (M): EUROPEAN WIRING ONLY. DO NOT USE.

PARTS INCLUDED:

MOUNTING PLATE (A)	1	BACK PLATE (B)	1
PLATE SCREW (C)	1	MOUNTING SCREW (D)	4
GROUND SCREW (E)	1	SAFETY CABLE (F)	
Qty: 1 (attached)			

HARDWARE INCLUDED:

ANCHOR (G)	4	WIRE CONNECTOR (I)	3

TO INSTALL YOU WILL NEED:

- ALLEN WRENCH (J) Qty: 1



TO ASSEMBLE:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT THE MAIN FUSE BOX OR CIRCUIT BREAKER.
2. REMOVE THE MOUNTING PLATE (A) FROM THE BACK PLATE (B) BY LOOSENING THE PLATE SCREW (C).
3. PULL THE ELECTRICAL WIRES FROM THE JUNCTION BOX THROUGH THE CENTER HOLE OF THE MOUNTING PLATE (A).
4. ATTACH THE MOUNTING PLATE (A) TO THE JUNCTION BOX OR WALL USING THE MOUNTING SCREWS (D) AND ANCHORS (G) WHERE NEEDED. TIGHTEN WITH A PHILLIPS SCREWDRIVER (NOT INCLUDED). HOOK THE SAFETY CABLE (F) ONTO THE MOUNTING PLATE (A).
5. CONNECT THE FIXTURE GROUND WIRE TO THE JUNCTION BOX GROUND WIRE (USUALLY GREEN OR BARE). FASTEN THEM TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. IF THE JUNCTION BOX DOES NOT HAVE A GROUND WIRE, INSERT THE GREEN GROUND SCREW (E) INTO THE MOUNTING PLATE (A) AND WRAP THE FIXTURE'S BARE GROUND WIRE AROUND IT. THE JUNCTION BOX MUST BE PROPERLY GROUNDED.
6. CONNECT THE NEUTRAL FIXTURE WIRE TO THE NEUTRAL JUNCTION BOX WIRE (USUALLY WHITE). FASTEN THEM TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED.
7. CONNECT THE HOT FIXTURE WIRE TO THE HOT JUNCTION BOX WIRE (USUALLY BLACK). FASTEN THEM TOGETHER WITH A PLASTIC WIRE CONNECTOR (I) AND WRAP THE CONNECTION WITH ELECTRICAL TAPE. BE SURE NO WIRE STRANDS ARE EXPOSED. GENTLY TUCK ALL CONNECTIONS INTO THE JUNCTION BOX.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

8. ATTACH THE BACK PLATE (B) TO THE MOUNTING PLATE (A) WITH THE PLATE SCREW (C). TIGHTEN WITH THE ALLEN WRENCH (J).
9. RESTORE POWER AT THE BREAKER AND TEST THE FIXTURE.

NOTE: THE TERMINAL BLOCK (M) INSIDE THE FIXTURE IS FOR EUROPEAN-MARKET WIRING ONLY. DO NOT CONNECT ANY WIRES TO IT.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150



WARNING

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE

DO NOT APPLY POWER AT THE BREAKER OR SWITCH
UNTIL THE FIXTURE IS FULLY INSTALLED.
FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT
IN MALFUNCTION AND WILL VOID THE WARRANTY.