

ASSEMBLY INSTRUCTIONS

ARTERIORS

ITEM DESCRIPTION:

ITEM NO.: DSC18	**NAME:** Lucent Chandelier
MATERIAL TYPE: IRON, GLASS	**FINISH:** MODERN BRASS, CLEAR SEEDY
SOCKET TYPE: Integrated LED	**SOCKET QTY:** 6
BULB WATTAGE: 18W /2700K/90+CRI	**VOLTAGE:** 100V-130V
ITEM NET WEIGHT: 23.58 LBS	

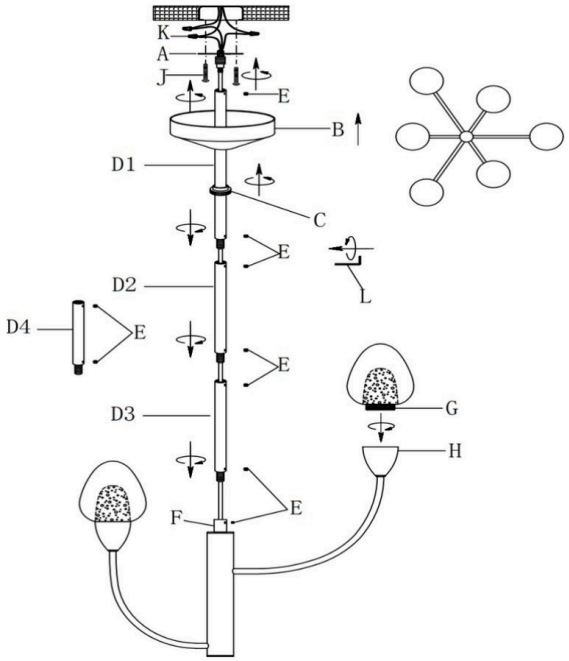

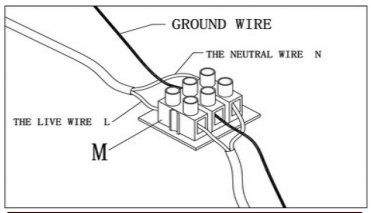

TERMINAL BLOCK: EUROPEAN WIRING ONLY. DO NOT USE.

PARTS INCLUDED:

Mounting Plate (A)	1	Hex Screw (E)	9
Canopy (B)	1	Lamp Assembly (F)	1
Collar Loop (C)	1	Glass Shade (G)	6
Rod (D)	4	Socket (H)	6

HARDWARE INCLUDED:

Mounting Screw (J)	2	Canopy Screw	
Plastic Wire Connector (K)	3	Allen Wrench (L)	1
Green Ground Screw	1		

TO INSTALL YOU WILL NEED:

• 2 people recommended • Phillips screwdriver • Allen wrench (included)



TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Gently pull the wires down from the junction box and let them hang.
4. Remove the mounting plate (A) from the canopy (B) by unscrewing the collar loop (C).
5. Connect the lamp assembly (F) to the canopy (B) with rods D1-D4. Loosen the small hex screws (E) first, then tighten them with the Allen wrench (L) once all rods are connected. Check that all hex screws are tight.
6. Carefully turn each glass shade (G) clockwise onto its socket (H) until snug.
7. The terminal block in the canopy is for European wiring only. Do not connect any wires to it.
8. Connect the fixture ground wire (bare) to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. If there is no ground wire in the box, attach the fixture ground wire to the green ground screw on the mounting plate (A).
9. Connect the white (neutral) fixture wire to the white junction box wire with a wire connector (K) and wrap with electrical tape.
10. Connect the black (hot) fixture wire to the black junction box wire with a wire connector (K) and wrap with electrical tape. Make sure no wire strands are exposed.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

11. Gently tuck all connections into the junction box.
12. Place the mounting plate (A) over the junction box, align the holes and attach it with the two mounting screws (J), using a Phillips screwdriver.
13. Slide the canopy (B) up over the mounting plate (A) until it is flush with the ceiling. Push the collar loop (C) through the canopy, thread it onto the nipple of the mounting plate and turn clockwise until the canopy is secure.
14. Restore power at the breaker and test the fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150



WARNING

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE

DO NOT APPLY POWER AT THE BREAKER OR SWITCH
UNTIL THE FIXTURE IS FULLY INSTALLED.
FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT
IN MALFUNCTION AND WILL VOID THE WARRANTY.