# ASSEMBLY INSTRUCTIONS

ARTERIORS

**ITEM DESCRIPTION:**

| | |
|---|---|
| **ITEM NO.:** DMPJAV-R-1L-EB | **NAME:** Javier 1-Light Pendant |
| **MATERIAL TYPE:** IRON | **FINISH:** ESSENTIAL EBN |
| **SOCKET TYPE:** E12 Ceramic | **SOCKET QTY:** 1 |
| **VOLTAGE:** 100V-120V | |



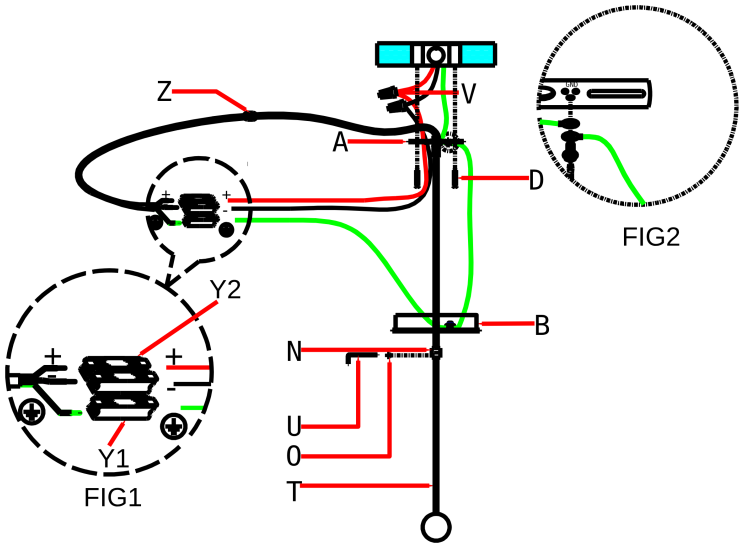


FIG1


FIG2

**PARTS INCLUDED:**

| | | | |
|---|---|---|---|
| Mounting Plate (A) | 1 | Cord Port (N) | 1 |
| Canopy (B) | 1 | Double Row Lever Connector (Y2) | 1 |
| Cord (T) | 1 | Single Row Lever Connector (Y1) | 1 |
| Plastic Clasp (Z) | 1 | Set Screw (O) | 1 |

**HARDWARE INCLUDED:**

| | | | |
|---|---|---|---|
| Mounting Screw (D) | 2 | Wire Connector (V) | 3 |
| Tool: Allen Wrench (U) | 1 | | |

**TO INSTALL YOU WILL NEED:**

• 2 people recommended • Phillips screwdriver

**TO ASSEMBLE:**

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Take the drop out of its separate box and remove the nut, washer and threaded pipe from the drop.
4. Pass the cord (T) through the canopy (B) and the mounting plate (A). Adjust it to the desired length by loosening the set screw (O), then secure it with the plastic clasp (Z).
5. Align the holes in the mounting plate (A) with the junction box holes and attach it with the two mounting screws (D), using a Phillips screwdriver.
6. Connect the drop's live and neutral wires to the canopy pre-wires with a double-row lever connector (Y2), then connect the ground wires with a single-row lever connector (Y1), as shown in Fig. 1.
7. Connect the canopy's main live wire (black) and main neutral wire (white) to the junction box wires with wire connectors (V).

**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**

8. Connect the ground wires from the junction box and the canopy to the pre-mounted green ground screw on the mounting plate (A), as shown in Fig. 2.
9. Attach the canopy (B) to the mounting plate (A) with the cord port (N), and tighten the set screw (O) with the Allen wrench (U).
10. For drop assembly, see the separate instructions included in the drop box.
11. Restore power at the breaker and test the fixture.

**CARE INSTRUCTIONS:**

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

**Customer service: 1-800-338-2150**

## DMPJAV-R-1L-EB – ENLARGED VIEW

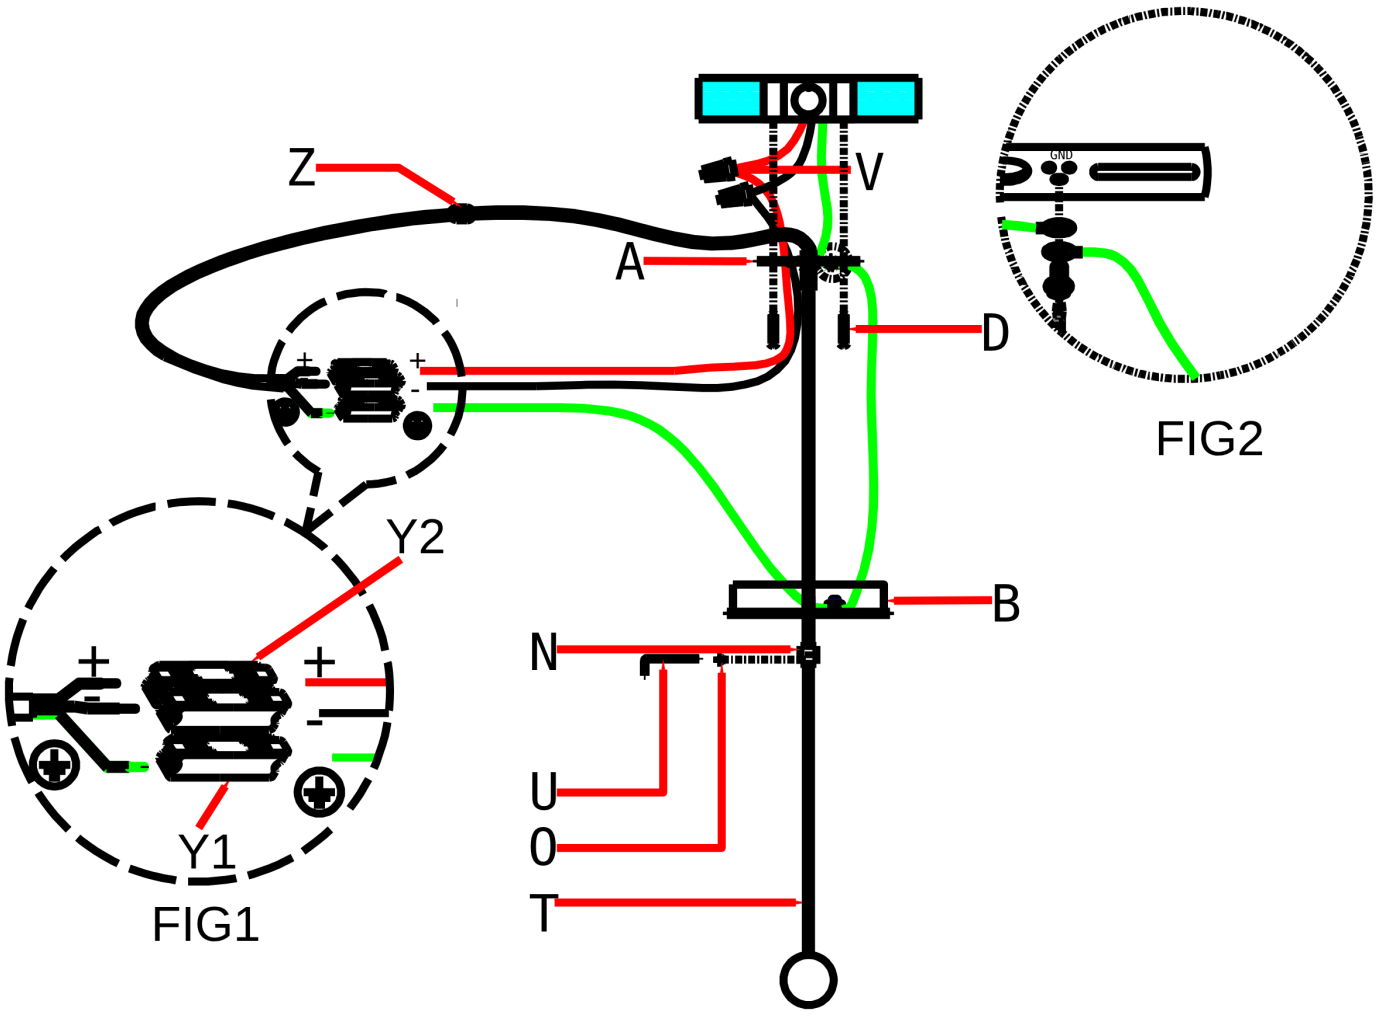



FIG1

FIG2