ASSEMBLY INSTRUCTIONS

ARTERIORS

ITEM DESCRIPTION:

ITEM NO.: DWC106

NAME: Plica Wall Sconce

MATERIAL TYPE: IRON

FINISH: CHATTERED ANTIQUE BRASS


SOCKET TYPE: Integrated LED

SOCKET QTY: 1


BULB WATTAGE: 18W


VOLTAGE: 100V-120V

ITEM NET WEIGHT: 20 LBS

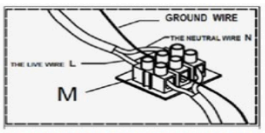

PLEASE IGNORE THIS DEVICE ON THE BACK PLATE.

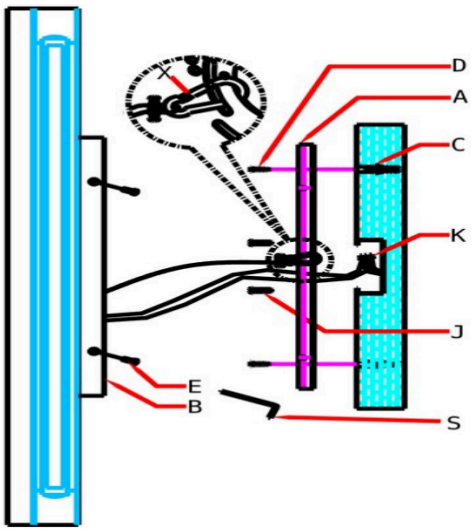

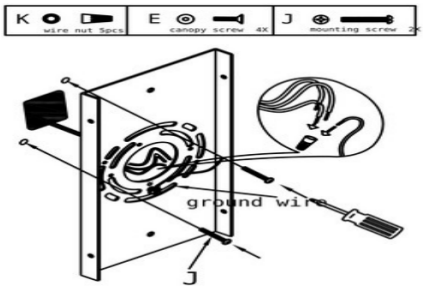

PARTS INCLUDED:

Mounting Plate (A)	1	Back Plate (B)	1
Anchor (C)	2	Mounting Screw (J)	2
Strengthened Screw (D)	2	Canopy Screw (E)	4
Safety Cable Hook (X)	1		

HARDWARE INCLUDED:

Green Ground Screw	1	Wire Cap (K)	3
Allen Wrench (S)	1		

TO INSTALL YOU WILL NEED:

- Phillips Screwdriver



TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Remove the mounting plate (A) from the back plate (B) by unscrewing the four canopy screws (E) with the Allen wrench (S).
4. Hold the mounting plate (A) in position on the wall and mark the two outer screw holes with a pencil. Drill the holes and insert the anchors (C).
5. Attach the mounting plate (A) to the junction box with the two mounting screws (J), and to the anchors with the two strengthened screws (D), using a Phillips screwdriver.
6. Hook the safety cable hook (X) onto the mounting plate (A).
7. Gently pull the wires down from the junction box and let them hang.
8. Connect the fixture ground wire (bare) to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. If there is no ground wire in the box, attach the fixture ground wire to the green ground screw on the mounting plate (A).
9. Connect the white (neutral) fixture wire to the white junction box wire with a wire connector (K) and wrap with electrical tape.
10. Connect the black (hot) fixture wire to the black junction box wire with a wire connector (K) and wrap with electrical tape. Make sure no wire strands are exposed.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

11. The 3-wire terminal block (M) is for European wiring only. Do not connect any wires to it.
12. Gently tuck all connections into the junction box.
13. Attach the back plate (B) to the mounting plate (A) with the four canopy screws (E) and tighten with the Allen wrench (S).
14. Restore power at the breaker and test the fixture.

DIMMING:

Compatible with TRIAC dimmers. Recommended: Lutron DVLC-153P or Lutron DVELV-300P.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150