
# ASSEMBLY INSTRUCTIONS


ARTERIORS

## ITEM DESCRIPTION:

| | |
|---|---|
| **ITEM NO.:** DPC44 | **NAME:** Raphael Pendant |
| **MATERIAL TYPE:** IRON, GLASS | **FINISH:** EBN, SMOKE |
| **SOCKET TYPE:** Integrated LED | **SOCKET QTY:** 1 |
| **BULB WATTAGE:** LED 28W | **VOLTAGE:** 100V-120V |
| **ITEM NET WEIGHT:** 20.2 LBS | |



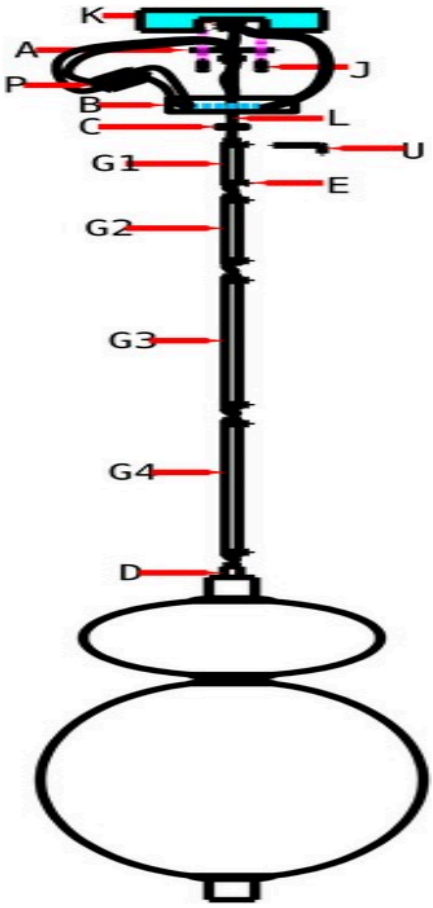


## PARTS INCLUDED:

| | | | |
|---|---|---|---|
| Mounting Plate (A) | 1 | Cord (L) | 1 |
| Canopy (B) | 1 | 2-Wire Terminal (P) | 1 |
| Collar (C) | 1 | Main Body (D) | 1 |
| Hexangular Screw (E) | 8 | Rods (G1-G4) | 4 |

## HARDWARE INCLUDED:

| | | | |
|---|---|---|---|
| Mounting Screw (J) | 2 | Allen Wrench (U) | 1 |
| Plastic Wire Connector (K) | 3 | Green Ground Screw | 1 |

## TO INSTALL YOU WILL NEED:

· 2 people recommended · Phillips screwdriver · Allen wrench

## TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Gently pull the wires down from the junction box and let them hang.
4. Remove the mounting plate (A) from the canopy (B) by unscrewing the collar (C).
5. Thread the cord (L) through rods G4, G3, G2 and G1. Screw rod G4 into the main body (D), then screw G3 onto G4, G2 onto G3 and G1 onto G2. Loosen the small hex screws (E) on the side of each joint first, then tighten them with the Allen wrench (U) once all rods are connected.
6. Driver input wires: white = neutral (labeled N), black = hot (labeled L). Connect the white wire to the white junction box wire and the black wire to the black junction box wire, each with a wire connector (K), and wrap with electrical tape.
7. Connect the fixture ground wire to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. The junction box must be properly grounded.
8. The driver output wires (black = negative, red = positive) are already connected to the fixture through the 2-wire terminal (P). Do not disconnect them, and do not mix up the driver input and output wires.

**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**

9. The 3-wire terminal block (M) is for European wiring only. Do not connect any wires to it.
10. Gently tuck all connections into the junction box.
11. Place the mounting plate (A) over the junction box, align the holes and attach it with the two mounting screws (J), using a Phillips screwdriver.
12. Slide the canopy (B) up over the mounting plate (A) until it is flush with the ceiling. Push the collar (C) through the canopy, thread it onto the nipple of the mounting plate and turn clockwise until the canopy is secure.
13. Screw rod G1 into the canopy (B) and tighten the hex screw with the Allen wrench (U). Check that all hex screws are tight.
14. Restore power at the breaker and test the fixture.

**DIMMING:**

Compatible with TRIAC dimmers. Recommended: Lutron DVLC-153P or Lutron DVELV-300P.

**CARE INSTRUCTIONS:**

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

**Customer service: 1-800-338-2150**