ASSEMBLY INSTRUCTIONS

ARTERIORS

ITEM DESCRIPTION:

ITEM NO.: DMPJAV-L-3L-MB

NAME: Javier 3-Light Linear Multi-Port Chandelier


MATERIAL TYPE: IRON


FINISH: MODERN BRASS

SOCKET TYPE: E12 Ceramic

SOCKET QTY: 3

VOLTAGE: 100V-120V

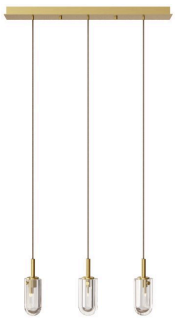

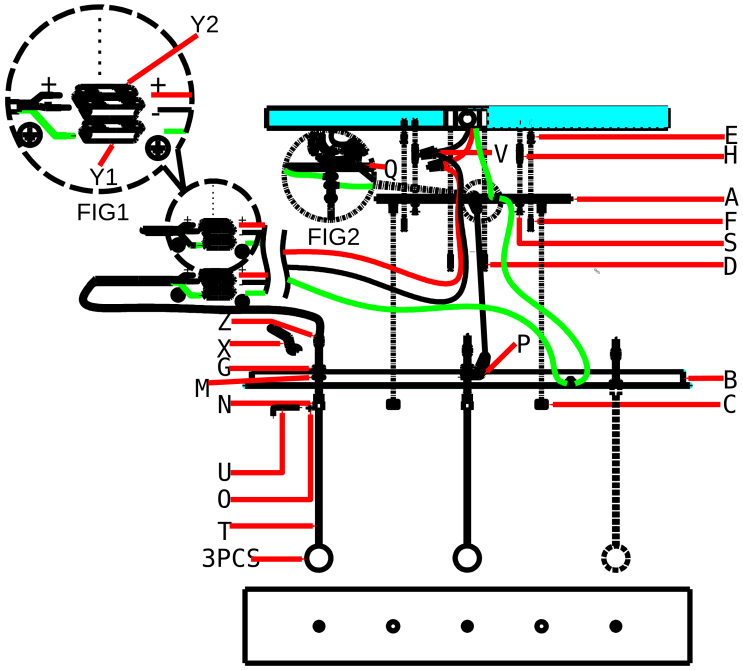

PARTS INCLUDED:

Mounting Plate (A)	1	Cord Port (N)	3
Canopy (B)	1	Double Row Lever Connector (Y2)	3
Mounting Cap (C)	2	Single Row Lever Connector (Y1)	3
Nut (G)	3	Plastic Clasp (Z)	3
Washer (M)	3		

HARDWARE INCLUDED:

Mounting Screw (D)	2	Strengthened Screw (F)	4
Plastic Anchor (E)	4	Expansion Screw (H)	4
Wire Connector (V)	3	Tool: Wrench (X)	1
Tool: Allen Wrench (U)	1		

TO INSTALL YOU WILL NEED:

• 2 people recommended • Phillips screwdriver

TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Remove the mounting plate (A) from the canopy (B) by loosening the mounting caps (C).
4. Position the fixture where you want it on the ceiling. Mark the screw holes of the mounting plate (A) on the ceiling, drill holes at the marks and insert the plastic anchors (E) and expansion screws (H).
5. Align the holes in the mounting plate (A) with the junction box and secure the plate with the mounting screws (D), strengthened screws (F) and expansion screw nuts.
6. Pull the junction box wires through the exit hole of the mounting plate (A) and inspect the fixture wires.
7. Loosen the nut (G) and washer (M) on the canopy.
8. Take a drop out of its separate box. Attach its cord port (N) to the canopy with the nut (G) and washer (M), then tighten the cord port (N) with the wrench (X).
9. Adjust the cord to the desired length by loosening the set screw (O), then tighten it with the Allen wrench (U). Secure the cord with a plastic clasp (Z).
10. Repeat steps 8–9 for the remaining drops.
11. Connect each drop's live and neutral wires to the canopy pre-wires with a double-row lever connector (Y2), then connect the ground wires with a single-row lever connector (Y1), as shown in Fig. 1.
12. Connect the canopy's main live wire (black) and main neutral wire (white) to the junction box wires with wire connectors (V).

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

13. Connect the ground wires from the junction box and the canopy to the pre-mounted green ground screw on the mounting plate (A), as shown in Fig. 2.
14. Hook the safety cable (Q) onto the mounting plate (A), if provided.
15. Attach the canopy (B) to the mounting plate (A) with the mounting caps (C) and tighten securely.
16. For drop assembly, see the separate instructions included in the drop box.
17. Restore power at the breaker and test the fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150

DMPJAV-L-3L-MB – ENLARGED VIEW

