ASSEMBLY INSTRUCTIONS

ARTERIORS

ITEM DESCRIPTION:

ITEM NO.: DMC39

NAME: Verity Chandelier

MATERIAL TYPE: IRON, GLASS

FINISH: CHAMPAGNE BRASS, SMOKE

SOCKET TYPE: E12


SOCKET QTY: 6

BULB WATTAGE: TYPE G 60W

VOLTAGE: 100V-120V

ITEM NET WEIGHT: 96.8 LBS



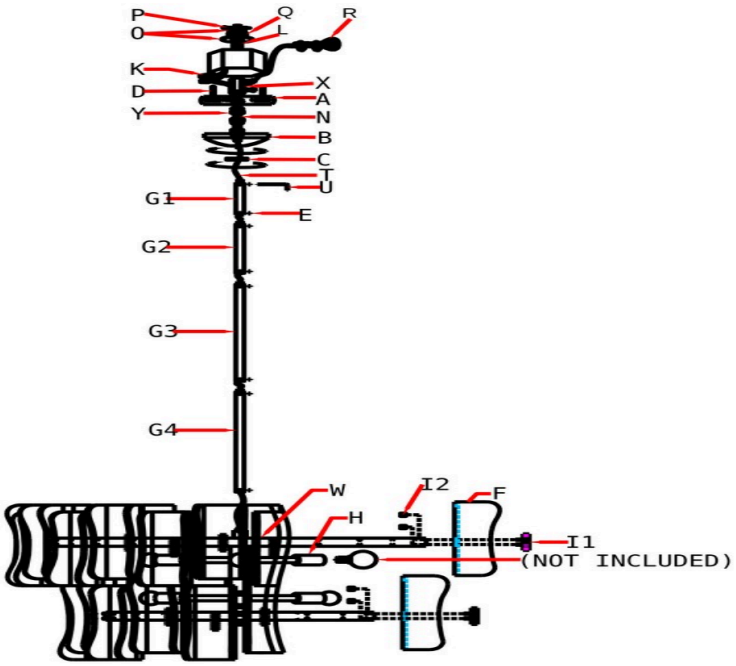

PARTS INCLUDED:

Mounting Plate (A)	1	Cord (T)	1
Canopy (B)	1	Socket (H)	6
Collar (C)	1	Coupling (X)	1
Main Body (W)	1	Nut (Q, Y)	1
Hexangular Screw (E)	8	Washer (O)	3
Rods (G1-G4)	4	Fuse Pin (P)	1
Pre-Threaded Pipe (L)	1	Small Pre-Threaded Pipe (N)	1
Thumb Screw (I1)	42	Safety Cable (R)	1
Screw Nut (I2)	84	Glass Shade (F)	42

HARDWARE INCLUDED:

Mounting Screw (D)	2	Allen Wrench (U)	1
Plastic Wire Connector (K)	3	Green Ground Screw	1

TO INSTALL YOU WILL NEED:

· 2 people recommended · Phillips screwdriver · Allen wrench

TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. This fixture weighs more than 50 lbs and must be supported independently of the junction box. Position the pre-threaded pipe (L) so it extends 3/4" into the junction box.
4. Thread the coupling (X) onto the end of the pipe (L) inside the box and secure it with the nut (Q), washer (O) and fuse pin (P). Tighten all parts fully.
5. Attach the mounting plate (A) to the junction box with the two mounting screws (D).
6. Screw the short end of the small pre-threaded pipe (N) through the mounting plate (A) into the coupling (X), turning clockwise, then tighten it with the nut (Y).
7. Install the safety cable (R) as shown on the Safety Cable Installation page.
8. Remove the canopy (B) from the mounting plate (A) by unscrewing the collar (C).
9. Thread the cord (T) through rods G4, G3, G2 and G1. Screw rod G4 into the main body (W), then screw G3 onto G4, G2 onto G3 and G1 onto G2. Loosen the small hex screws (E) on the side of each joint first, then tighten them with the Allen wrench (U) once all rods are connected.
10. Gently pull the wires down from the junction box and let them hang.
11. Connect the fixture ground wire (bare) to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. If there is no ground wire in the box, attach the fixture ground wire to the green ground screw on the mounting plate (A).
12. Connect the white (neutral) fixture wire to the white junction box wire with a wire connector (K) and wrap with electrical tape.
13. Connect the black (hot) fixture wire to the black junction box wire with a wire connector (K) and wrap with electrical tape. Make sure no wire strands are exposed.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

14. Gently tuck all connections into the junction box.
15. Slide the canopy (B) up until it is flush with the ceiling. Push the collar (C) through the canopy and turn it clockwise until the canopy is secure.
16. Screw rod G1 into the canopy (B) and tighten the hex screw with the Allen wrench (U). Check that all hex screws are tight.
17. Insert six Type G 60W bulbs (or 12W CFL / 10W LED, not included) into the sockets (H). Do not exceed the maximum wattage.
18. Hold a glass shade (F) against the frame, align the holes and pass a thumb screw (I1) through, then secure it with two screw nuts (I2). Repeat for all 42 shades.
19. Restore power at the breaker and test the fixture.

HEAVY FIXTURE (OVER 50 LBS):

Per NEC 314.27, a fixture over 50 lbs must be supported independently of the outlet box, unless the box is listed and marked by its manufacturer for a weight equal to or greater than the fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150

SAFETY CABLE INSTALLATION

This fixture is provided with a safety cable. The safety cable is a backup support for the fixture's frame and installation hardware, so it is essential that it is installed properly. The cable must be secured to a structural member of the building, not to the outlet box. The cable must be terminated with clamps specifically sized for the cable. If U-clamps are used, they must be oriented as shown in the drawing below. If the cable has a plastic covering, remove it from the area where the clamps are mounted. Make sure all hardware is properly tightened and the cable is clear of any obstructions.

CORRECT APPLICATION

