
ASSEMBLY INSTRUCTIONS

ARTERIORS

ITEM DESCRIPTION:

ITEM NO.: DWC110	**NAME:** Suspensia Wall Sconce
MATERIAL TYPE: IRON, GLASS	**FINISH:** ANTIQUE BRASS, AMBER
SOCKET TYPE: Integrated LED	**SOCKET QTY:** 1
BULB WATTAGE: 8W/2700K/90+CRI	**VOLTAGE:** 100V-130V
ITEM NET WEIGHT: 7.52 LBS	

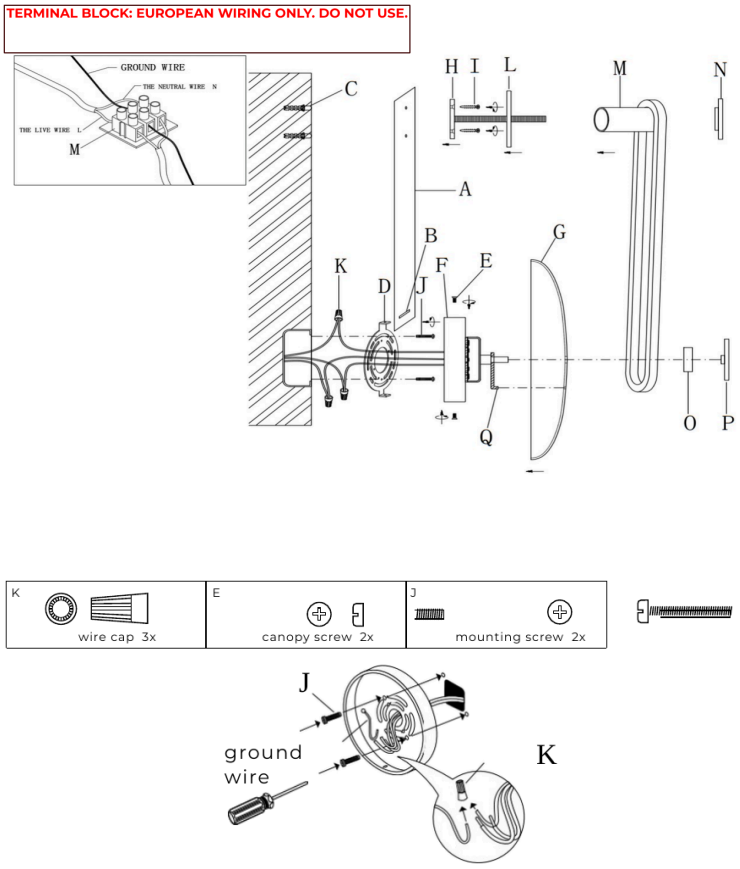

PARTS INCLUDED:

Mounting Plate (D)	1	Canopy Screw (E)	2
Lamp Base (F)	1	Glass Shade (G)	1
Mounting Plate (H)	1	Mounting Plate Cover (L)	1
O-Shaped Metal Ring (M)	1	Top Finial (N)	1
Glass Cap (O)	1	Bottom Finial (P)	1
L-Shaped Pin (Q)	1		

HARDWARE INCLUDED:

Plastic Anchor (C)	2	Strengthened Screw (I)	2
Mounting Screw (J)	2	Plastic Wire Cap (K)	3
Paper Template (A)	1		

TO INSTALL YOU WILL NEED:

- Phillips Screwdriver



TO ASSEMBLE:

1. Shut off power at the main fuse box or circuit breaker.
2. Carefully unpack all parts and hardware and lay them on a soft surface.
3. Remove the mounting plate (D), glass cap (O) and bottom finial (P) from the lamp base (F).
4. Attach the mounting plate (D) to the junction box with the mounting screws (J).
5. Fit the notch (B) of the paper template (A) onto the tab of the mounting plate (D), extend it up the wall and mark the hole positions with a pencil.
6. Drill two holes at the marks and insert the plastic anchors (C). Attach the upper mounting plate (H) with the strengthened screws (I), then fit the mounting plate cover (L) over it.
7. Connect the fixture ground wire (bare) to the junction box ground wire (usually green or bare) with a wire connector (K) and wrap with electrical tape. If there is no ground wire in the box, attach the fixture ground wire to the green ground screw on the mounting plate (A).
8. Connect the white (neutral) fixture wire to the white junction box wire with a wire connector (K) and wrap with electrical tape.
9. Connect the black (hot) fixture wire to the black junction box wire with a wire connector (K) and wrap with electrical tape. Make sure no wire strands are exposed.

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

10. The terminal block in the lamp base is for European wiring only. Do not connect any wires to it.
11. Gently tuck all connections into the junction box.
12. Attach the lamp base (F) to the mounting plate (D) by inserting the canopy screws (E) through the pre-drilled holes. Tighten with a screwdriver.
13. Place the glass shade (G) on the lamp base (F) with the L-shaped pin (Q) at the top, passing through the small holes in the glass. Secure the glass with the glass cap (O).
14. Fit the O-shaped metal ring (M) between the upper mounting plate (H) and the glass cap (O), then secure it with the top finial (N) and bottom finial (P).
15. Restore power at the breaker and test the fixture.

CARE INSTRUCTIONS:

Wipe with a soft, dry cloth. To protect the finish, avoid chemicals and household cleaners.

These instructions are provided for your safety. Read them carefully and completely before beginning installation. We strongly recommend that all hard-wired fixtures be installed by a licensed electrician.

Customer service: 1-800-338-2150



WARNING

INSTALL BEFORE RESTORING POWER AT THE BREAKER

LOW VOLTAGE LED DRIVER INSIDE

DO NOT APPLY POWER AT THE BREAKER OR SWITCH
UNTIL THE FIXTURE IS FULLY INSTALLED.
FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT
IN MALFUNCTION AND WILL VOID THE WARRANTY.