


## Fixtures without Mounting Plates

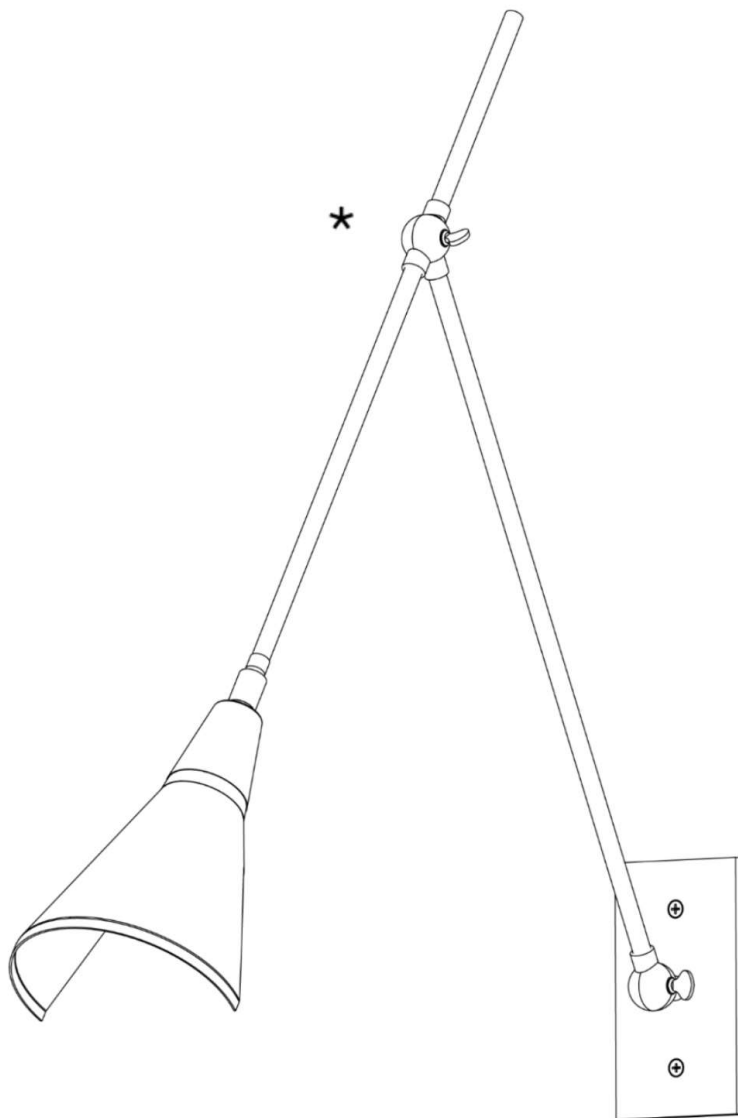

2x #8-32 screws



3x wire nuts



\* Please note that the Magari is used here as an example in order to illustrate how to install fixtures that don't include a mounting plate. This style of fixture is installed directly into a junction box. For a full list of such fixtures, please refer to the Installation Instructions page on our website.

1. Hold the fixture backplate close to the wall and connect the fixture ground wire to the wall ground wire.

2. Connect the +/- fixture wires to the +/- wall wires.

3. Mount the fixture backplate directly to the junction box using the x2 provided #8-32 screws.

*\* The backplate must be mounted to a junction box with a vertical hole spacing of 3.25" as shown.*

