


ASSEMBLY INSTRUCTION

5720xxx QUEEN BED


PART LIST

DO NOT FULLY TIGHTEN SCREWS AND NUTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED


A : 1 pc

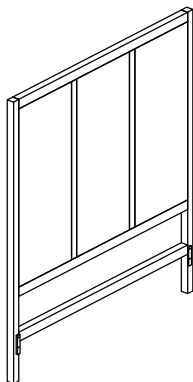


B : 1 pc

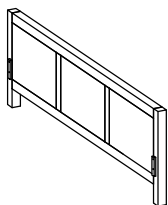

C : 2 pcs




D : 1 pc

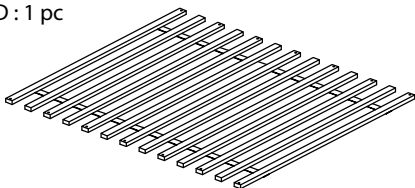


HARDWARE LIST

NO	QUANTITY	PICTURE	QTY
1	Bolt M8*25		8
2	Spanner		1
3	Wooden screw 4x40		14


STEP: 1

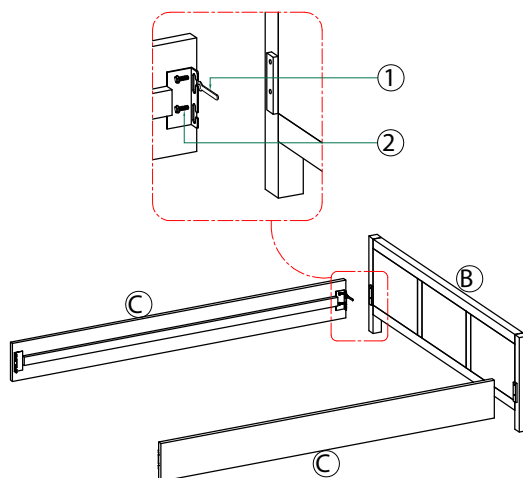

STEP: 2

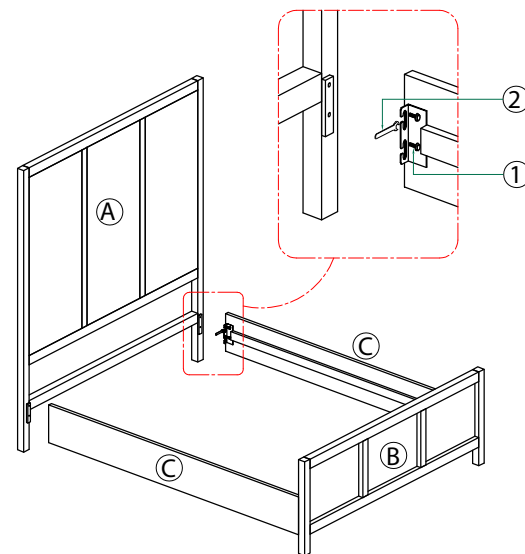

STEP: 3

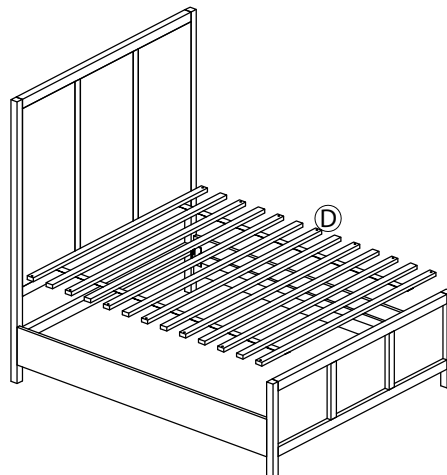

STEP: 4

