

Paolo Live Edge Bed

Assembly Instructions


TOOLS REQUIRED BUT NOT INCLUDED: N/A

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Assemble all parts on a clean smooth surface

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills do not rub, with a clean white cloth.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

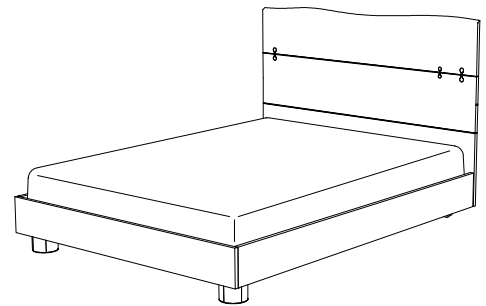


PARTS INCLUDED:

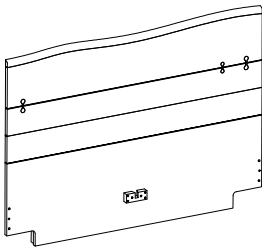


(A) Headboard x 1

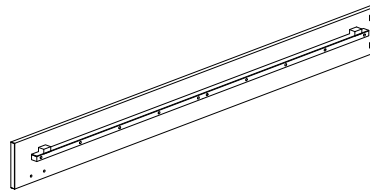


(B) Sides Rail x 2




(C) Supporting Rail x 1

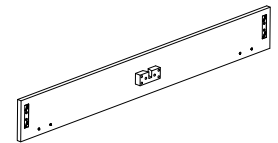


(D) Footboard x 1

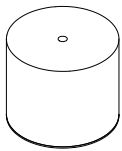

(E) Legs x 2



(F) Metal Base x 2

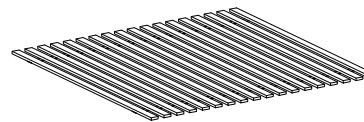


(G) Slat Rolls x 1 Set

HARDWARE INCLUDED:




(H) Plain Washers

[M8 x 8.4 x 19 x 1.6mm] x 6



(I) Bolts

[M8 x 25mm] x 2

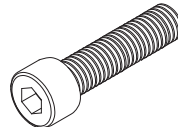

(K) Bolts

[M8 x 50mm] x 4



(L) Plain Washers

[M6 x 6.4 x 14 x 1.6mm] x 8




(M) Spring Washers

[M6 x 6.5 x 10 x 1.6mm] x 8




(N) Bolts

[M6 x 20mm] x 8



(O) Allen key M5

[M5] x 1




(J) Allen key M6

[M6] x 1




(P) Plain Washers

[M10 x 10.5 x 23 x 2mm] x 4



(Q) Bolts

[M10 x 20mm] x 4




(R) Wrench 17mm x 1

Paolo Live Edge Bed

Assembly Instructions



STEP 1

Attach the metal plate (F) to leg (E) using bolt M8x25 (I), washer Ø19 (H) and allen key (J)

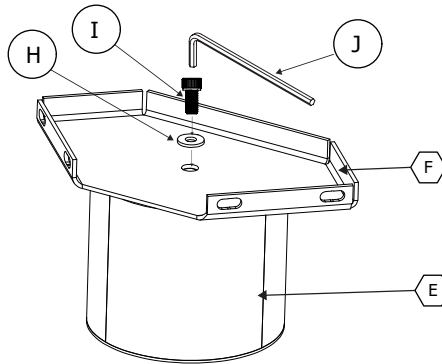



STEP 2

Attach the sides rail (B) to headboard (A) using bolts M8x50 (K), washers Ø19 (H) and allen key (J)

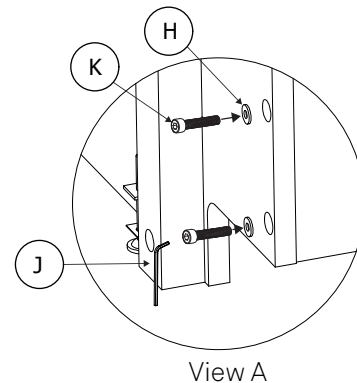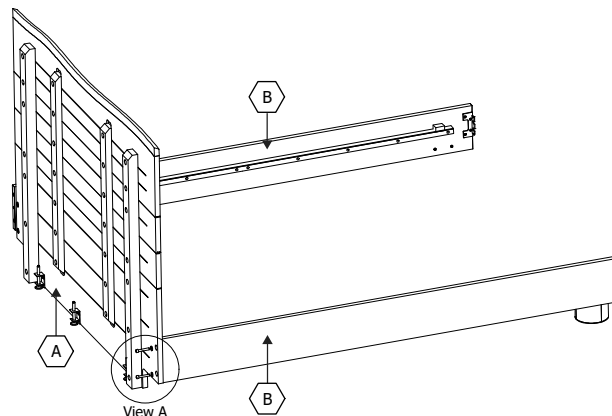

STEP 3

Continue, attach the legs (E,F) to sides (B) using bolts M6x20 (N), washers Ø14 (L), spring washer Ø10 (M) and allen key (O)

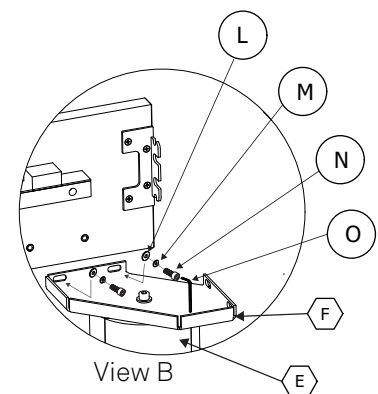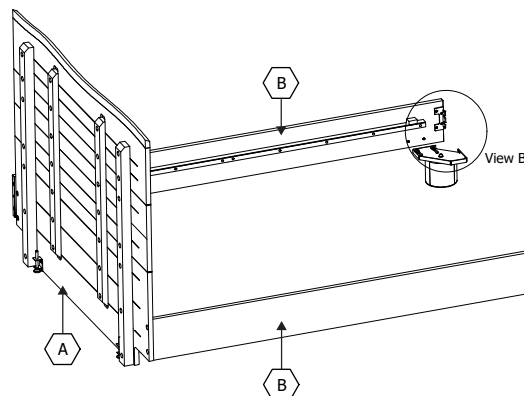

Paolo Live Edge Bed



Assembly Instructions

STEP 4

Attach the footboard (D) to the sides (B) using the bolts M10x20 (Q), washers Ø23 (P) and wrench 17mm (R)




Note: **Do not tighten** bolts and washers on this mounting part, make sure there is enough clearance to fit the thickness of the bracket

Then tighten all bolts. Repeat step 3 to attach legs to footboard

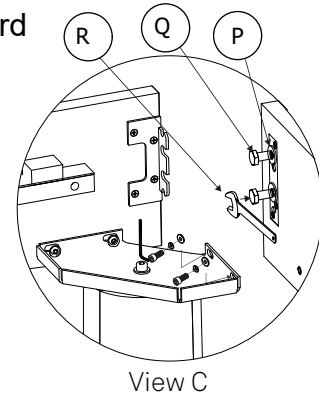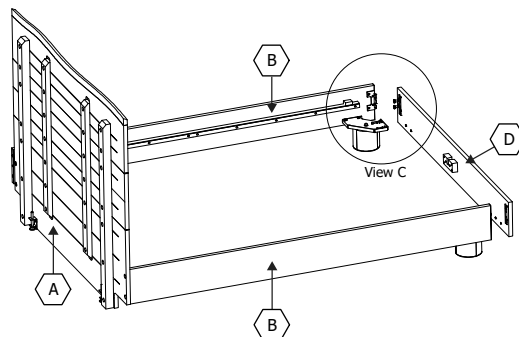

STEP 5

Adjust the adjustable feet of the support leg to touches the ground.

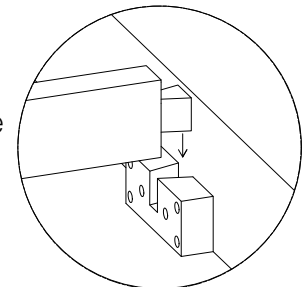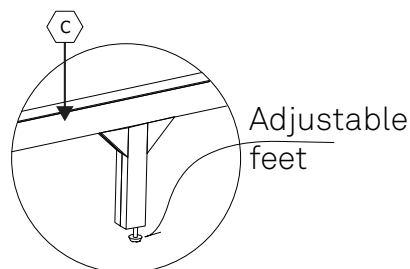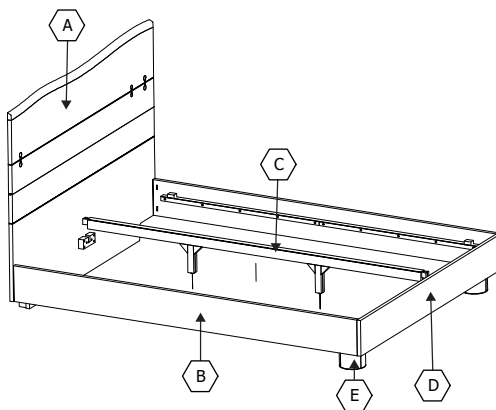

STEP 6

Attach the slat [G] on the bed and put the mattress on the bed. Assembly is completed.

