






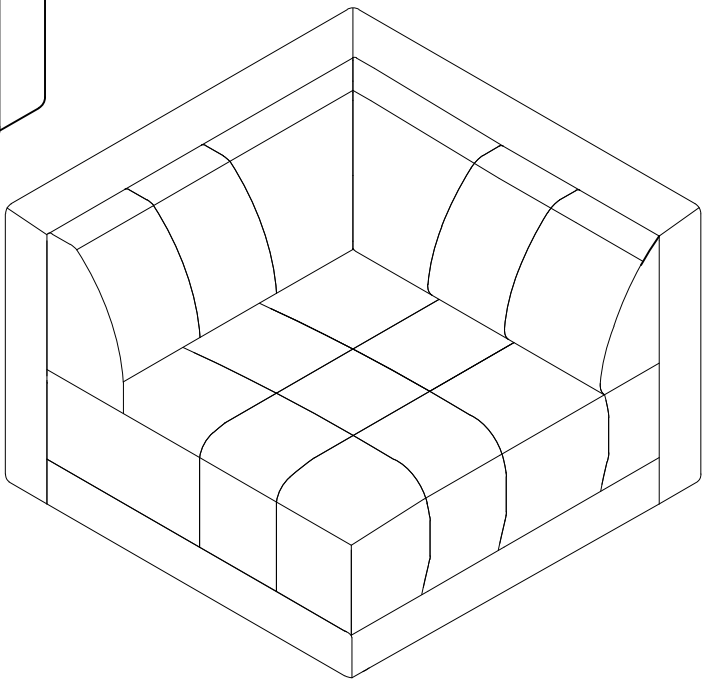
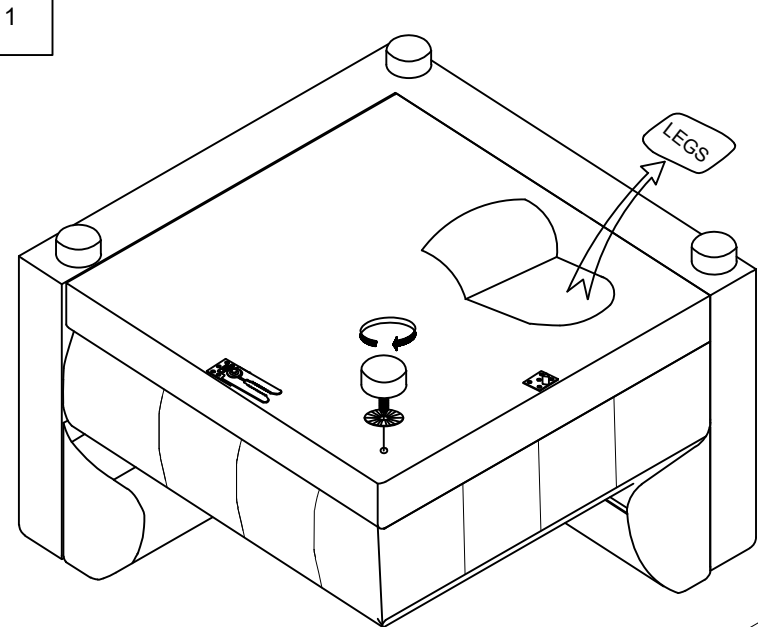
ASSEMBLY INSTRUCTIONS
SKU # 53006363

PARTS LIST

A	ADALYNNE CORNER X2	
B	ADALYNNE ARMLESS X3	
C	ADALYNNE OTTOMAN X1	
D	PLASTIC LEGS X24	
E	PLASTIC WASHERS X24	

Before Beginning

- 1 - Carefully unpack and position the item on a clean, non-marring surface to assemble.
- 2 - Read this Assembly Instructions from beginning to end before starting to assemble.
- 3 - Take an inventory of the required parts to ensure all are available.
- 4 - To prevent accidental choking hazards, keep all packing materials away from small children.
- 5 - Only tighten hardware until ALL hardware are fully engaged on their locations. Overtighten bolts will damage the bolt threads.
- 6 - Use only factory provided hardware to assemble. Unapproved hardware can damage product or jeopardize the structural integrity of the product.
- 7 - The use of power tool to assemble is not recommended due to high risk of over-torque, which can damage the product.



ASSEMBLY REQUIRES
TWO PEOPLE



15-MINUTE
ASSEMBLY TIME



KEEP INSTRUCTIONS
FOR FUTURE USE





Page 1 of 3



ASSEMBLY INSTRUCTIONS

Adalynne Upholstered 6pc Sectional

2

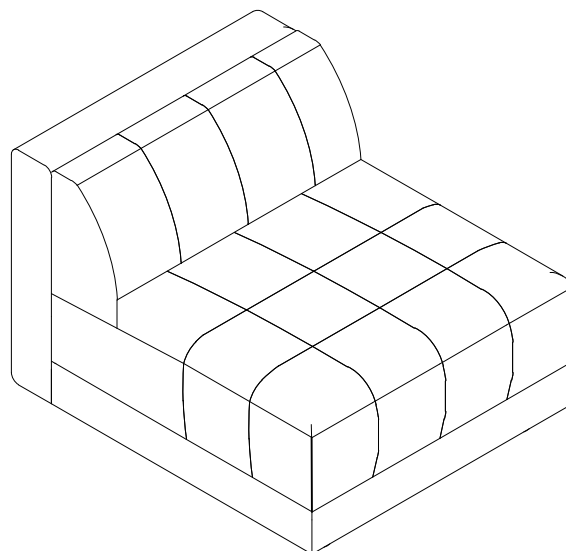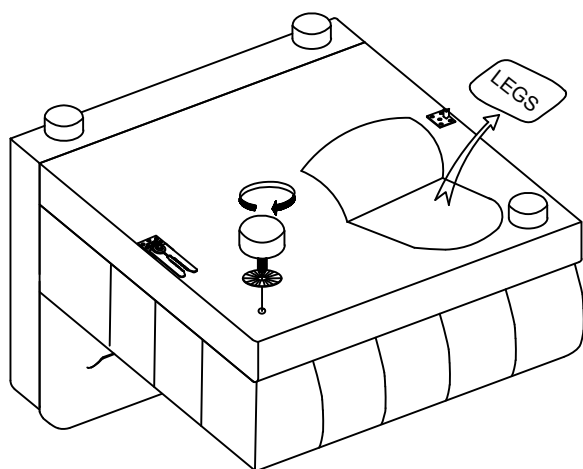

3

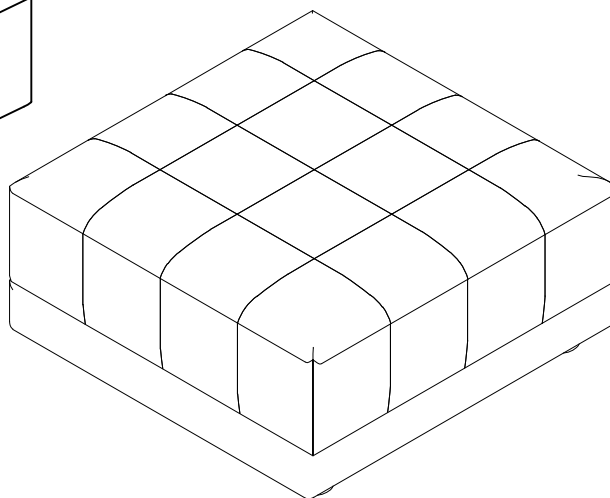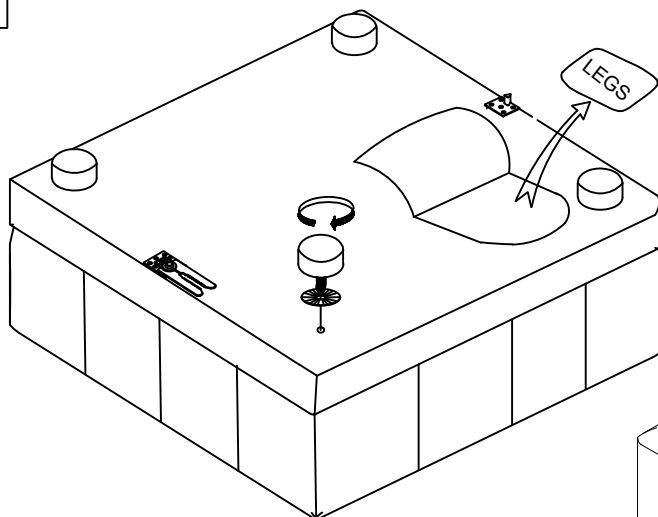

ASSEMBLY REQUIRES
TWO PEOPLE



15-MINUTE
ASSEMBLY TIME



KEEP INSTRUCTIONS
FOR FUTURE USE




Page 2 of 3

MADE IN VIETNAM


ASSEMBLY INSTRUCTIONS

Adalynne Upholstered 6pc Sectional

4

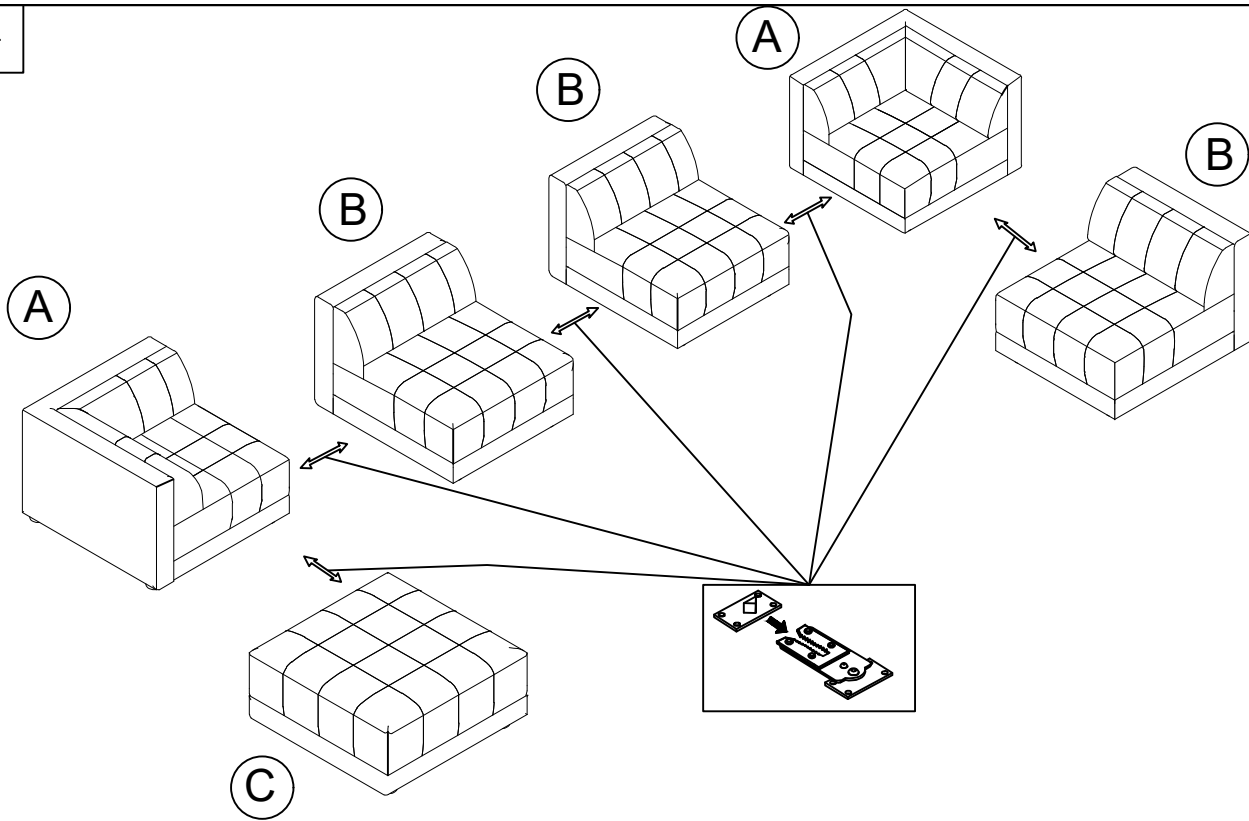

5

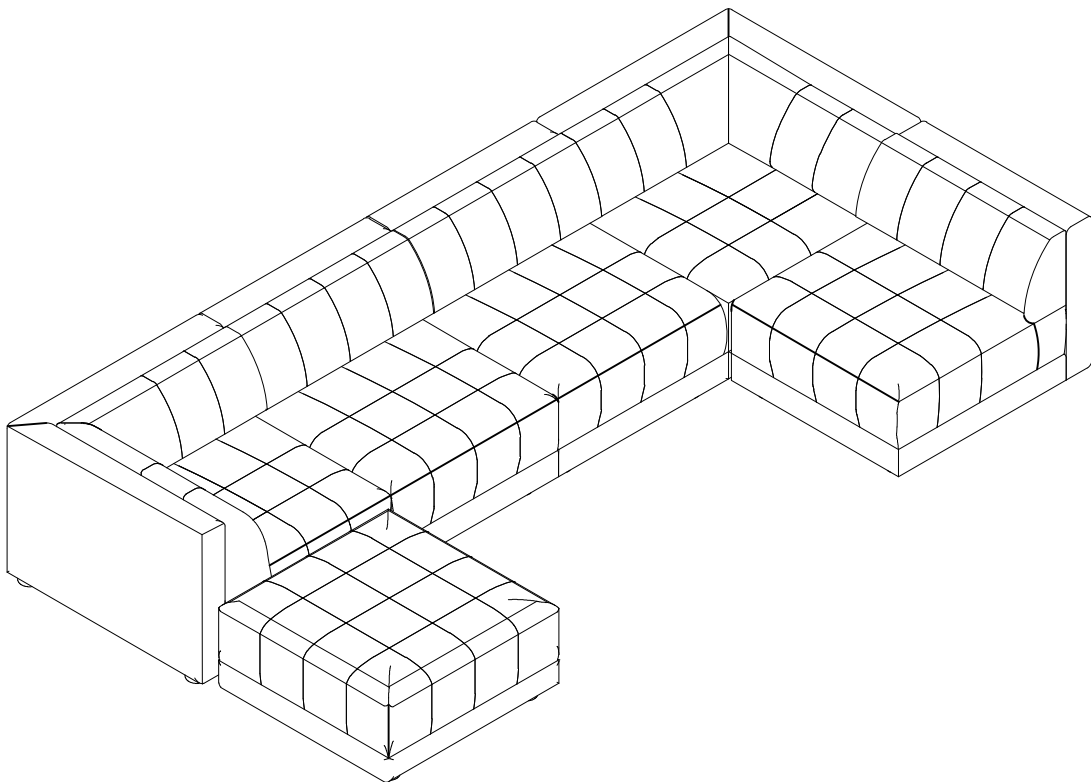


ASSEMBLY REQUIRES
TWO PEOPLE



15-MINUTE
ASSEMBLY TIME



KEEP INSTRUCTIONS
FOR FUTURE USE



Page 3 of 3

MADE IN VIETNAM